

GM 2000 Lane Controllers

Operation Manual



Frymaster, a member of the Commercial Food Equipment Service Association, recommends using CFESA Certified Technicians.

www.frymaster.com

24-Hour Service Hotline
1-800-551-8633

MARCH 12
*** 8196945A ***

NOTICE TO OWNERS OF UNITS EQUIPPED WITH CONTROLLERS

U.S.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation. While this device is a verified Class A device, it has been shown to meet the Class B limits.

CANADA

This digital apparatus does not exceed the Class A or B limits for radio noise emissions as set out by the ICES-003 standard of the Canadian Department of Communications.

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites de classe A et B prescrites dans la norme NMB-003 édictée par le Ministre des Communications du Canada.




GM2000 Lane Controller

Table of Contents

1.1	Overview-Multi-Product Mode	1-1
1.2	Overview-Dedicated Mode	1-2
2.1	Programming New Menu Items in Multi-Product Mode	2-1
2.2	Assigning Products to Menu Keys	2-2
2.3	Changing Menu Items In Dedicated Mode	2-2
2.4	Default Menu	2-3
3.1	Controller Setup	3-1
3.2	Controller Codes	3-1
4.1	Error Messages and Display Problems	4-1

1.1 Overview – Multi-Product Mode (5050)

Overview – Multi-Product Mode (5050)

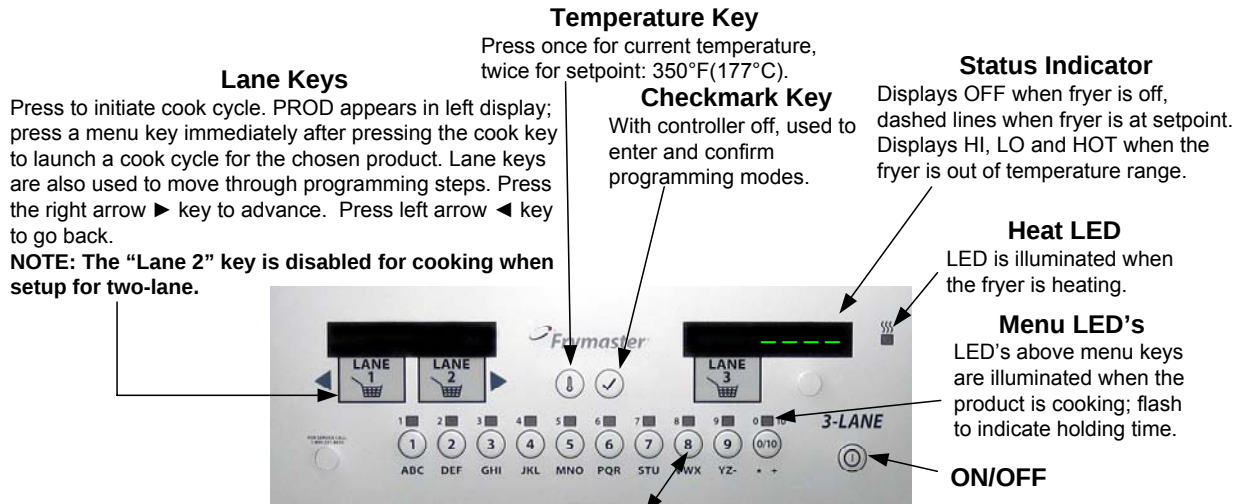

Menu Keys
Press a menu key immediately after pressing a lane key to launch a cook cycle for the desired product. The keys are also used to enter names of products. Each key, when repeatedly pressed, accesses multiple letters or symbols. See example below.


1 2 3 4 5 6 7 8 9 0
ABC DEF GHI JKL MNO PQR STU VWX YZ * blank space + 0

Turn Fryer ON		Basic Operation	
1: OFF appears in status display when controller is off.	1	OFF	
2: Press ON/OFF key.	2	⏻	
3: -LO- appears in status display. If melt cycle is enabled, MLT-CYCL will appear until temperature is over 180°F (82°C).	3	-LO-	
4: Dashed lines appear in the status display when the fryer is at setpoint.	4	---	
Launch Cook Cycle			
1. Press a lane key.	1	LANE 1	5
2. PROD appears in the window above the pressed button. (An alarm sounds if a menu key is not pressed in five seconds.)	2	PROD	6
3. Press the menu key for the desired product.	3	4	7
4. The display changes to the cooktime for the product and then alternates between remaining cooktime and the product name.	4	JKL	DONE
5. SHAK is displayed if a shake time was programmed.			8
6. Shake the basket. The alarm automatically cancels.			LANE 1
7. DONE appears at the end of the cook cycle.			
8. Press Lane key to eliminate DONE display and silence the alarm.			
9. Hold time is indicated by a flashing LED over the menu key. Press the key to display remaining time.		9:36	
10. LED flashes faster and an alarm sounds at the end of the hold timer countdown. Press the menu key under the flashing LED to halt the alarm.		NUGG	

NOTE: To halt a cook cycle, press and hold the lane key under the displayed item for about five seconds.

1.2 Overview – Dedicated Mode (5060)


Overview – Dedicated Mode (5060)

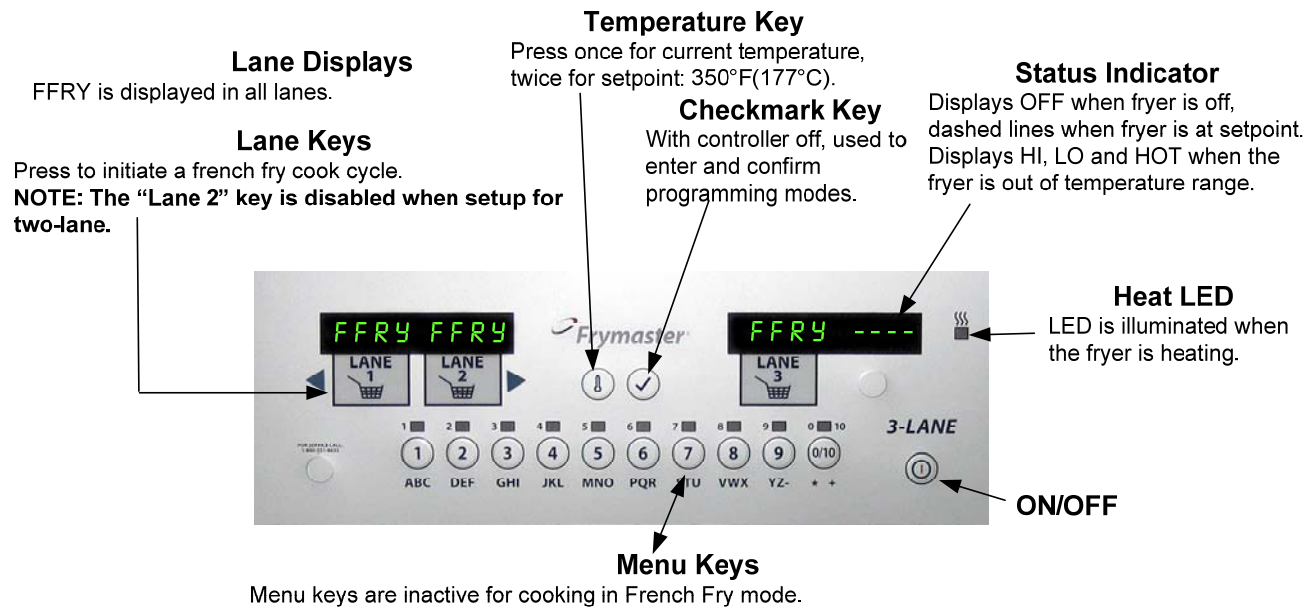

Basic Operation

Turn Fryer ON

- 1: OFF appears in status display when controller is off.
- 2: Press ON/OFF key.
- 3: -LO- appears in status display. If melt cycle is enabled, MLT-CYCL will appear until temperature is over 180°F (82°C).
- 4: Dashed lines appear in the status display when the fryer is at setpoint.

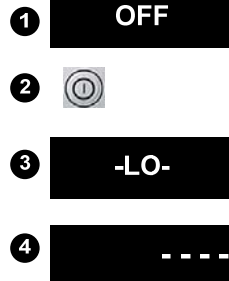

Launch Cook Cycle

- 1: FRY appears in all lanes.
- 2: Press a lane key.
- 3: The display changes to the cook time for the fries, alternating with FFRY.
- 4: SHAK is displayed if a shake time was programmed.
- 5: Shake the basket. The alarm automatically cancels.
- 6: DONE appears at the end of the cook cycle.
- 7: Press Lane key to eliminate DONE display.
- 8: Display alternates between FFRY and hold timer countdown.



NOTE: To halt a cook cycle, press and hold the lane key under the displayed item for about five seconds.

2.1 Programming New Menu Items in Multi Product Mode

Follow these steps to enter a new product in the controller. The actions to be taken are in the right column; the controller displays are shown in the left and middle columns.

Left Display	Right Display	Action
	OFF	Press ✓
C O D E		Enter 5050 with numbered keys.
	OFF	Press ✓
C O D E		Enter 1650 with numbered keys. Press the right arrow ► key to advance. Press left arrow ◀ key to go back.
FRNCHFRY	YES	Press the right arrow ► key to advance to desired product. Press left arrow ◀ key to go back.
Product to be changed or open position	Number and Yes	Press ↓ .
Product name with cursor flashing under first character.	Edit	Enter first letter of new product with numbered key. Press until desired letter appears. Press the right arrow ► key to advance cursor. Repeat until eight-letter or less name of product is entered. Eliminate characters with 0 key.
New product name	Edit	Press ↓ .
Position number or version of previous name.	Edit	Enter four-letter abbreviated name, which will alternate with the cook time display during cook cycles.
Abbreviated name	Edit	Press ↓ .
Full name		Press ✓.
SHAK(E) 1	A :30	Press ↓ to toggle between M (manually cancelling alarm) and A (automatically cancelling alarm). Enter time in the cook cycle to shake the basket with the numbered keys.
SHAK(E) 1	Your settings	Press ✓.
SHAK(E) 2	A :00	Press ↓ to toggle between M and A. Enter the time in the cook cycle to shake the basket a second time.
SHAK(E) 2	Your settings	Press ✓.
COOKTIME	M 2:45	Enter cook time in minutes and seconds with numbered keys. Press ↓ to toggle between auto and manually cancelling alarm.
COOKTIME	Your settings	Press ✓.
HOLDTIME	M :30	Enter time product can be held after cooking. Press ↓ to toggle between auto and manually cancelling alarm.
HOLDTIME	Your Settings	Press ✓.
SENS	5	Sens allows the fryer controller to adjust cooking times slightly, ensuring small and large loads cook identically. Setting the number to 0 allows no time adjustment; a setting of 9 produces the most time adjustment. Enter setting with numbered key.
SENS	Your setting	Press ✓.
New Product		If a key assignment is needed: press a menu key. Note: This eliminates any previous link associated with the chosen key. Key not needed: skip to next step
New Product	YES Key Number	Repeat steps starting at the top to enter additional products.
New Product	YES Key Number	Press Ⓢ (power key) to save changes and exit.
	OFF	

2.2 Assigning Products to Menu Keys

Left Display	Right Display	Action
	OFF	Press ✓.
CODE		Enter 1650 with numbered keys.
Menu items	YES	Press the right arrow ► key to advance through menu items.
Desired menu item	YES	Choose and press menu key to associate with product. Note: This eliminates any previous link associated with the chosen key.
Product name	Number YES	Press ① (power key).

2.3 Changing Menu Items in Dedicated Mode

Follow these steps to change a product in the computer. The actions to be taken are in the right column; the computer displays are shown in the left and middle columns.

Left Display	Right Display	Action
	OFF	Press ✓
CODE		Enter 5060 with numbered keys.
	OFF	Press ✓
CODE		Enter 1650 with numbered keys. Press the right arrow ► key to advance. Press left arrow ◀ key to go back.
FFRY	YES	Press ⏴.
Product name with cursor flashing under first character.	Edit	Enter first letter of new product with numbered key. Press until desired letter appears. Press the right arrow ► key to advance cursor. Repeat until eight-letter or less name of product is entered. Eliminate characters with 0 key.
Product name	Edit	Press ⏴.
Previous abbreviated name.	Edit	Enter four-letter abbreviated name, which will alternate with the cook time display during cook cycles.
Abbreviated name	Edit	Press ⏴.
Full name	YES	Press ✓.
SHAK(E) 1	A :30	Press ⏴ to toggle between M (manually cancelling alarm) and A (automatically cancelling alarm). Enter time in the cook cycle to shake the basket with the numbered keys.
SHAK(E) 1	Your settings	Press ✓.
SHAK(E) 2	Your settings	Press ✓.
SHAK(E) 2	A :00	Press ⏴ to toggle between M and A. Enter the time in the cook cycle to shake the basket a second time.
COOKTIME	M 2:45	Enter cook time in minutes and seconds with numbered keys. Press ⏴ to toggle between auto and manually cancelling alarm.
COOKTIME	Your settings	Press ✓.
HOLDTIME	M :00	Enter time product can be held after cooking. Press ⏴ to toggle between auto and manually cancelling alarm.
HOLDTIME	Your Settings	Press ✓.

2.3 Changing Menu Items in Dedicated Mode cont.

Left Display	Right Display	Action
SENS	5	Sens allows the fryer controller to adjust cooking times slightly, ensuring small and large loads cook identically. Setting the number to 0 allows no time adjustment; a setting of 9 produces the most time adjustment. Enter setting with numbered keys.
SENS	Your setting	Press ✓.
FFRY	YES	Press ① (power key) to save changes and exit.
	OFF	

2.4 Default Menu

This is the default domestic USA menu that is programmed into the controller. The international menu is programmed without times.

Product Item # Library & Default Button #	Menu Item	8 Character Max Name	4 Character Name	Cook Temp (programmed in computer set-up)	Cook Time	Sensitivity Setting	Shake Time	Hold Time
1	French Fries	FRNCHFRY	FFRY	350° F/177° C	2:45	5	30 sec	0
2	French Fries	FRNCHFRY	FFRY	350° F/177° C	2:45	5	30 sec	0
3	French Fries	FRNCHFRY	FFRY	350° F/177° C	2:45	5	30 sec	0
4	Chicken Nuggets	CHICNUGG	NUGG	350° F/177° C	2:15	6	30 sec	0
5	Poppers	POPPERS	POPR	350° F/177° C	3:00	4	30 sec	0
6	Chicken Patty	CHICPATY	PATY	350° F/177° C	3:00	4	30 sec	0
7	Shrimp	SHRIMP	SRMP	350° F/177° C	3:15	3	30 sec	0
8	Onion Rings	ONINRING	ORNG	350° F/177° C	3:00	4	30 sec	0
9	Chicken Tenders	CHICTNDR	TNDR	350° F/177° C	6:00	6	30 sec	0
10	Fish 3-1/2 oz fillet	FISH	FISH	350° F/177° C	3.25	7	30sec	0
11 (Ded)	French Fries	FRNCHFRY	FFRY	350° F/177° C	2:45	5	30 sec	0

Button #	Menu Item
1	FFRY
2	FFRY
3	FFRY
4	NUGG
5	POPR
6	PATY
7	SRMP
8	ORNG
9	TNDR
0/10	FISH

3.1 Controller Setup

Follow these steps to prepare the controller for placement on a fryer:

Left Display	Right Display	Action
	OFF	Press ✓.
CODE		1656 with numbered keys.
GAS	YES	Press ⏏ to toggle between YES and NO. Leave at NO for electric fryer.
GAS	YES or NO	With desired answer in place press ✓.
2 BASKET	NO	Press ⏏ to toggle between YES and NO. Leave at NO for three baskets.
2 BASKET	YES or NO	With desired answer in place, press ✓.
SET-TEMP	NONO 350	Enter cooking temperature for non-dedicated items with the numbered keys; 350°F(177°C) is the default setting.
SET-TEMP	Entered temperature.	Press ✓.
SET-TEMP	DED 350	Enter cooking temperature for dedicated items with the numbered keys; 350°F(177°C) is the default setting.
SET-TEMP	Entered temperature.	Press ✓.
	OFF	None. Setup is complete.

3.2 Controller Codes

Left Display	Right Display	Action
	OFF	Press ✓
CODE		Enter • 1650: Add or edit menus • 1656: Setup, change energy source • 3322: Reload factory default settings • 5000: Displays total cook cycles • 5005: Clears total cook cycles • 5050: Sets unit to multi-product • 5060: Sets unit to dedicated product • 1652: Recovery • 1752: Enable/Disable Boil Out • 1653: Boil Out • 1658: Change from F° to C° • 1655: Language Choice/Sound Level • 1753: Enable/Disable Melt Cycle (Once enabled, pressing "0" during melt will bypass melt cycle.)

4.1 Error Messages and Display Problems

Problem	Probable Causes	Corrective Action
GM2000 display is in wrong temperature scale (Fahrenheit or Celsius).	Incorrect display option programmed.	GM2000 controllers may be programmed to display in either Fahrenheit or Celsius. Refer to page 3-1 for instructions on changing the display.
GM2000 display shows HI.	Fryer is 15°F (8°C) above setpoint.	This display will appear only if the fryer is in the <i>non-dedicated</i> mode and the frypot temperature rises 16°F (9°C) or more above the programmed setpoint. This indicates a problem with the temperature control circuitry. Turn the fryer off and call FAS (Factory Authorized Servicer).
GM2000 display shows HOT.	Frypot temperature is more than 410°F (210°C) or, in CE countries, 395°F (202°C).	This is an indication of a malfunction in the temperature control circuitry, including a failure of the high-limit thermostat. Shut the fryer down immediately and call FAS.
GM2000 display shows –LO–.	Frypot temperature is between 180°F (82°C) and 315°F (157°C).	This display is normal when the fryer is first turned on and may appear for a short while if a large batch of frozen product is added to the frypot. If the display never goes out, the fryer is not heating. Shut the fryer down and call FAS.
GM2000 display shows PROBE FAILURE.	A. Problem with the temperature measuring circuitry including the probe. B. Damaged controller wiring harness or connector.	This indicates a problem within the temperature measuring circuitry that is beyond the scope of operator troubleshooting. Shut the fryer down and call FAS.

Problem	Probable Causes	Corrective Action
GM2000 display shows IGNITION FAILURE. Heating indicator is on, but fryer is not heating.	A. Open drain valve B. Failed controller, failed interface board, open high-limit thermostat.	A. Press the ON/OFF switch off, verify that all drain valves are completely closed, then press the ON/OFF switch on. B. This indicates that the fryer is not heating. It is displayed if the fryer loses its ability to heat oil. It is also displayed when the oil temperature is above 450°F (232°C) and the high-limit thermostat has opened, halting the heating of the oil. If this does not correct the problem, call your FAS.
GM2000 display shows IGNITION FAILURE and alarm sounds, but fryer operates normally (false alarm).	Failed controller.	Call FAS.
Controller will not go into program mode or some buttons do not actuate.	Failed controller.	Call FAS.
Heat indicator off upon initial startup. Display shows HI or HOT with alarm sounding.	Failed controller.	Call FAS.



Frymaster, L.L.C., 8700 Line Avenue, Shreveport, Louisiana 71106

TEL 1-318-865-1711
PRINTED IN THE UNITED STATES
ENGLISH

FAX (Parts) 1-318-688-2200
SERVICE HOTLINE
1-800-551-8633

FAX (Tech Support) 1-318-219-7135
819-6945A
MAR 2012