

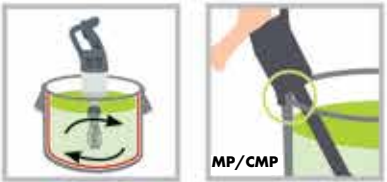


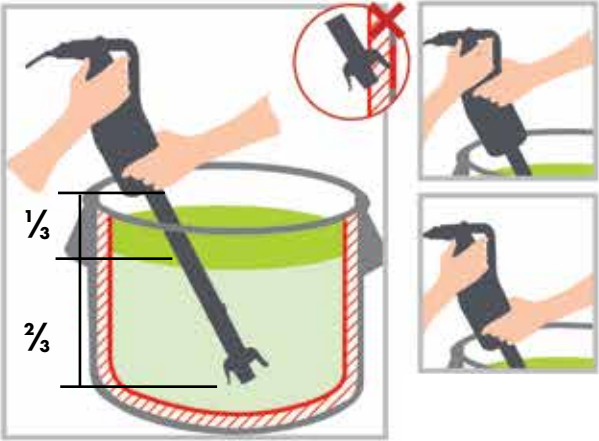


Switching on and using the mixer

Do not use the mixer unless the blade or whisk is fully immersed

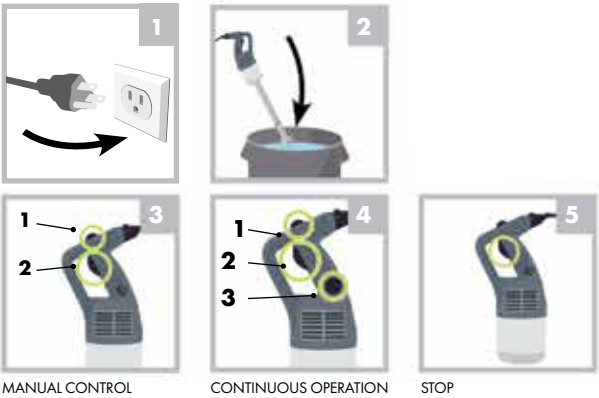

Cleaning, maintenance and storage

After each use

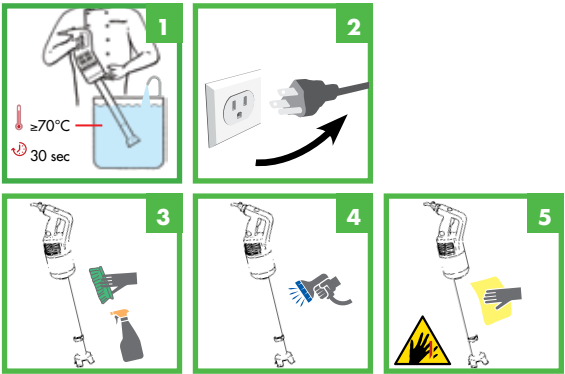

At the end of the day




WHISK

After each use




At the end of the day

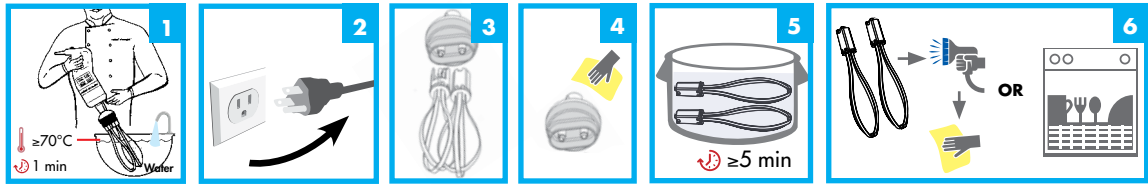

Safety and Warnings



In case of immersion

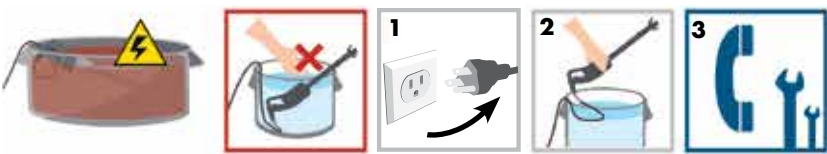

Do not use the appliance after the motor unit has been immersed in liquid

MAINTENANCE

Replace the cartridge/bearing, the blade and foot seal, or sooner if required.

