



COMBITHERM®

Combination Oven/Steamer



CT PROFORMANCE™

CTP6-10E	CTP6-10G
CTP10-10E	CTP10-10G
CTP7-20E	CTP7-20G
CTP10-20E	CTP10-20G
CTP20-10E	CTP20-10G
CTP20-20E	CTP20-20G

CT CLASSIC™

CTC6-10E	CTC6-10G
CTC10-10E	CTC10-10G
CTC7-20E	CTC7-20G
CTC10-20E	CTC10-20G
CTC20-10E	CTC20-10G
CTC20-20E	CTC20-20G

WARNING



To prevent personal injury, death or property damage:
Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

WARNING

Improper installation, alteration, adjustment, service, cleaning, or maintenance could result in property damage, severe injury, or death.

Read and understand the installation, operating and maintenance instructions thoroughly before installing, servicing, or operating this equipment.

EN

MN-35947
Rev 20
04/21





All Alto-Shaam equipment is sold Free on Board (F.O.B.) shipping point, and when accepted by the carrier, such shipments become the property of the consignee.

Should damage occur in shipment, do not put the appliance into service until the damage has been inspected by an authorized Alto-Shaam service provider.

Shipping damages are a matter between the carrier and the consignee. In such cases, the carrier is assumed to be responsible for the safe delivery of the merchandise, unless negligence can be established on the part of the shipper.

1. Make an immediate inspection while the appliance is still in the truck or immediately after it is moved to the receiving area. Do not wait until after the appliance is moved to a storage area.
2. Do not sign a delivery receipt or a freight bill until a proper count has been made and inspection of all appliances are received.

3. Note all damage to packages directly on the carrier's delivery receipt.
4. Make certain the driver signs the delivery receipt. If the driver refuses to sign, make a notation of this refusal on the receipt.
5. If the driver refuses to allow inspection, write the following on the delivery receipt: **Driver refuses to allow inspection of containers for visible damage.**
6. Contact the carrier's office immediately upon finding damage, and request an inspection. Mail a written confirmation to the carrier's office with the time, date, and the person called.
7. Save any packages and packing material for further inspection by the carrier.
8. Promptly file a written claim with the carrier and attach copies of all supporting paperwork.

Alto-Shaam will continue our policy of assisting our customers in collecting claims which have been properly filed and actively pursued. Alto-Shaam cannot, however, file any damage claims, assume the responsibility of any claims, or accept deductions in payment for such claims.

Record the model and serial number of the appliance for easy reference. Always refer to both model and serial number in any contact with Alto-Shaam regarding this appliance.

Model: _____

Serial Number: _____

Date Installed: _____

Voltage: _____

Purchased From: _____



Alto-Shaam has established a twenty-four hour emergency service call center to offer immediate customer access to a local authorized service agency outside of standard business hours. The emergency service access is provided exclusively for Alto-Shaam equipment and is available throughout the United States through the use of Alto-Shaam's toll-free number. Emergency service access is available seven days a week including holidays.

Delivery

This Alto-Shaam appliance has been thoroughly tested and inspected to ensure only the highest quality unit is provided. Upon receipt, check for any possible shipping damage and report it at once to the delivering carrier. **See Transportation Damage and Claims section located in this manual.**

This appliance, complete with unattached items and accessories, may be delivered in one or more packages. Ensure all standard items and options have been received with each model as ordered.

Save all the information packed with the appliance. Register online at www.alto-shaam.com to ensure prompt service in the event of a warranty parts and labor claim.

This manual must be read and understood by all people using or installing the equipment model. Contact the Alto-Shaam Tech Team Service Department if you have any questions concerning installation, operation, or maintenance.

1-800-558-8744; servicedept@alto-shaam.com

The serial number is required for all inquiries.

Always include both model and serial number(s) in any correspondence regarding the appliance.

Model: _____

Serial number: _____


Purchased from: _____

Date installed: _____ **Voltage:** _____

Unpacking

- Carefully remove the appliance from the carton or crate.

NOTICE: Do not discard the carton and other packaging material until you have inspected the unit for hidden damage and tested it for proper operation.

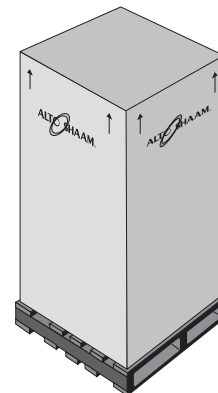

- Read all instructions in this manual carefully before installing this appliance, using the appliance or performing routine maintenance. Following procedures other than those indicated in this guide to use and clean the appliance is considered inappropriate and may cause damage, injury or fatal accidents, in addition to invalidating the guarantee and relieving Alto-Shaam of all liability.
- DO NOT DISCARD THIS MANUAL.** This manual is considered part of the appliance and is provided for the owner or manager of the business and for training personnel. **Additional manuals are available from the Alto-Shaam Tech Team Service Department, or online at www.alto-shaam.com.**
- Remove all protective plastic film, packaging materials, and accessories from the appliance before connecting electrical power. Store any accessories in a convenient place for future use.

CAUTION



Appliance and accessories may be heavy. To prevent injury, **always** use a sufficient number of trained and experienced workers when moving or leveling appliance and handling accessories.

OPERATIONAL ENVIRONMENTAL CONDITIONS


- Unit must acclimate to room temperature in the environment it is placed. 24 hours is recommended.
- Ambient temperature range of 60°F to 110°F (16°C to 43°C).
- Relative humidity of less than 95% non-condensation.
- Atmospheric pressure range of 50KPa to 106KPa.

This manual covers the following CTC and CTP series models:

Control Type		Boiler-Free Models	Steam Generator Models
CTP	CT PROformance™ with PROtouch™ control	6-10E, 6-10G 10-10E, 10-10G	6-10EB 10-10EB
CTC	CT Classic with Classic manual control	7-20E, 7-20G 10-20E, 10-20G 20-10E, 20-10G 20-20E, 20-20G	7-20EB 10-20EB 20-10EB 20-20EB

Please post the following instructions in a prominent location in the event the user smells gas.

DANGER



Explosion hazard. Before starting the appliance, make certain you do not detect the odor of gas.

If you smell gas:

- Shut off the gas supply immediately.
- Do not attempt to light any appliance.
- Do not touch any electrical elements.
- Extinguish any open flame.
- Evacuate the area.
- Use a telephone outside the property and immediately contact your gas supplier.
- If unable to contact your gas supplier, contact the fire department.

Transporation Damage and Claims	2	CT PROformance™ Start-Up Procedures	47
Delivery	3	How To Turn On the Appliance	47
Table of Contents	5	How To Start a Manual Calibration	47
Safety Procedures and Precautions	6	How To Calibrate the Touchscreen	47
Labels	8	How To Turn Off the Appliance	47
Installation Codes and Standards	15	How To Run a Cycle Test of the Appliance	48
Site Installation	15	CT Classic™ Start-Up Procedures	49
Installation Codes and Standards	15	How To Turn On the Appliance	49
Ventilation Requirements	15	How To Preheat the Appliance	49
Sound Pressure Measurements	15	Post-Installation Checklist	50
Installation Duties and Responsibilities	16	Function Test Checklist	52
Installation Duties & Responsibilities –		Inspection Checklist	54
New Construction	16	Troubleshooting – Error Codes	60
Installation Duties & Responsibilities –		Error Codes	60
Retrofit/Existing Kitchen	17	Touch Motor Control Error Codes	65
Pre-Installation Checklist	18	Original Equipment Limited Warranty	66
Technical Specifications	22		
General Specifications	22		
Oven Specifications	23		
Installation	26		
Lifting Instructions	26		
Positioning on Site – Countertop Models	27		
Positioning on Site – 20-10 & 20-20 Models	28		
Electrical Safety Regulations	29		
Electrical Connection for Gas Models	30		
Electrical Connection for Electric Models	30		
Electrical Kit Installation – 50 Hz	31		
Electrical Kit Installation – 60 Hz	32		
Ventilation Requirements for Gas Models	33		
Gas Supply & Installation	34		
Water Quality Requirements	39		
Water Supply & Installation	40		
Water Drainage – For Single Oven	41		
Water Drainage – For Stacked Ovens	42		
Mobile Equipment Restraint	43		
For Gas Models	43		
For Electric Models	43		
Special Conditions for Units Installed			
within the City of New York	44		
Liquid Cleaner Hook-Up (If Equipped			
with this Option)	45		
Grease Collection Installation			
(If Equipped with this Option)	46		

- This appliance is intended to cook, hold, or process foods for the purpose of human consumption. No other use for this appliance is authorized and is therefore considered dangerous. The appliance must not be used to cook food containing flammable materials (such as food with alcohol). Substances with a low flash point can ignite spontaneously and cause a fire.
- This appliance is intended for use in commercial establishments where all operators are familiar with the purpose, limitations, and associated hazards of this appliance. Operating instructions and safety alerts must be read and understood by all operators and users. We recommend regular training of your staff to avoid the risk of accident or damage to the unit. Operators must also receive regular safety instructions.
- Any troubleshooting guides, component views, and parts lists included in this manual are for general reference only and are intended for use by qualified and trained technicians.
- This manual should be considered a permanent part of this appliance. This manual and all supplied instructions, diagrams, schematics, parts lists, notices, and labels must remain with the appliance if the item is sold or moved to another location.

Knowledge of proper procedures is essential to the safe operation of electrically and/or gas energized equipment. The following signal words and symbols may be used throughout this manual.

DANGER

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

CAUTION

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE: Indicates information considered important, but not hazard-related (e.g., messages relating to property damage).

NOTICE: For equipment delivered for use in any location regulated by the following directive: 2012/95/EC WEEE



DO NOT dispose of electrical or electronic equipment with other municipal waste.

- To prevent serious injury, death or property damage, your appliance should be inspected and serviced at least every twelve (12) months by an authorized service partner or trained technician.
- ONLY allow an authorized service partner or trained technician to service or to repair your appliance. Installation or repairs that are not performed by an authorized service partner or trained technician, or the use of non-factory authorized parts, will void the warranty and relieve Alto-Shaam of all liability.
- When working on this appliance, observe precautions in the literature, on tags, on labels attached to or shipped with the appliance, and other safety precautions that may apply.
- If the appliance is installed on casters, freedom of movement of the appliance must be restricted so that utility connections (including gas, water, and electricity) cannot be damaged when the unit is moved. If the appliance is moved, make sure that all utility connections are properly disconnected. If the unit is returned to its original position, make sure that any retention devices and utility connections are properly connected.
- ONLY use the appliance when it is stationary. Mobile oven racks, mobile plate racks, transport trolleys, and appliances on casters can tip over when being moved over an uneven floor or threshold and cause serious injury.
- ALWAYS apply caster brakes on mobile appliances or accessories when these are not being moved. These items could move or roll on uneven floors and cause property damage or serious injury.
- Be extremely careful when moving appliances because the food trays may contain hot fluids that may spill, causing serious injury.
- ALWAYS open the appliance door very slowly. Escaping hot vapors or steam can cause serious injury or death.
- If your gas appliance is installed under an exhaust hood, the hood must be switched ON when the oven is in use to avoid the build up of combustion gases. Failure to do so may result in serious injury, death or property damage.
- NEVER place objects near the oven exhaust vents. This area is hot and could be a potential ignition source for a fire.
- Do not allow objects to block or obstruct the area below the oven base. This may result in fire, damage to the equipment or serious injury.
- Do not use the attached hand-held hose to spray anything other than the interior of the oven compartment.
- Do not use the attached hand-held hose on the surface of a hot cooking compartment. The sudden temperature change can damage the oven interior. Allow the oven to cool to a minimum of 150°F (66°C). Failure to observe this precaution can void the warranty.



WARNING



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision concerning use of the appliance by person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.












WARNING





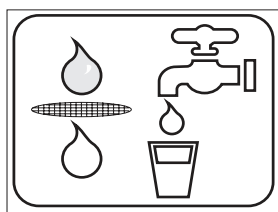


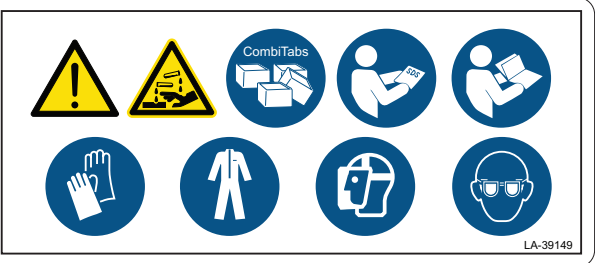


DO NOT obstruct or block exhaust flues or attach any flue extension that may impede proper burner operation, restrict the exhaust fumes and cause negative backdraft or the appliance to shut down. Failure to do so may result in serious injury or death.

	<p>Made in U.S.A.</p>
	<p>WARNING Hot surface</p>
	<p>WARNING Electric shock hazard</p>
	<p>WARNING Burn hazard Always load liquids, or foods that can become liquid when heated, at an eye level where they can be seen.</p>
	<p>Every Alto-Shaam product is precision calibrated prior to release from the factory to ensure accurate temperature control.</p>



 <p>L1 LA-36443-L1</p>	<p>Line 1 supply terminal</p>
 <p>L2 LA-36443-L2</p>	<p>Line 2 supply terminal</p>
 <p>L3 LA-36443-L3</p>	<p>Line 3 supply terminal</p>
 <p>L2/N LA-36443-L2/N</p>	<p>Neutral</p>
 <p>LA-36443-G</p>	<p>Ground terminal</p>
 <p>LA-36443-E</p>	<p>Equipotential terminal</p>
 <p>LA-38911</p>	<p>Drain water connection point.</p>
 <p>LA-38910</p>	<p>Untreated, drinkable water connection point.</p>
 <p>LA-38909</p>	<p>Treated, drinkable water connection point.</p>

<div style="display: flex; align-items: center; justify-content: space-around;"> </div> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th></th> <th>Σ kg max.</th> <th>Σ liter max.</th> <th>Σ GN 1/1</th> </tr> </thead> <tbody> <tr> <td>6-10</td> <td>33</td> <td>57</td> <td>6</td> </tr> <tr> <td>10-10</td> <td>54</td> <td>95</td> <td>10</td> </tr> <tr> <td>7-20</td> <td>76</td> <td>133</td> <td>14</td> </tr> <tr> <td>10-20</td> <td>109</td> <td>190</td> <td>20</td> </tr> <tr> <td>20-10</td> <td>109</td> <td>190</td> <td>20</td> </tr> <tr> <td>20-20</td> <td>218</td> <td>380</td> <td>40</td> </tr> </tbody> </table> <p style="text-align: right; font-size: small;">LA-38940</p>		Σ kg max.	Σ liter max.	Σ GN 1/1	6-10	33	57	6	10-10	54	95	10	7-20	76	133	14	10-20	109	190	20	20-10	109	190	20	20-20	218	380	40	<p>Capacities</p>
	Σ kg max.	Σ liter max.	Σ GN 1/1																										
6-10	33	57	6																										
10-10	54	95	10																										
7-20	76	133	14																										
10-20	109	190	20																										
20-10	109	190	20																										
20-20	218	380	40																										
<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #f96; padding: 2px; display: flex; align-items: center;"> WARNING/ADVERTENCIA/AVERTISSEMENT </div> <div style="margin-top: 10px;"> <p>Fire Hazard This unit is only for use with factory-supplied legs, casters, or base.</p> </div> <div style="margin-top: 10px;"> <p>Peligro de incendio This unit is only for use with factory-supplied legs, casters, or base.</p> </div> <div style="margin-top: 10px;"> <p>Risque d'incendie This unit is only for use with factory-supplied legs, casters, or base.</p> </div> <p style="text-align: right; font-size: x-small;">LA-39335</p> </div>	<p>Fire hazard</p> <p>This unit is only for use with factory-supplied legs, casters, or base.</p> <p>Read the installation manual.</p>																												
<div style="border: 2px solid black; padding: 10px;"> <div style="display: flex; flex-wrap: wrap; justify-content: space-around;"> <div style="text-align: center;"> </div> <div style="text-align: center;"> </div> <div style="text-align: center;"> </div> <div style="text-align: center;"> </div> <div style="text-align: center;"> </div> <div style="text-align: center;"> </div> </div> <p style="text-align: right; font-size: x-small;">LA-39336</p> </div>																													

<div data-bbox="126 243 475 363" style="background-color: #f4a460; padding: 5px;">  <p>WARNING ADVERTENCIA AVERTISSEMENT</p> </div> <div data-bbox="136 401 261 512">  </div> <div data-bbox="272 373 472 594"> <p>Steam Open carefully. Vapor Abrir con cuidado. Vapeur Ouvrir avec précaution.</p> </div> <div data-bbox="152 573 240 596"> <p>LA-39122</p> </div>	<p>Warning</p> <p>Steam. Open door carefully.</p>
<div data-bbox="107 648 406 905">  <p style="text-align: center; font-size: small;">LA-39126</p> </div>	
<div data-bbox="136 953 232 1043">  </div> <div data-bbox="289 947 370 1024">  </div> <div data-bbox="394 942 579 1022"> <p>WARNING ADVERTENCIA AVERTISSEMENT</p> </div> <div data-bbox="136 1058 232 1148">  </div> <div data-bbox="136 1161 232 1251">  </div> <div data-bbox="259 1037 623 1180"> <p>Failure to follow cleaning instructions can cause injury or equipment damage. Clean oven only with Combitherm cleaner. Cleaner is caustic. Avoid contact with skin or eyes. Wear PPE. Read and understand the Combitherm cleaner safety data sheet and the operator's manual before cleaning.</p> </div> <div data-bbox="254 1194 626 1352"> <p>No seguir las instrucciones de limpieza puede provocar lesiones o daños al equipo. Limpie el horno solo con limpiador Combitherm. El limpiador es cáustico. Evite el contacto con la piel o los ojos. Use equipos de protección personal. Lea y comprenda la hoja de datos de seguridad del limpiador Combitherm y el manual del operador antes de la limpieza.</p> </div> <div data-bbox="254 1369 630 1543"> <p>Respecter les instructions de nettoyage pour écarter les risques de blessures ou de dégâts matériels. Nettoyer le four uniquement avec un produit nettoyant Combitherm. Le produit nettoyant est caustique. Éviter le contact avec la peau et les yeux. Porter un EPI. Lire et comprendre la fiche de données de sécurité du produit nettoyant Combitherm et le manuel de l'utilisateur avant de nettoyer.</p> </div> <div data-bbox="566 1530 626 1549"> <p>LA-22836</p> </div>	<p>Warning</p> <p>Failure to follow cleaning instructions can cause injury or equipment damage. Clean oven only with Combitherm cleaner. Cleaner is caustic. Avoid contact with skin or eyes. Wear PPE. Read and understand the Combitherm cleaner safety data sheet and the operator's manual before cleaning.</p>
<div data-bbox="120 1604 711 1864">  <p style="text-align: right; font-size: small;">LA-39149</p> </div>	

<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #f4a460; padding: 2px; display: flex; align-items: center;"> WARNING/ADVERTENCIA/AVERTISSEMENT </div> <div style="margin-top: 10px;"> <p>Electric Shock Hazard Appliances with permanent electrical connection that are mounted on casters must be secured to building structure. Read installation instructions.</p> <p>Peligro de descarga eléctrica Los equipos con una conexión eléctrica permanente que estén montados sobre ruedas deben estar fijos a la estructura del edificio. Lea las instrucciones de instalación.</p> <p>Risque d'électrocution Les appareils à branchement électrique fixe qui sont montés sur roulettes doivent être attachés à la structure du bâtiment. Lire les instructions d'installation.</p> <p style="text-align: right; font-size: small;">LA-38912</p> </div> </div>	<p>Warning</p> <p>Electric Shock Hazard</p> <p>Appliances with permanent electrical connection that are mounted on casters must be secured to building structure. Read installation instructions.</p>
<div style="border: 1px solid black; padding: 5px; text-align: center;"> <p style="text-align: right; font-size: small;">LA-39148</p> </div>	
<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #f4a460; padding: 2px; display: flex; align-items: center;"> WARNING/ADVERTENCIA/AVERTISSEMENT </div> <div style="margin-top: 10px;"> <p>WARNING: Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing the equipment.</p> <p>Water and waste connection shall comply with the basic plumbing code of the Building Officials and Code Administrators International, Inc. (BOCA) and the Food Service Sanitation Manual of the Food and Drug Administration (FDA).</p> <p>ADVERTENCIA: Una instalación, ajuste, modificación, reparación o mantenimiento inadecuado podría producir daños en el equipo, lesiones personales e incluso la muerte. Lea las instrucciones de instalación, funcionamiento y mantenimiento detenidamente antes de instalar o reparar el equipo.</p> <p>La conexión de agua y de aguas residuales debe cumplir el Código de Tuberías Básico (Basic Plumbing Code) de Building Officials y Code Administrators International, Inc. (BOCA), y el Manual de Sanidad de Servicio de Alimentos (Food Service Sanitation Manual) de la Administración de Drogas y Alimentos (FDA, por sus siglas en inglés).</p> <p>AVERTISSEMENT: L'installation, le réglage, la modification, la réparation ou l'entretien incorrect de cet appareil peut causer des dommages matériels, des blessures ou la mort. Lire attentivement les instructions d'installation, de fonctionnement et d'entretien avant de procéder à son installation ou entretien.</p> <p>Le raccordement d'eau et d'évacuation doit être conforme au Basic Plumbing Code de BOCA (Building Officials and Code Administrators International, Inc.) et au Food Service Sanitation Manual de la FDA (Food and Drug Administration).</p> <p style="text-align: right; font-size: small;">LA-38908</p> </div> </div>	<p>Warning</p> <p>Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing the equipment.</p> <p>Water and waste connection shall comply with the basic plumbing code of the Building Officials and Code Administrators International, Inc. (COCA) and the Food Service Sanitation Manual of the Food and Drug Administration (FDA).</p>

⚠ **WARNING/ADVERTENCIA/AVERTISSEMENT**

Fire Hazard
For use only on noncombustible surfaces.
Maintain the correct clearances to combustibles.

Peligro de incendio
Solo para uso en superficies no combustibles.
Mantenga las distancias correctas de elementos combustibles.

Risque d'incendie
Utilisation sur des surfaces non combustibles seulement.
Maintenir des dégagements corrects par rapport aux matières combustibles.

	Combustibles	Non-combustibles
Top/tope/haut	20" (508mm)	20" (508mm)
Left/izquierda/gauche	0" (0mm)	0" (0mm)
Right/derecho/droite	2" (51mm)	0" (0mm)
Rear/posterior/arrière	4" (102mm)	4" (102mm)


LA-38906

Warning

Fire Hazard

For use only on noncombustible surfaces. Maintain the correct clearances to combustibles.

Read the installation instructions.

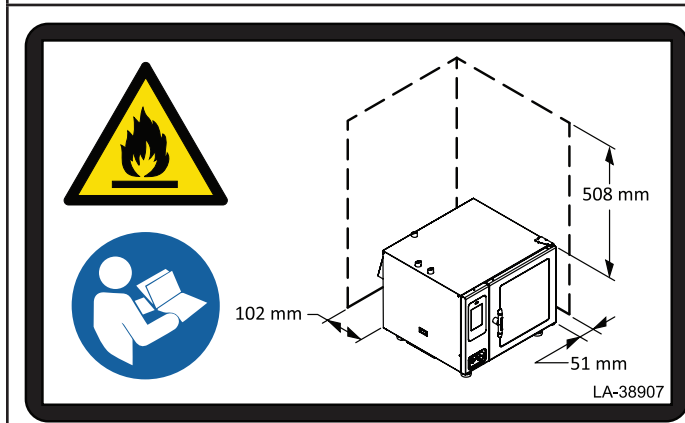

COA #5760

LA-39312

City of New York Fire Department condition of acceptance number.

NOTICE/AVISO/AVIS

For trained personnel only: The installation manual and the wiring diagram for this appliance can be found inside the oven attached to the opposite side of this panel.


Solo para personal capacitado: El manual de instalación y el diagrama de cableado de este equipo se pueden encontrar dentro del horno, en el lado opuesto de este panel.

Personnel formé seulement : Le manuel d'installation et le schéma de câblage de cet appareil se trouvent à l'intérieur du four attachés de l'autre côté de ce panneau.

LA-38941

Notice

For trained personnel only: The installation manual and the wiring diagram for this appliance can be found inside the oven attached to the opposite side of this panel.

<div style="border: 1px solid black; padding: 5px;">  <p style="text-align: center;">⚠ WARNING/ADVERTENCIA/AVERTISSEMENT</p> <p>Electric Shock Hazard To reduce the risk of electric shock, do not remove or open cover. No user-serviceable parts inside. Refer servicing to qualified personnel. Qualified personnel: Disconnect power before servicing.</p> <p>Peligro de descarga eléctrica Para reducir el riesgo de descarga eléctrica, no retire ni abra la cubierta. No hay piezas en el interior a la que se les pueda realizar mantenimiento. Derive el mantenimiento a personal calificado. Personal calificado: Desconecte la energía antes de realizar mantenimiento.</p> <p>Danger de décharge électrique Pour réduire le risque de décharge électrique, ne par ouvrir ni retirer le capot. Ne contient pas de pièces réparables par l'utilisateur. Confier les réparations à du personnel qualifié. Personnel qualifié : Sectionnez l'alimentation avant toute intervention.</p> <p style="text-align: right; font-size: small;">LA-38950</p> </div>	<p>Warning</p> <p>Electric shock hazard.</p> <p>To reduce the risk of electric shock, do not remove or open cover. No user-serviceable parts inside. Refer servicing to qualified personnel.</p> <p>Qualified personnel: Disconnect power before servicing.</p>
<div style="border: 1px solid black; padding: 5px;"> <p>Use _____AWG for supply connections. Use only copper wires suitable for temperatures $\geq 90^{\circ}\text{C}$. Do not connect to a circuit operating at more than 150 VAC to ground. For use on individual branch circuits only.</p> <div style="display: flex; align-items: center; justify-content: center;"> <div style="border: 1px solid black; width: 30px; height: 30px; margin-right: 5px;"></div> <p style="margin: 0;">AWG 90°C</p> </div> <p>Use AWG _____ para las conexiones de suministro. Use solo cables de cobre aptos para temperaturas mayores que 90°C. No conecte a un circuito que funcione a más de 150 V CA a tierra. Para su uso en circuitos derivados individuales solamente.</p> <p>Utiliser du calibre _____AWG pour les raccordements électriques. Utiliser exclusivement des conducteurs en cuivre qui conviennent à des températures $\geq 90^{\circ}\text{C}$. Ne pas raccorder à un circuit fonctionnant sous plus de 150 VCA par rapport à la terre. Utiliser exclusivement sur des circuits de dérivation propres.</p> <p style="text-align: right; font-size: small;">LA-38852</p> </div>	<p>Use _____AWG for supply connections. Use only copper wires suitable for temperatures $\geq 90^{\circ}\text{C}$. Do not connect to a circuit operating at more than 150 VAC to ground. For use on individual branch circuits only.</p>
<div style="background-color: #ffff00; padding: 10px;"> <p>NOTICE: Use only factory-supplied casters when needed. When this appliance includes casters, the following must also be installed:</p> <ul style="list-style-type: none"> a connector complying with ANSI Z21.69 / CSA 6.16; a quick-disconnect device complying with ANSI Z21.41 / CSA 6.9; a restraining device to guard against transmission of strain to the connector as specified in the manual. <p>AVISO: Solo use ruedas proporcionadas de fábrica cuando sea necesario. Si este equipo incluye ruedas, también se debe instalar lo siguiente:</p> <ul style="list-style-type: none"> un conector que cumpla con las normas ANSI Z21.69 y CSA 6.16; un dispositivo de desconexión rápida que cumpla con las normas ANSI Z21.41 y CSA 6.9; un dispositivo de sujeción para proteger contra la transmisión de tensión al conector como se especifica en el manual. <p>AVIS : S'il y a lieu, utiliser uniquement les roulettes fournies par le fabricant. Si cet appareil comporte des roulettes, les articles suivants doivent également être installés :</p> <ul style="list-style-type: none"> un connecteur conforme à ANSI Z21.69 / CSA 6.16; un raccord découpleur rapide conforme à ANSI Z21.41 / CSA 6.9; un moyen de retenue pour empêcher la transmission de la contrainte au connecteur comme indiqué dans le manuel. <p style="text-align: right; font-size: small;">LA-25784</p> </div>	<p>NOTICE: Use only factory-supplied casters when needed. When this appliance includes casters, the following must also be installed:</p> <ul style="list-style-type: none"> a connector complying with ANSI Z21.69 / CSA 6.16; a quick-disconnect device complying with ANSI Z21.41 / CSA 6.9; a restraining device to guard against transmission of strain to the connector as specified in the manual.

SITE INSTALLATION

 **WARNING**

Improper installation, alteration, adjustment, service, cleaning, or maintenance could result in property damage, severe injury, or death.

Read and understand the installation, operating and maintenance instructions thoroughly before installing, servicing, or operating this equipment.

INSTALLATION CODES & STANDARDS

The following codes and standards are required for installation of this oven:

AIR SUPPLY, ELECTRICAL CONNECTIONS, WATER CONNECTIONS, AND WASTE WATER DISCHARGE.

Gas oven installations shall comply with local codes required for gas appliances. In the absence of local codes, installation shall comply with the latest edition of:

- USA: National Fuel Gas Code, ANSI Z223.1 (NFPA 54). And OSHA Regulations
- Canada: Natural Gas and Propane Installation Code, CAN/CSA-B149.1-15
- EU: European Standard EN203
- Australia/New Zealand: AS 5601

Adherence to code by a qualified installer is essential for the following: gas plumbing, gas appliance installation, commercial cooking ventilation, water and plumbing.

 **WARNING**

Electric shock hazard.

Perform lockout/tagout procedures before cleaning or servicing this appliance.

VENTILATION REQUIREMENTS

A steam ventilation hood is mandatory for the operation of the oven. In addition, a single gas Combitherm oven requires a minimum of 28 CFM (793 LPM) make-up air for both natural and propane gas. Authorities having jurisdiction should be consulted as to the requirements for this equipment with respect to ventilation and fire extinguishing systems to ensure conformity with any Federal, State, or local installation codes.

See the section titled Gas Exhaust

SOUND PRESSURE MEASUREMENTS

The A-weighted sound pressure level without ventless hood operating is less than 70dBA.

INSTALLATION TEMPERATURE REQUIREMENTS

Malfunctions may occur if the oven is put into service too soon after having been stored or transported in cold temperatures. Therefore, allow the oven to acclimate to room temperature at the installation site for at least 24 hours before use. If this is impractical, install the oven as directed and immediately run it in convection mode at 450°F (232°C) for 25–30 minutes. Then proceed with completing all remaining functional tests.

NOTICE: ALWAYS remove the electronic control boards BEFORE welding any stainless steel components on this appliance. Failure to do so will damage the control boards and may void the warranty.

New Construction

Designer/Consultant Responsibilities: Pre-Install	
	Complete water analysis to be conducted to ensure water quality meets manufacturer specifications.
	Record the GPM (LPM) rate from main water line from site that will be feeding the oven, using hose and bucket.
	Proper floor drain within 3' (1m), not directly underneath, of where the appliance is to be installed.
	Two (2) cold water inlets - drinking quality. Both inlets can be from same source; must meet line pressure and flow rate specifications for both inlets. Divide using a manifold. Run one side through treatment device before running to oven. A shut-off valve must be installed ahead of inlets. One (2) treated water inlet: 3/4" NPT connection. Line pressure 30 psi minimum dynamic and 90 psi maximum static (200 to 600 kPa) at a minimum flow rate of 0.26 gpm (1 L/min) for 6-10, 10-10 and 7-20 models, 0.53 gpm (2 L/min) for 10-20 models, and 0.80 gpm (3 L/min) for 20-10 and 20-20 models. One (1) untreated water inlet: 3/4" NPT connection. Line pressure 30 psi minimum dynamic and 90 psi maximum static (200 to 600 kPa) at a minimum flow rate of 2.64 gpm (10 L/min) for all models.
	Gas appliances require one 3/4" line within 3' (1m) of the appliance equipped with a manual shut off, and ready to be hooked to a quick disconnect hose.
	Vent hood, and possible interconnection with gas supply as determined by local code.
	Proper electrical voltage, phase, wire size, breaker size, and disconnects are provided for hook ups within 3' (1m) of the appliance.
	Exhaust air for gas appliances, exhaust hood, ventilation ceiling, chimney, spacing from top edge of appliance to lower edge of grease filters/ceiling.
	If floor is to be sloped then level surface must be provided for trolley/cart appliances.
	Confirm clearances of hallways, and doors to the installation area are sufficient for the model of the appliance being installed.
Installer Responsibilities: Pre-Install	
	Pre-Installation check sheet has been properly filled out.
Installer Responsibilities: Install	
	Inspect, receive, deliver, uncrate, and set appliance in place.
	Check that the appliance is level. Follow leveling instructions found in the installation manual.
	Make water connections. Make sure treated and untreated water lines are hooked up properly to the correct fittings.
	Make final electrical connections. Check for proper voltage, phase, wire size, and breaker size. Ground fault or residual current protection device must accommodate a leakage current of 20mA. Report any issues to the designer / consultant.
	Plumb in the appliance drain per the required specifications found in the installation manual.
	Ensure gas pressure is above minimum and below maximum pressures listed in the installation manual for the corresponding gas type.
	Check that all accessories are unpacked and set up for the end user.
	Make sure the CombiOven is properly fastened to the ground, or has a restraint installed if on casters.
	Make sure the CombiOven is fully operational. Report any issues or manufacturing defects.
	Ensure most current software is installed.
	Remove any packaging trash and debris from the installation.
	Clean and wipe down the outside of the appliance and make presentable to the end user.
	Take pictures of the installation verifying proper drain, water lines, and clearances are met.
ASA Responsibilities: After Install	
	Perform mechanical startup.
	Complete post installation check sheet.
	Pictures of the installation's electrical connections, water, drain, and clearances should be taken and sent to: installation_program@alto-shaam.com
RSP/Dealer: After Install	
	Confirm installation is correct.
	Provide operational training and demonstration, and contact information for post installation support.
	Verify warranty registration documentation has been submitted.
Customer/End User	
	Complete and submit warranty registration documentation: www.alto-shaam.com/warranty
	Use the appliance only for its intended purpose.
	Follow cleaning and planned maintenance schedules to maximize the life of the equipment.

Retro Fit/Existing Kitchen

Designer/Consultant Responsibilities: Pre-Install	
	Complete water analysis to be conducted to ensure water quality meets manufacturer specifications.
	Record the GPM (LPM) rate from main water line from site that will be feeding the oven, using hose and bucket.
	Proper floor drain within 3' (1m), not directly underneath, of where the appliance is to be installed.
	Two (2) cold water inlets - drinking quality. Both inlets can be from same source; must meet line pressure and flow rate specifications for both inlets. Divide using a manifold. Run one side through treatment device before running to oven. A shut-off valve must be installed ahead of inlets. One (2) treated water inlet: 3/4" NPT connection. Line pressure 30 psi minimum dynamic and 90 psi maximum static (200 to 600 kPa) at a minimum flow rate of 0.26 GPM (1 LPM) for 6-10, 10-10 and 7-20 models, 0.53 GPM (2 LPM) for 10-20 models, and 0.80 GPM (3 LPM) for 20-10 and 20-20 models. One (1) untreated water inlet: 3/4" NPT connection. Line pressure 30 psi minimum dynamic and 90 psi maximum static (200 to 600 kPa) at a minimum flow rate of 2.64 GPM (10 LPM) for all models.
	Gas appliances require one 3/4" line within 3' (1m) of the appliance equipped with a manual shut off, and ready to be hooked to a quick disconnect hose.
	Proper vent hood is installed, and possible interconnection with gas supply per by local code.
	Proper electrical voltage, phase, wire size, breaker size, and disconnects are provided for hook ups within 3' (914mm) of the appliance.
	Exhaust air for gas appliances, exhaust hood, ventilation ceiling, chimney, spacing from top edge of appliance to lower edge of grease filters/ceiling.
	If floor is to be sloped then level surface must be provided for trolley/cart appliances.
	Confirm clearances of hallways, and doors to the installation area are sufficient for the model of the appliance being installed.
Installer Responsibilities: Pre-Install	
	Pre-Installation check sheet has been properly filled out.
Installer Responsibilities: Install	
	Inspect, receive, deliver, uncrate, set appliance in place, and check that appliance is level.
	Make water connections. Make sure treated and untreated water lines are hooked up properly to the correct fittings.
	Hook up final electrical, check for proper voltage, phase, wire size, and breaker size. Ground fault or residual current protection device must accommodate a leakage current of 20mA. Report any issues to the designer / consultant.
	Plumb in the appliance steam resistant drain per manufactures required specifications as found in the installation manual.
	Ensure gas pressure is above minimum and below maximum pressures listed in the installation manual for the corresponding gas type.
	Check that all accessories are unpacked and set up for the end user.
	Make sure the Combi appliance is properly fastened to the ground, or has a restraint installed if on casters.
	Ensure most current software is installed / uploaded.
	Verify installation meets the manufacturer specifications per the installation manual.
	Make sure the Combi appliance is fully operational, report any issues or manufacturing defects.
	Pick up any packaging trash and debris from the installation.
	Clean and wipe down the outside of the appliance and make presentable to the end user.
	Take pictures of the installation verifying proper drain, water lines, and clearances are met.
ASA Responsibilities: After Install	
	Perform mechanical startup.
	Complete post installation check sheet.
	Pictures of the install's electrical connections, water, drain, and clearances should be taken and sent to: installation_program@alto-shaam.com
RSP/Dealer: After Install	
	Confirm installation is correct.
	Provide operational training and demonstration, and contact information for post installation support.
	Verify warranty registration documentation has been submitted.
Customer/End User	
	Complete and submit warranty registration documentation.
	Use the appliance only for its intended purpose.
	Follow cleaning and planned maintenance schedules to maximize the life of the equipment.

Pre-Installation Checklist



Location Information Location Name: _____ Location Street Address: _____ Location City: _____ Location State and Zip: _____	Site Contact Information Site Contact Name: _____ Site Contact Phone No.: _____ Site Contact email: _____
Ship to Company Name: _____ Company Address: _____ City: _____ State and Zip: _____ Approx. ship date: _____	Technician Name _____ Technician Phone No.: _____ ASA Phone No.: _____ Contact Email: _____ Date of Site Survey: _____

Equipment type	Oven	Oven Hood	RO System
Quantity of each type to be installed by ASA			
Model number(s) to be installed			

Installation Clearances			
Measure door/entry way clearance (W x H)		PASS	FAIL
Measure path clearance (W x H)		PASS	FAIL
Is there/or will there be concerns with moving equipment from entrance to final place/location in kitchen? If yes, please explain:		YES	NO
Elevator opening, if applicable (W x H)		PASS	FAIL
Elevator interior dimensions, if applicable (H x W x D)		PASS	FAIL
Appliance clearance	Right side	PASS	FAIL
	Left side	PASS	FAIL
	Rear	PASS	FAIL
	Top	PASS	FAIL
For ventless hood installations: Is there a sprinkler head above the location where the hood will be installed? If yes, check state and local codes for clearance specs.		PASS	FAIL
Based on the appliances designated spot in the kitchen, would the appliance be accessible for service?	YES		NO
If NO, comment on the issue:			
Number of installation kits: _____ Copper _____ CPVC _____			

Water Supply			
Is there at least one dedicated cold water supply line within 3 feet (1m) of where each appliance will be installed?	PASS	FAIL	DESCRIBE ISSUE
Do water supply line(s) have shut-off(s) exclusively for each oven?	PASS	FAIL	DESCRIBE ISSUE
Do water supply line(s) provide a total two hookups per appliance, terminated with male 3/4 NPT fittings?	PASS	FAIL	DESCRIBE ISSUE
Is the dynamic water pressure from the cold water supply line a minimum of 30 psi (200 kPa) for each appliance?	PASS	FAIL	UNKNOWN
Is the static water pressure from the cold water supply line less than 90 psi (600 kPa) for each appliance?	PASS	FAIL	UNKNOWN
Is the minimum water flow rate for the treated water line: 0.26 gpm (1 L/min) for 6-10, 10-10 and 7-20 models, 0.53 gpm (2 L/min) for 10-20 models, and 0.80 gpm (3 L/min) for 20-10 and 20-20 models?	PASS	FAIL	UNKNOWN
Is the minimum water flow rate for the untreated water line 2.6 gpm (10 L/min)?	PASS	FAIL	UNKNOWN
Is water treatment (RO blend system, filter, etc.) going to be installed/used? Will the RO system be installed indoors, within 25 feet (9m) of the equipment the water is being supplied to? Will the storage tank be located within 10 feet (3m) of the water processor? If YES - Note the system here:	YES	NO	UNKNOWN
	BRAND NAME		MODEL
Can the site contact provide evidence that a documented water analysis has been performed?	YES		NO

Pre-Installation Checklist

Electrical

Ratings of Alto-Shaam oven(s) to be installed Breaker: _____ Voltage: _____ Phase: _____

<i>The following fields must be completed by the Service Tech on site.</i>							
What is the measured voltage at the site?	L1-N		L2-N		L3-N		L1-L2
	L2-3		L1-L3		PASS		FAIL
What is the on-site breaker size supplying power to the appliance(s)?	SIZE:				PASS		FAIL
Is the expectation that the oven be plugged in?	YES		NO				
Is there a disconnect or junction box within 3' (1m) of where the appliance(s) will be installed?	PASS		FAIL				
Comments:							

Gas

What is the gas type for the appliance(s) to be installed?	NATURAL				PROPANE			
What is the gas type confirmed at installation site?	NAT		PRO		PASS		FAIL	
Is there a minimum of one, dedicated 3/4" gas supply line within 3' (1m) of where each appliance(s) will be installed?	PASS		FAIL					
On the gas line, is there a 3/4" NPT pipe connection with a shut-off valve within 3' (1m) of where the appliance(s) will be installed?	PASS		FAIL					
Comments:								

Drain

Is there a floor drain within 3' (1m) of where the appliance(s) will be installed?	PASS		FAIL				
What is the actual distance to the floor drain from where the appliance(s) will be installed?	MEASUREMENT				PASS		FAIL
Is the floor drain going to be located underneath the appliance(s) to be installed? (The drain should not be located directly under the appliance — a “No” answer equals PASS.)	PASS		FAIL				
Comments:							

Other Site Information

Is there a proper ventilation hood installed above where the appliance(s) will be installed?	PASS		FAIL				
Does the designated location for the appliance have a level surface, i.e., no more than 1.5" (38mm) change in elevation from its highest to lowest surface point?	PASS		FAIL				
Is the ambient temperature of the site 60°F – 110°F (15°C – 110°C)?	PASS		FAIL				
Is the site 100% ready for appliance(s) installation?	YES		NO				
Is additional site preparation required?	YES		NO				
Comments:							

Pre-Installation Checklist



Pre-Installation Checklist

Location Information Location Name: _____ Location Street Address: _____ Location City: _____ Location State and Zip: _____	Site Contact Information Site Contact Name: _____ Site Contact Phone No.: _____ Site Contact email: _____
Ship to Company Name: _____ Company Address: _____ City: _____ State and Zip: _____ Approx. ship date: _____	Technician Name _____ Technician Phone No.: _____ ASA Phone No.: _____ Contact Email: _____ Date of Site Survey: _____

Have the environmental operation conditions been met?	Yes	No
Ambient air temperature: 40°F to 105°F (5°C to 40°C).		
Indoor use only, protected from the elements.		
If "No" to any of the above, please explain:		
Installation location	Yes	No
Will the RO system be installed indoors, within 25 feet (9m) of the equipment the water is being supplied to?		
Will the storage tank be located within 10 feet (3m) of the water processor?		
Will the floor beneath the storage tank be smooth, clean, and free of sharp objects that could puncture the tank?		
Will there be a drain located within 10 feet (3m) of the system, and allow a minimum flow of 2 GPM (7.5 LPM)?		
Is the main cold water supply made from food-grade material? NOTE: Non-metal, plastic pipe or reinforced hose or tubing are recommended.		
Does the cold water supply have a 1/2-inch female NPT fitting and shut-off valve?		
Is the main cold water supply pressure between 75 PSI (5.1 bar) and 85 PSI (5.9 bar)?		
If "No" to any of the above, please explain:		
Other site information	Yes	No
Can the Site Contact provide evidence that a documented water analysis has been performed?		
Is the site 100% ready for appliance(s) installation?		
If "No" to any of the above, please explain:		

This product is for commercial use only and must be installed and maintained in accordance with manufacturer's guidelines and local regulatory plumbing codes. See spec sheet for further details and water quality specifications.

Signatures	
Technician name and signature:	Date:
On-site contact name, title, and signature:	Date:

Please provide a copy of this document to an on-site manager.

Service company name:	
Service company number:	
Model of oven(s) to be installed:	
The site is ready for installation of the oven(s); planned install location passes inspection. Once the oven(s) arrive at the site (or the delivery date is certain), contact the service company listed above to schedule the installation.	
The site is NOT ready for the installation of the oven(s); planned install location needs the following changes made before installation can proceed:	
On-site manager should make the necessary contacts to move forward with these changes as soon as possible. If there are any questions, please contact the Alto-Shaam Technical Service Department at 800-558-8744 ext. 6702. Or, review documentation regarding the equipment at alto-shaam.com/en/resource-library .	
Once the necessary site changes have been made and the oven(s) have arrived (or the delivery date is certain), contact the Alto-Shaam Technical Service Department at 262-251-3800 to schedule the installation.	
Technician name and signature:	
On-site contact name, title, and signature:	
<p><i>For the attending ASA</i> <i>Please hand the site contact a copy of the Installation Program Flyer</i></p> <p>Did <input type="checkbox"/> Did not <input type="checkbox"/></p>	

GENERAL SPECIFICATIONS

Installation must be performed by a qualified technician. Strict adherence to local codes and standards is required for installation of this oven. Code requirements apply, but are not limited, to:

- **Air supply**
- **Electrical connections**
- **Water connections**
- **Waste water discharge**
- **Natural gas / LP supply (gaseous ovens only)**

Water Requirements and Standards



Water requirements (per oven)

- Two cold water inlets - drinking quality
- One treated water inlet: 3/4" NPT connection. Line pressure 30 psi minimum dynamic and 90 psi maximum static (200-600 kPa) at a minimum flow rate of 0.26 gpm (1 L/min).
- One untreated water inlet: 3/4" NPT connection. Line pressure 30 psi minimum dynamic and 90 psi maximum static (200-600 kPa) at a minimum flow rate of 2.64 gpm (10 L/min).
- Water drain: 1-1/2" (40mm) connection with a vertical vent to extend above the exhaust vent. Materials must withstand temperatures up to 200°F (93°C).



Clearance requirements for water filtration system

Do not install a water filtration system behind unit.
















Water Quality Standards

It is the sole responsibility of the owner/operator/purchaser of this equipment to verify that the incoming water supply is comprehensively tested and, if required, a means of "water treatment" provided that would meet compliance requirements with the published water quality standards shown below. Non-compliance with these minimum standards will potentially damage this equipment and/or components and void the original equipment manufacturer's warranty. Alto-Shaam recommends using the Alto-Shaam Reverse Osmosis System to properly treat your water.





















Inlet Water Requirements		
Contaminant	Treated Water	Untreated Water
Free Chlorine	Less than 0.1 ppm (mg/L)	Less than 0.1 ppm (mg/L)
Hardness	30-70 ppm	30-70 ppm
Chloride	Less than 30 ppm (mg/L)	Less than 30 ppm (mg/L)
pH	7.0 to 8.5	7.0 to 8.5
Silica	Less than 12 ppm (mg/L)	Less than 12 ppm (mg/L)
Total Dissolved Solids (tds)	50-125 ppm	50-360 ppm

OVEN SPECIFICATIONS
















Specification sheets for Combitherm ovens are available at www.alto-shaam.com. You can also view and download PDFs by scanning the QR codes on this and the following pages with the camera on your mobile device or tablet.

CTC6-10E	CTC6-10G	CTC6-10E with Ventech Hood	Stacked CTC6-10E with Ventech Hood
			
Stacked CTC6-10E over CTC10-10E w/Ventech Hood	CTC6-10E over Vector F	CTP6-10E	CTP6-10G
			
CTP6-10E with Ventech Hood	Stacked CTP6-10E	Stacked CTP6-10E with Ventech Hood	Stacked CTP6-10E over CTP10-10E
			
Stacked CTP6-10E over CTP10-10E w/Ventech Hood	CTP6-10E over Vector F	Stacked CTP6-10G	
			

OVEN SPECIFICATIONS (Continued)

CTC7-20E	CTC7-20G	CTC7-20E with Ventech Hood	Stacked CTC7-20E
			
Stacked CTC7-20E with Ventech Hood	Stacked CTC7-20G	CTC7-20E over Vector F	CTP7-20E
			
CTP7-20G	Stacked CTP7-20G	CTP7-20E with Ventech Hood	Stacked CTP7-20E
			
Stacked CTC7-20E with Ventech Hood	CTP7-20E over Vector F	CTC10-10E	CTC10-10G
			
CTC10-10E with Ventech Hood	CTP10-10E	CTP10-10GE	CTP10-10E with Ventech Hood
			

OVEN SPECIFICATIONS (Continued)



Stacked CTP10-10E over CTP7-20E	CTC10-20E	CTC10-20G	CTC10-20E with Ventech
			
CTP10-20E	CTP10-20G	CTP10-20E with Ventech Hood	CTC20-10E
			
CTC20-10G	CTP20-10E	CTP20-10G	CTC20-20E
			
CTC20-20G	CTP20-20E	CTP20-20G	
			

SITE INSTALLATION

WARNING

To prevent serious injury, death, or property damage:

- **Always** keep appliance on top of a pallet when using a fork lift or a pallet lift truck to move appliance.
- **Always** use a sufficient number of trained and experienced workers to place the appliance on floor, stand, or counter.

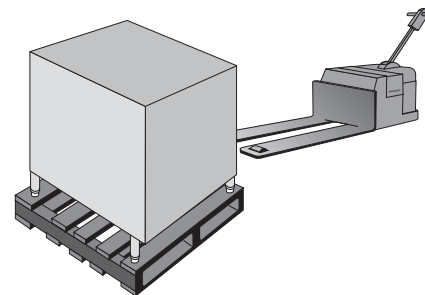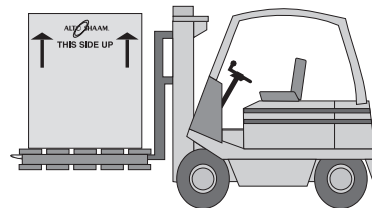


INSTALLATION

To ensure proper operation, the installation of this oven must be completed by qualified technicians in accordance with the instructions provided in this manual. Failure to follow the instructions provided may result in damage to the oven, building, or cause personal injury to personnel.

NOTICE: To prevent PROPERTY DAMAGE: Check the dimensions of the doorways and aisles before attempting to move the oven and pallet to the installation site.

Do not tilt the oven. Transport the oven in an upright and level position only.

Slide the preheat strip into place before using a forklift or pallet jack in between the trolley guides to avoid damaging the preheat strip when lifting.

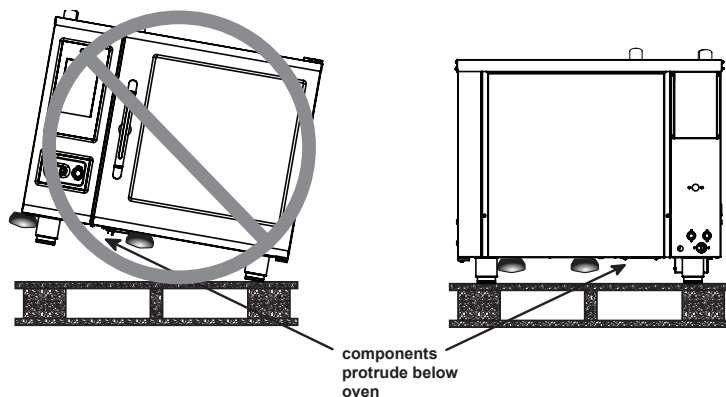


LIFTING INSTRUCTIONS


Remove banding before lifting. **Lift the unit from the front only, never from the side.**

Adjust the forks so that they do not damage any of the components under the unit. **Note that the control side of the oven is the heaviest portion.** Lift the unit just high enough to remove the wooden pallet. Lower the unit as close to the floor as possible and no more than 2" (50mm) above the floor. Secure hoses and dangling cords to avoid tangling or damage. **When moving the unit, drive slowly, keep it low to the ground, and use extreme caution.**

DEPTH OF FORKS IS CRITICAL FOR UNITS EQUIPPED WITH GREASE COLLECTION TO AVOID DAMAGING THE PUMP

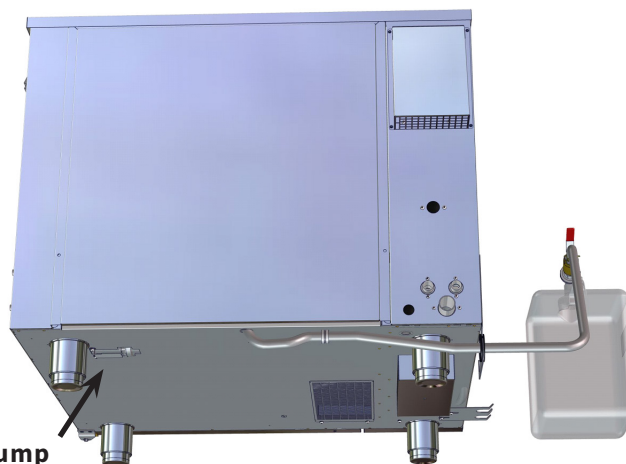

SITE INSTALLATION

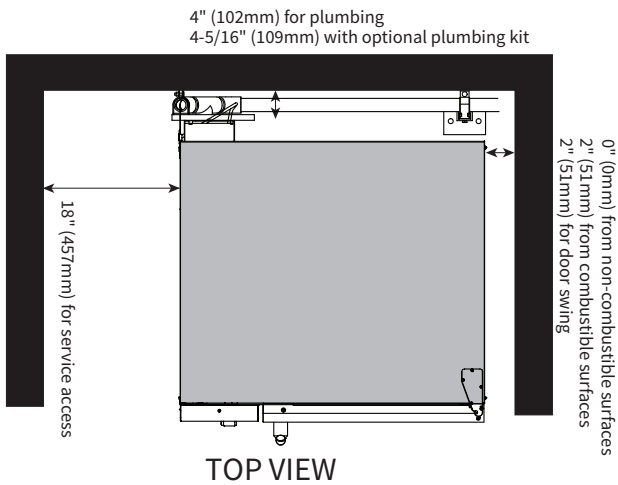

MINIMUM CLEARANCE REQUIREMENTS	
LEFT SIDE	0" (0mm) MINIMUM 18" (457mm) RECOMMENDED SERVICE ACCESS
RIGHT SIDE	0" (0mm) FROM NON-COMBUSTIBLE SURFACES 2" (51mm) FROM COMBUSTIBLE SURFACES 2" (51mm) FOR DOOR SWING
BACK	4" (102mm) FOR PLUMBING 4-5/16" (109mm) FOR OPTIONAL PLUMBING KIT
TOP	20" (508mm) FOR AIR MOVEMENT
BOTTOM	5-1/8" (457mm) FOR LEGS AND UNOBSTRUCTED AIR INTAKE

NOTICE: • A minimum distance of 18" (457mm) is strongly recommended for service access. If adequate service clearance is not provided, it will be necessary to disconnect the gas, water, and drain to move the oven with a forklift for service access. Service charges in connection with inadequate service access are not covered under warranty.

- Do not install a stacked combination directly over a drain. Steam rising up out of the drain will adversely affect operation, hamper cooling air circulation, and may damage electrical and electronic components. Failure to comply will void the warranty. A single oven installed on a stand with solid surface bottom shelf can be positioned over a drain since the solid surface will block the rising steam.



 

POSITIONING ON SITE - COUNTERTOP MODELS

Place the oven on a stable, non-combustible level horizontal surface. Use the adjustable feet to level the unit if the floor is uneven.

It is strongly recommended that tabletop models be mounted on a factory supplied stand or a stand that is stable, open, and level. The adjustable oven legs should be extended beyond the depth of the positioning ring to allow for leveling after the oven has been placed on the stand.

Each of the legs on the stand and the oven can be adjusted 2" (51mm) up or down.

Level the oven from front-to-back and side-to-side by means of the adjustable legs. Components within the oven condenser tank are sensitive to pitch and can be damaged. The tolerance to level is +/- 0.125" (3.2mm). If this tolerance range is not achievable, the floor must be repaired to obtain level.

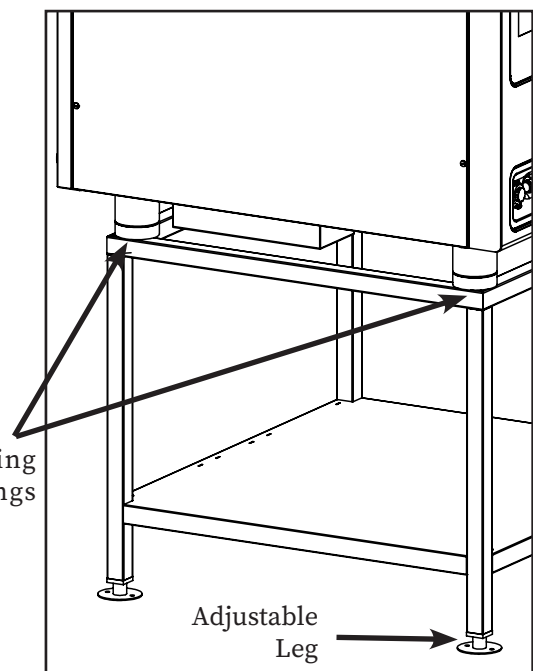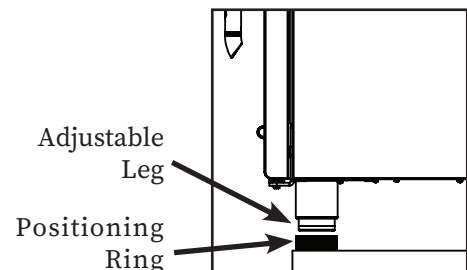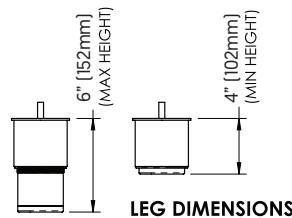

SITE INSTALLATION

POSITIONING ON SITE — 20-10 & 20-20 MODELS

Place the oven on a stable, non-combustible level horizontal surface. Use the adjustable feet to level the unit if the floor is uneven.

- Once the unit has been positioned properly beneath a ventilation hood system, adjust the four outside feet located on the outside corners of the base frame. Begin with a 32mm (1.25") height (illustration 1) leveling the oven from side-to-side and front-to-back (illustration 2).

NOTICE

To ensure proper fit of the trolley, the overall height of the oven must meet this specification:

Minimum: 79-7/8" (203 cm)

Maximum: 80-3/8" (204 cm)

In addition, the vertical distance from the bottom of the door frame to the floor must meet this specification:

Minimum: 8-1/4" (210mm)

Maximum: 8-3/4" (222mm)

- Roll the trolley into the oven and check the overall fit of the trolley. Close the door and check fit. Make adjustments as needed.


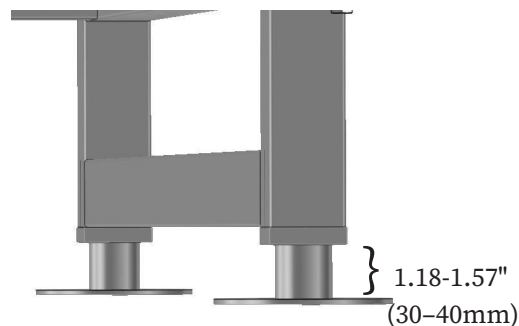


Illustration 1

Illustration 2

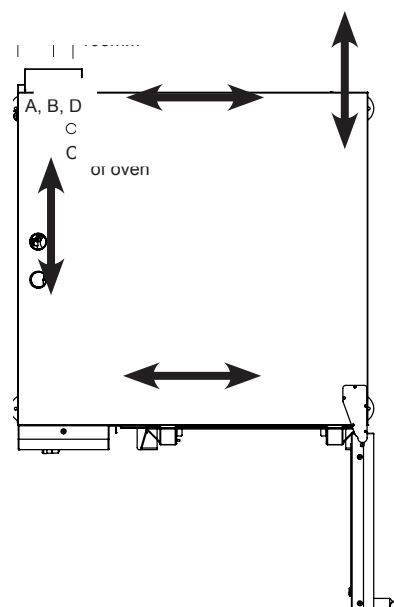

NOTICE: Adjustable measurements are from the top of the leg flange to the bottom of the leg square frame (see illustration 1). If measurements exceed 1.57" (40mm) in height or trolley is not on a level and stable horizontal floor, the following may occur:

- Improper sealing of the door sweep gasket to the trolley plate, or heat strip.
- Trolley may not fit properly.

SITE INSTALLATION

⚠ CAUTION

Power source must match voltage identified on appliance rating tag. The rating tag provides essential technical information required for any appliance installation, maintenance or repairs. Do not remove, damage or modify the rating tag.

⚠ WARNING

To prevent serious injury, death, or property damage:

All electrical connections must be made by a qualified and trained service technician in accordance with applicable electrical codes.



This appliance must be adequately grounded in accordance with local electrical codes or, in the absence of local codes, with the current edition of the National Electrical Code ANSI/NFPA No. 70. In Canada, all electrical connections are to be made in accordance with CSA C22.1, Canadian Electrical Code Part 1 or local codes.



CE-approved appliances include an equipotential-bonding terminal marked with the symbol shown on the left. Provisions for earthing are to be made in accordance with IEC:2010 60335-1 section 27 or local codes.

⚠ WARNING

Appliances without a cord provided by the factory must be equipped with a cord of sufficient length to permit the appliance to be moved for cleaning.

Always use the correct AWG wire size based on the electrical requirements for the appliance.

⚠ WARNING

Improper installation, alteration, adjustment, service, cleaning, or maintenance could result in property damage, severe injury, or death.

Read and understand the installation, operating and maintenance instructions thoroughly before installing, servicing, or operating this equipment.

⚠ WARNING

Electric shock hazard.

Perform lockout/tagout procedures before cleaning or servicing this appliance.

ELECTRICAL CONNECTION FOR GAS MODELS

- 1. An electrical wiring diagram is located behind the control panel on the left side of the oven.** This appliance must be branch circuit protected with proper ampacities, in accordance with the wiring diagram.
- For 1-phase applications, the ground fault or residual current protection device must accommodate a leakage current of 20 mA.
- Wire size for the main incoming power to the unit must match the minimum size listed in the specifications applicable to the specific oven model. For supply connections, locate the wire size posted on the label located on the electrical control box cover behind the service panel.
- Before operating the oven, check all cable connections and electrical terminal connections in the electrical connection area for tightness. Connections can loosen during transport.

NOTICE: Check motor rotation on the Combitherm® CT Classic CTC model line. Arrows on the motor housing indicate proper rotation.

- After both water and electrical connections have been completed on all Combitherm model types, operate the oven in any cooking mode for a period of 15 minutes.
- Recheck the main power connections at the terminal block, cable connections, and electrical terminal connections to make certain they remain tight.

ELECTRICAL CONNECTION FOR ELECTRIC MODELS

NOTICE: All models must be equipped with a country certified external allpole disconnection switch with sufficient contact separation.

An oil resistant cord like H05RN or H07RN or equivalent must be used.











- 1. An electrical wiring diagram is located behind the control panel on the left side of the oven.** This appliance must be branch circuit protected with proper ampacities, in accordance with the wiring diagram.
- Wire size for the main incoming power to the unit must match the minimum size listed in the specifications applicable to the specific oven model. For supply connections, locate the wire size posted on the label located on the electrical control box cover behind the service panel.
- Before operating the oven, check all cable connections and electrical terminal connections in the electrical connection area for tightness. Connections can loosen during transport.

NOTICE: Check motor rotation on the Combitherm® CT Classic CTC model line. Arrows on the motor housing indicate proper rotation.

- After both water and electrical connections have been completed on all Combitherm model types, operate the oven in any cooking mode for a period of 15 minutes.
- Recheck the main power connections at the terminal block, cable connections, and electrical terminal connections to make certain they remain tight.

ELECTRICAL KIT INSTALLATION – 50 Hz



International Applications

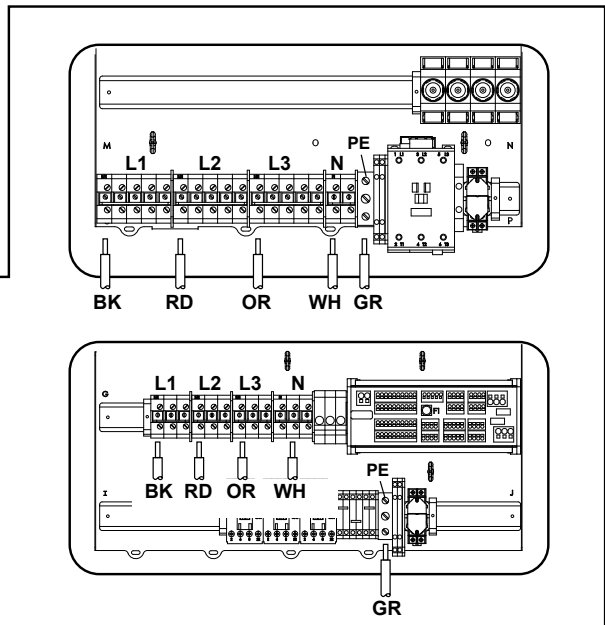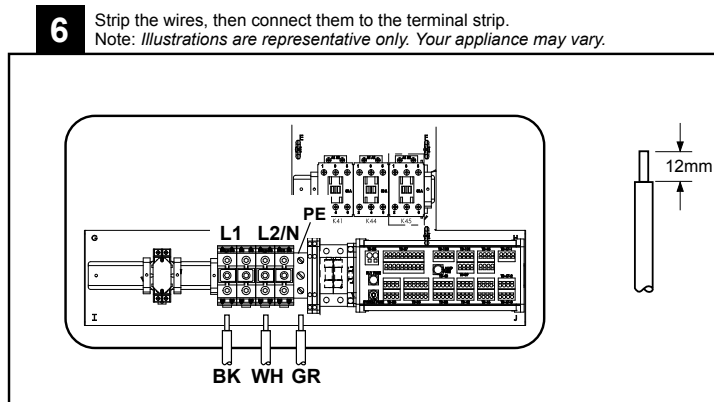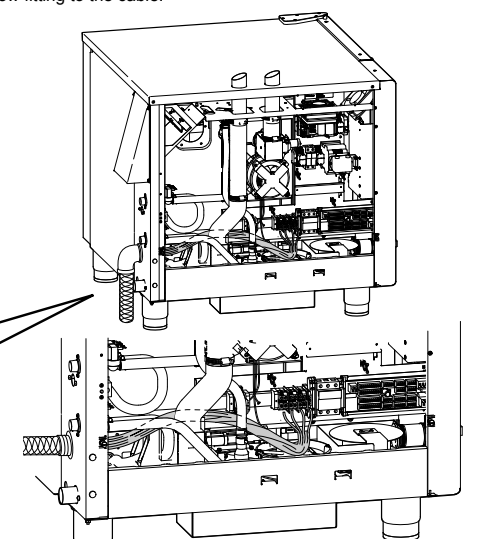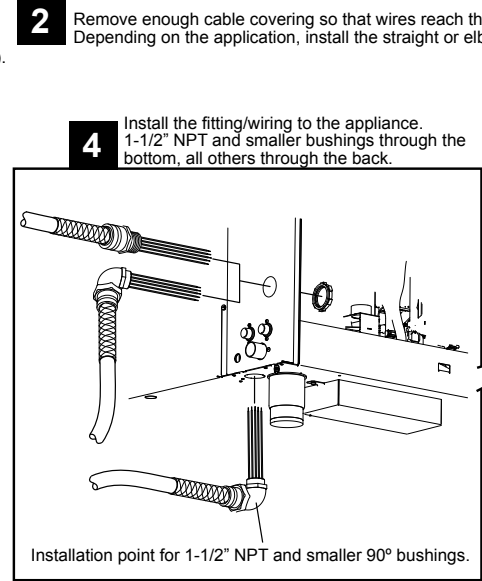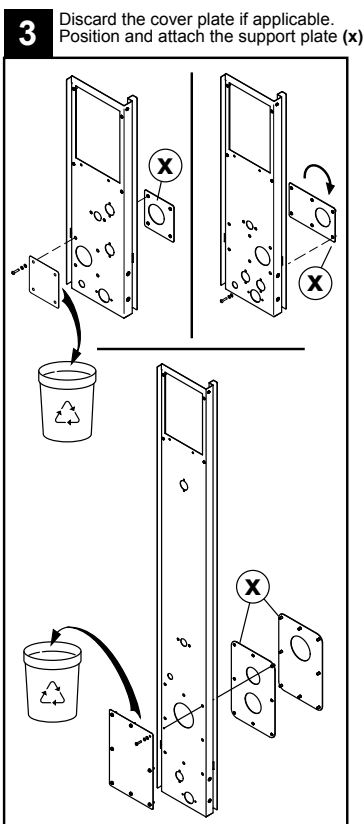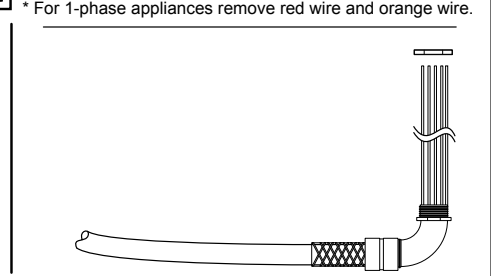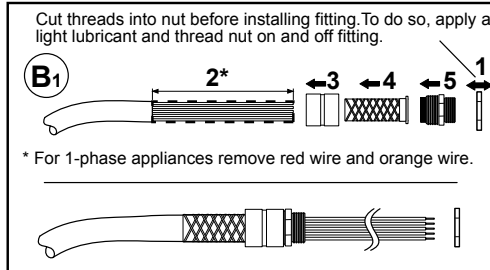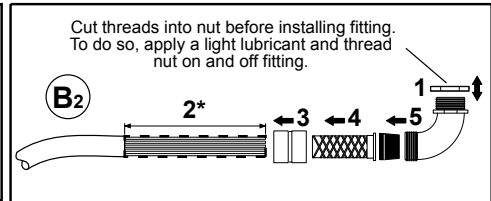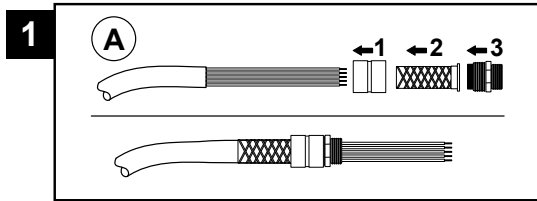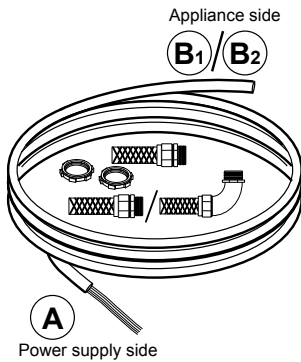



ELECTRICAL KIT INSTALLATION – 60 Hz

Applications for the Americas


Note: Cabling and connectors must be supplied for 120V configurations.

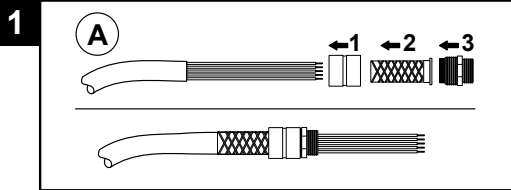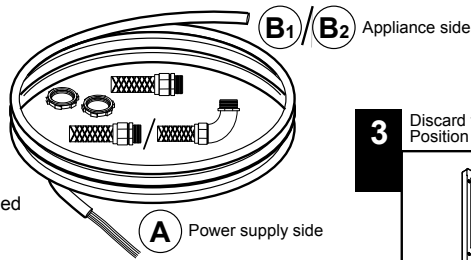


2 Remove enough cable covering so that wires reach the terminal strip. Depending on the application, install the straight or elbow fitting to the cable.

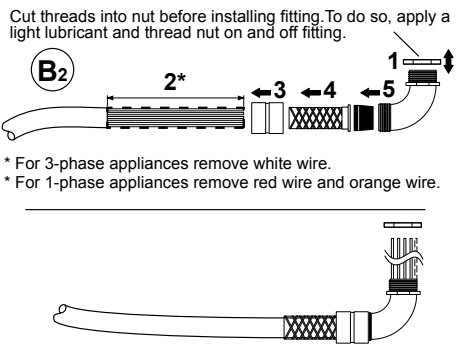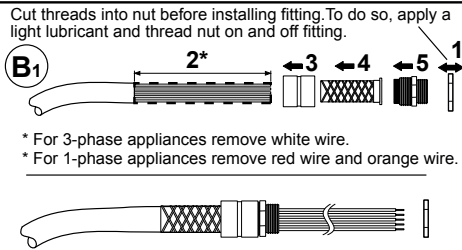


3 Discard the cover plate if applicable. Position and attach the support plate (x).

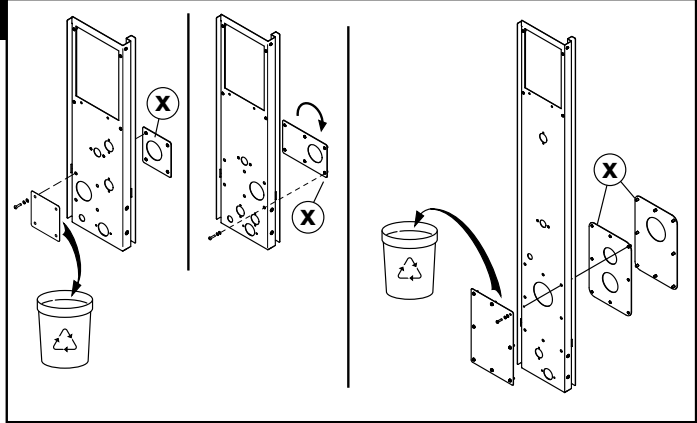


4 Install the fitting/wiring to the appliance. 1-1/2" NPT and smaller bushings through the bottom, all others through the back.

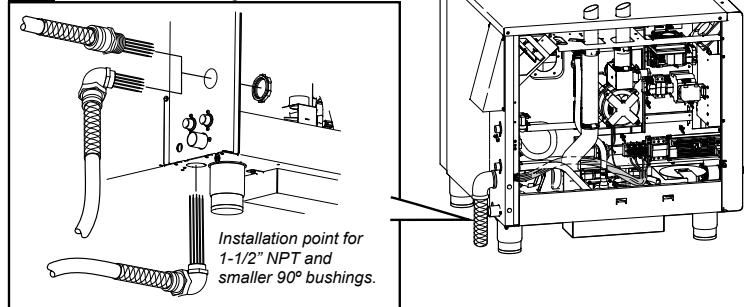

5 Route the wires. Keep wires away from hot surfaces such as water tank, drain pipe, motor, edges of sheet metal, vent pipes, or other appliances.

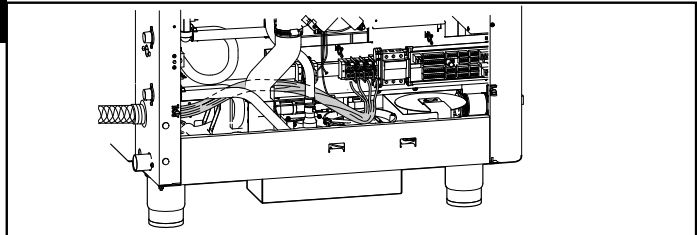

6 Strip the wires, then connect them to the terminal strip. Note: Illustrations are representative only. Your appliance may vary.

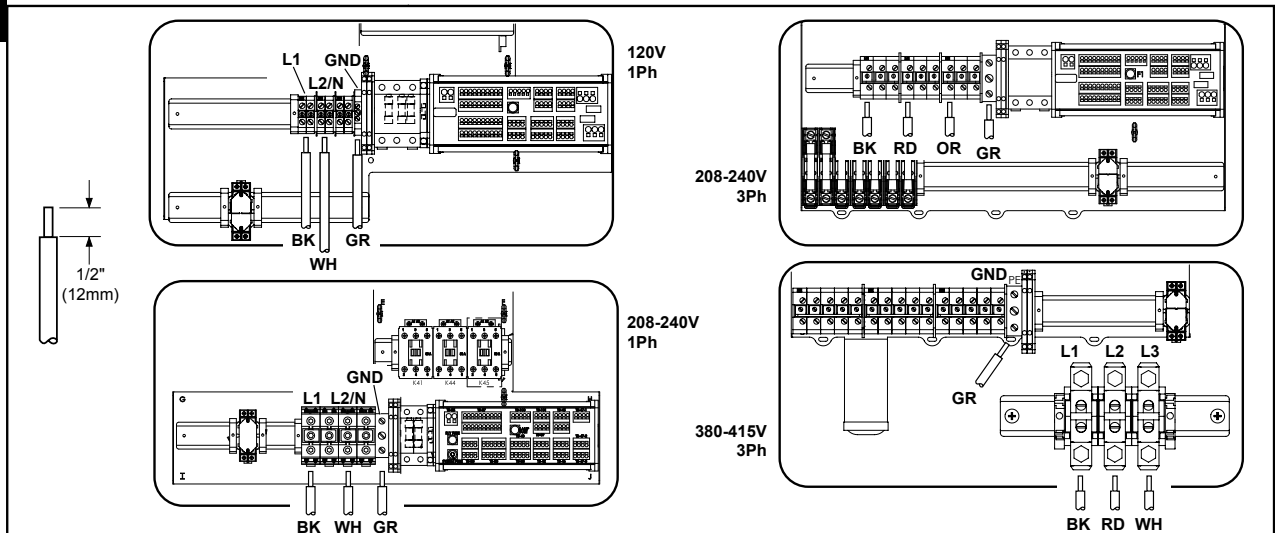

VENTILATION REQUIREMENTS FOR GAS MODELS

WARNING

To prevent **SERIOUS INJURY, DEATH, or PROPERTY DAMAGE:**

Installation, air adjustment and/or service work must be in accordance with all local codes and must be performed by a trained service technician qualified to work on gas appliances.

1. A single gas Combitherm oven requires a minimum of 28 CFM (793 LPM) make-up air for both natural and propane gas. The bottom of the oven allows necessary air flow into the appliance necessary for gas combustion and must be kept clear at all times.



DO NOT obstruct or restrict ventilation nor the air flow required to support combustion.

2. It is especially critical that gas supply piping and electrical support cord and/or receptacle be routed away from the path of the hot combustion fumes.
3. Make certain the oven installation maintains adequate air ventilation to provide cooling for electrical and gas components. The area around the oven should be clear of any obstructions which might impede the flow of cooling air. Failure to provide sufficient air ventilation may result in damage to the components and will void the warranty.
4. This oven cannot be direct vented.
5. Install the oven under a ventilation hood meeting all applicable code requirements. Combustion fumes must be vented in accordance with local, state, or national codes.

NOTICE

Inadequate ventilation, or failure to ensure an adequate air flow may result in high ambient temperatures at the rear of the appliance. High ambient temperatures can cause the thermal-overload protection device on the blower motor to trip resulting in severe damage to the blower motor.

An adequate ventilation system is required for commercial cooking equipment. The minimum ventilation system shall comply with local regulations and relevant codes. In the absence of local codes, the ventilation system shall comply with:

- USA and Canada: NFPA 96
- EU: EN203
- Australia/New Zealand: AS 1668.1 and AS 1668.2

The oven must be installed under a ventilation hood listed to ANSI/UL 705 (latest edition).

**WARNING**

DO NOT obstruct or block exhaust flues or attach any flue extension that may impede proper burner operation, restrict the exhaust fumes and cause negative backdraft or the appliance to shut down. Failure to do so may result in serious injury or death.

WARNING

Failure to properly vent this appliance may cause **SERIOUS INJURY, DEATH, or PROPERTY DAMAGE**. The formation of volatile substances may cause suffocation, equipment damage, operational problems and unsatisfactory cooking performance as a consequence of improper venting and is not covered by your warranty.

Ventilation hoods and exhaust systems shall be permitted to be used to vent appliances installed in commercial applications.

In accordance with NFPA 54 for the Commonwealth of Massachusetts only:

Where automatically operated appliances are vented through a ventilation hood or exhaust system equipped with a damper or with a power means of exhaust, provisions shall be made to allow the flow of gas to the main burners only when the damper is open to a position to properly vent the appliance and when the power means of exhaust is in operation.

GAS SUPPLY AND INSTALLATION

WARNING



To prevent SERIOUS INJURY or DEATH from fire or explosion:

Only connect the type of gas indicated on the identification nameplate. Your gas Combitherm® is equipped to operate using only the fuel type specified on the identification name plate. Should conversion from natural gas to propane or from propane to natural gas be desired, conversion parts must be ordered from Alto-Shaam. Conversions must be performed by an

Alto-Shaam authorized service provider only.

Always ensure the oven's nameplate reflects the intended fuel type for your oven.

Residential gas connections and hard-piped gas connections DO NOT meet NSF certifications and should NEVER be used with your Combitherm oven.

Please refer to model specifications for rated thermal loads and connected pressure requirements.

Natural	Cat	Gas Type
GR	II2H3B/P	2H-G20-20mbar
CY	II2H3B/P	2H-G20-20mbar
ES/FR/GB/IE/CH	II2H3P	2H-G20-20mbar
AT	II2H3B/P	2H-G20-20mbar
BE	II2E(S)3B/P	2H-G20-20mbar
DE	II2ELL3B/P	2E-G20/G25-20mbar
NL	II2L3B/P	2L-G25-25mbar
Butane/Propane Mixture	Cat	Gas Type
GR	II2H3B/P	3B/P-G30/G31-30mbar
CY	II2H3B/P	3B/P-G30/G31-30mbar
ES/FR/GB/IE/CH	II2H3P	3P-G31-30mbar
AT	II2H3B/P	3B/P-G30/G31-50mbar
BE	II2E(S)3P	3P-G31-30mbar
DE	II2ELL3B/P	3B/P-G30/G31-50mbar
NL	II2L3B/P	3B/P-G30/G31-30mbar
AUS/NZ	—	NGN 1.13 kPa
AUS/NZ	—	LPG-X Propane 2.75 kPa
Japan	—	Natural Gas 13A 1.96 kPa
Japan	—	LPG - Propane 2.8 kPa


Installation shall comply with local codes required for gas appliances. In the absence of local codes, installation shall comply with the latest edition of:

- USA: National Fuel Gas Code, ANSI Z223.1 (NFPA 54). And OSHA Regulations
- Canada: Natural Gas and Propane Installation Code, CAN/CSA-B149.1-15
- EU: European Standard EN203
- Australia/New Zealand: AS 5601

NOTICE: Connection components not supplied by Alto-Shaam must comply with the regulations in force of the country of use.

SEDIMENT TRAP REQUIRED:

A sediment trap shall be installed downstream of the appliance shutoff valve as close to the inlet of the appliance as practical at the time of appliance installation. The sediment trap shall be either a tee fitting with a capped nipple in the bottom outlet, as illustrated below or another device recognized as an effective sediment trap.

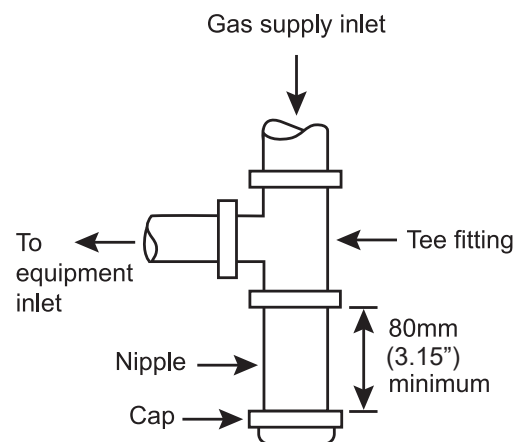

GAS SUPPLY AND INSTALLATION

WARNING



Improper installation, adjustment of burner pressures, alteration, service, maintenance, or use can cause carbon monoxide poisoning, explosion, fire, electrical shock, or other conditions which may cause **SERIOUS INJURY, DEATH or PROPERTY DAMAGE**. Consult a qualified and trained installer, service agency, local gas supplier, or your distributor for information or assistance. The qualified and trained installer or agency must use only factory-authorized and listed kits or accessories when modifying this appliance.

INSTALLATION REQUIREMENTS

GAS CONNECTION: 3/4" NPT

For Europe, gas connection thread fittings should conform to EN ISO 228-1, or ISO 7-1, or shall have a compression fitting.

If the appliance has casters, a restraint system must be installed. See section *Mobile Equipment Restraint*.

NOTE: If a flexible gas line is used, it must be AGA approved, commercial type and at least 3/4" I.D. or comply to European Standard EN203.

HOOD INSTALLATION IS REQUIRED

After installation, burner and gas valve should be checked and adjusted by a qualified and trained Alto-Shaam technician for proper operation and validate CO2 levels. **GAS VALVE MAY REQUIRE FIELD ADJUSTMENT ABOVE 2,000' (610m) AND IS NOT ADJUSTED AT THE FACTORY.**

WARNING




Electric shock hazard.

Perform lockout/tagout procedures before cleaning or servicing this appliance.


GAS TRAIN - ORIFICE

When converting gas units to either propane or natural gas you will need to provide the corresponding orifice and restrictor plate, and new serial data tags, part numbers: LA-26348 and LA-26349

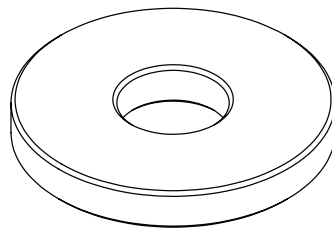

Item	Part	Description	Qty.
1	OR-35874	ORIFICE, GAS VALVE DISC 4.60mm, 6-10 G25, 10-20 G31, 20-20 G31	1
2	OR-35876	ORIFICE, GAS VALVE DISC 2.60mm, 6-10 G30	1
3	OR-35877	ORIFICE, GAS VALVE DISC 4.00mm, 10-10 G30, 20-10 G30, 7-20 G30	1
4	OR-35878	ORIFICE, GAS VALVE DISC 4.10mm, 10-10 G31, 20-10 G31, 10-20 G30, 20-20 G30	1
5	OR-35943	ORIFICE, GAS VALVE DISC 5.70mm, 10-10 G20, 20-10 G20, 10-20 G20, 20-20 G20	1
6	OR-36006	ORIFICE, GAS VALVE DISC 6.30mm, 7-20 G25	1
7	OR-36007	ORIFICE, GAS VALVE DISC 6.00mm, 10-10 G25, 20-10 G25	1
8	OR-36207	ORIFICE, GAS VALVE DISC 6.40mm, 10-20 G25, 20-20 G25	1
9	OR-36625	ORIFICE, GAS VALVE DISC 3.75mm, 6-10 G20	1
10	OR-36626	ORIFICE, GAS VALVE DISC 2.75mm, 6-10 G31	1
11	OR-36627	ORIFICE, GAS VALVE DISC 5.55mm, 7-20 G20	1
12	OR-36628	ORIFICE, GAS VALVE DISC 4.20mm, 7-20 G31	1

NOTE: Natural Gas = G20
 Propane = G31
 Butane = G30
 Low Calorific Natural Gas = G25

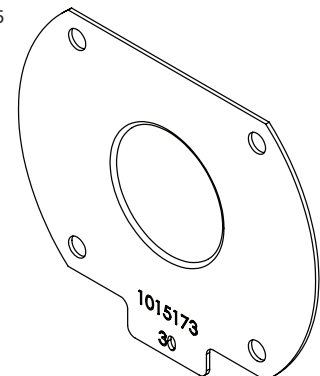

GAS TRAIN - RESTRICTOR PLATE

Item	Part	Description	Qty.
1	1012504	PLATE, RESTRICTOR COMBI, 20mm, 10-20 G30, 20-20 G30	1
2	1012817	PLATE, RESTRICTOR COMBI, 25mm, 7-20 G25	1
3	1013843	PLATE, RESTRICTOR COMBI, 14mm, 6-10	1
4	1013844	PLATE, RESTRICTOR COMBI, 21mm, 10-20 G25, 20-20 G25	1
5	1013845	PLATE, RESTRICTOR COMBI, 22mm, 10-20 G20, 10-20 G31, 20-20 G20, 20-20 G31	1
6	1014619	PLATE, RESTRICTOR COMBI, 17mm, 10-10 G31, 10-10 G30, 20-10 G31, 20-10 G30	1
7	1015074	PLATE, RESTRICTOR COMBI, 18mm, 10-10 G20, 10-10 G25, 20-10 G20, 20-10 G25	1
8	1015075	PLATE, RESTRICTOR COMBI, 23mm, 7-20 G31	1
9	1015076	PLATE, RESTRICTOR COMBI, 24mm, 7-20 G20, 7-20 G30	1

GAS SUPPLY AND INSTALLATION

WARNING



To prevent **SERIOUS INJURY, DEATH, or PROPERTY DAMAGE**:



Installation, air adjustment and/or service work must be in accordance with all local codes and must be performed by a trained service technician qualified to work on gas appliances.

Remove any tape or compound residue on all external thread connections before proceeding.

Use an approved gas pipe sealant at all external threaded connections, Gas piping used on gas

connections must avoid sharp bends that may restrict the flow of gas to the appliance. If the connected pressure exceeds 14.0" W.C. (3.5 kPa), a step-down regulator is required to be supplied by the owner/operator.

Close the individual manual shut-off valve to **isolate the appliance** from the gas supply piping system during any pressure testing at test pressures equal to or less than 1/2 psig (3.4 kPa). The appliance and individual shut-off valve **must be disconnected** from the gas supply piping system during any pressure testing at pressures in excess of 1/2 psig (3.4 kPa).

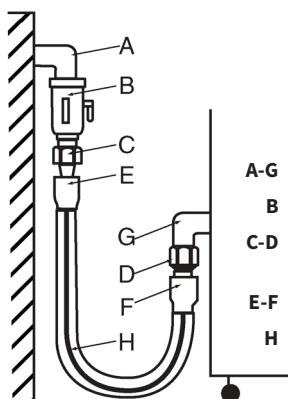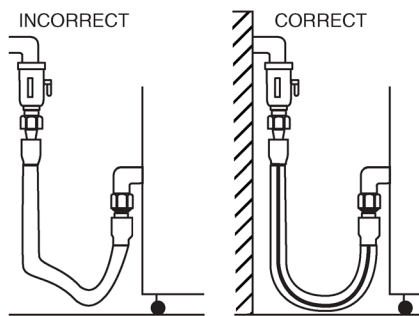

- GAS INTAKE**
- A-G Installation elbow
 - B Ball Valve
 - C-D Three-piece union fitting (minimum 1 per installation)
 - E-F End connector for the flexible tube
 - H Marking line



WARNING



To prevent personal injury, death or property damage:

Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

WARNING



To prevent **SERIOUS INJURY, DEATH or PROPERTY DAMAGE**:

DO NOT spray aerosols in the vicinity of this appliance when in operation.



CAUTION



To prevent **INJURY or PROPERTY DAMAGE**, make certain the area around the appliance is kept clear of combustible items.

In the U.S.A., installation must conform to local codes or, in the absence of local codes, with the current edition of the **National Fuel Gas Code**, NFPA-54 and ANSI Z83.11a CSA 1.8a 2004 (or latest edition). In Canada, installation must be in accordance with local codes, CAN/CGA-B149.1, **Installation for Natural Gas Burning Appliances and Equipment** (latest edition) or CAN/CGAB149.2 **Installation for Propane Burning Appliances and Equipment** (latest edition). In Europe, installation must be in accordance with European Standard EN203.

The inlet supply line must be properly sized to accommodate all individual appliances simultaneously used on the same line but must never be smaller than 3/4" NPT.

GAS SUPPLY AND INSTALLATION

WARNING

To prevent SERIOUS INJURY, DEATH, or PROPERTY DAMAGE:

Always use proper length pipes to avoid stress on the gas control manifold.

Always use an approved gas pipe sealant at all external threaded connections.

Always remove any tape or compound residue on all external thread connections before installing appliance.

The minimum size requirement for gas piping or a flexible connector is 3/4 inch (19mm). For long runs of gas piping, the pipe diameter must conform to the tables in the National Fuel Gas Code, ANSI/NFPA Z223.1 or European Standard EN203.


A listed gas shut-off valve must be installed upstream of the appliance to shut off the gas supply during servicing. The shut-off valve should be accessible with the appliance in the normal installation position.

If the oven or the oven stand is supplied with casters, the gas connection must be made with a flexible connector that complies with the Standard for Connectors for Movable Gas Appliances, ANSI Z21.69; or in Canada, Connectors for Movable Gas Appliances, CAN/CGA-6.16-M87. When using a flexible connector, a quick disconnect device must be used to comply with the Standard for Quick-Disconnect Devices for Gas Fuels, ANSI Z21.41; or in Canada, Quick Disconnect Devices for Use with Gas Fuels, CAN1-6.9 or European Standard EN203. In Australia / New Zealand AS 5601, AS 1869.

When a quick disconnect device and flexible connector are used, a restraining device must be installed to limit the movement of the appliance and prevent damage to the connector or quick disconnect. An example of a restraining device is a 2000 pound (907kg) test stainless steel cable, attached to a structural member of the kitchen wall behind the oven. The means of attachment should consist of a quick connect snap so the oven can be disconnected when the appliance must be moved away from the wall.

The other end of the cable should be permanently attached to the rear frame of the oven. The cable should be of sufficient length so that no strain is ever placed on the flexible gas connector in the event of accidental movement of the oven without properly disconnecting the gas connector. The flexible connector should be routed to form a downward "U" loop between the building gas supply and the permanent attachment at the rear of the oven.

The routing of the flexible connector must not run along the side of the exhaust stacks or cross the exhaust stacks. Oven temperatures achieved during operation are too hot for safe operation. Gas piping should be installed from the point of gas connection at the back of the oven and run away from the exhaust stacks where the flexible connector may be safely used. See the illustration for the area to avoid.

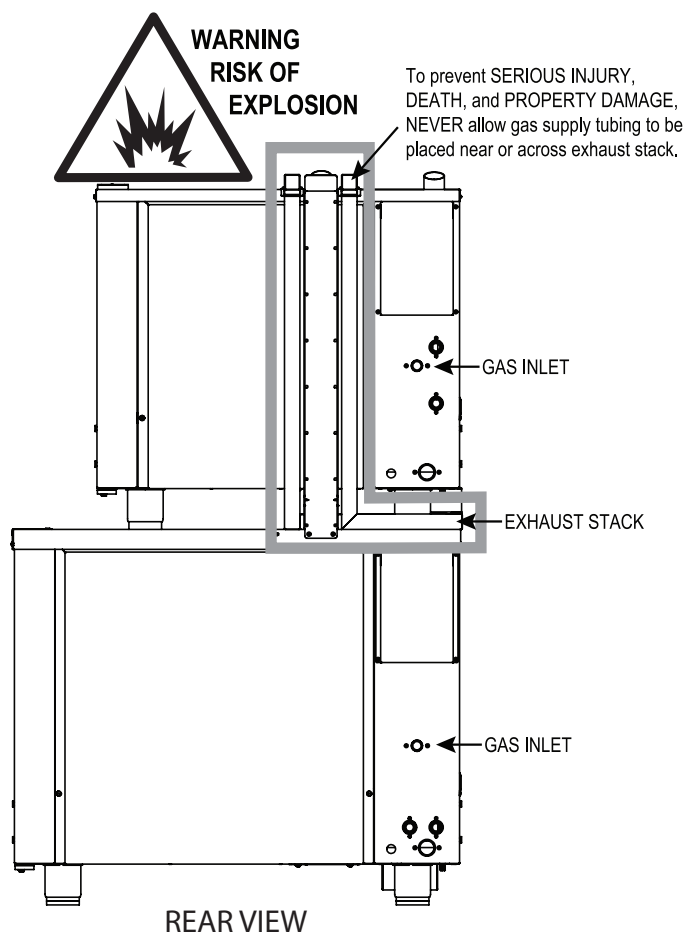

GAS SUPPLY AND INSTALLATION

GAS LEAK TESTING

If a pressure leak test above 1/2 psi (34.5 mbar) is to be performed on the building supply gas piping, the shut-off gas valve and oven inlet gas supply line must be disconnected from the building supply piping before conducting the pressure test. Failure to do so may result in damage to the manual gas valve, gas components in the oven, or both.

If any gas leak tests are to be conducted at pressures equal to or below 1/2 psi (34.5 mbar), the manual gas shut-off valve upstream of the oven must be turned off before conducting the tests.

Leak testing of the internal oven piping system was conducted before shipping the oven from the factory. If additional testing is needed, it should only be conducted at normal gas supply pressures. If the testing is performed using combustible gas in the piping, the leak checking should be done with a soap solution (bubble checking).

The use of an electronic combustible gas leak detector is helpful, however, this type of detector can be oversensitive. Electronic detectors may indicate false leaks from other sources which would not be detected when checking with a liquid solution to verify a no-hazard gas connection.


When starting the oven after initial installation, the gas lines must be free of air. It may take up to 30 minutes to eliminate all air from the lines. If, after this time there is no heat, call for factory assistance.

GAS EXHAUST

The oven is not designed for direct connection to a chimney vent system or for direct connection to a horizontal exhaust system.

The oven must be installed under a ventilation hood.

Oven operators should be instructed with regard to the hazards of placing any material on top of the oven that would obstruct the flow of flue products out the opening of the flue diverter. Operators should also be instructed with regard to the hazards of hot flue gases and that any material or items placed on top of, or in front of the flue deflector could be damaged or cause a fire hazard.

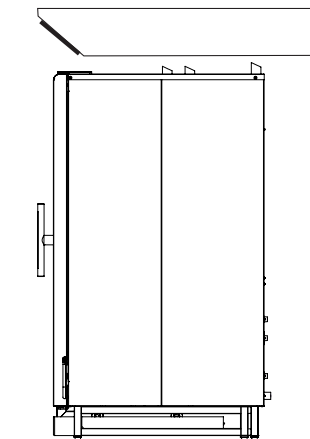

WARNING



Never use an open flame or other ignition sources to check for gas leakage. Failure to do so may cause a fire or explosion and result in serious injury or death.

DANGER



Explosion hazard. Before starting the appliance, make certain you do not detect the odor of gas.

If you smell gas:

- Shut off the gas supply immediately.
- Do not attempt to light any appliance.
- Do not touch any electrical elements.
- Extinguish any open flame.
- Evacuate the area.
- Use a telephone outside the property and immediately contact your gas supplier.
- If unable to contact your gas supplier, contact the fire department.

WARNING




DO NOT obstruct or block exhaust flues or attach any flue extension that may impede proper burner operation, restrict the exhaust fumes and cause negative backdraft or the appliance to shut down. Failure to do so may result in serious injury or death.

WATER QUALITY REQUIREMENTS

Water Quality Requirements

Use a drinking quality, cold water supply only.


WARNING

Significant damage to the appliance cavity, elements, or heat exchanger could result from improper water quality. Failure to meet the water quality requirements and observe this precaution will void the warranty.

Water quality is of critical importance when installing steam producing equipment of any kind, particularly high temperature steam producing equipment. Water that is perfectly safe to drink is composed of chemical characteristics that directly affect the metal surfaces of steam producing equipment. These chemical characteristics differ greatly from region to region throughout the U.S. and the world. Varying combinations of pH; alkalinity; hardness; chlorides; total dissolved solids; and other chemical characteristics, when subjected to high temperatures, will cause water to have a tendency to either scale or corrode.

Alto-Shaam has consulted with people who understand the properties of water in order to provide water quality standards that meet the broadest possible range of acceptable water quality requirements to help protect your investment.

We strongly urge water testing to ascertain the water quality on site prior to the installation of any steam producing equipment. Since water quality is an important issue, Alto-Shaam is committed to provide as much information as possible to help protect the investment made in this equipment.


A water filtration system, when properly installed, maintained, and combined with the required levels of steam producing equipment maintenance, will help lessen the affect water has on metal surfaces. It will not, however, provide complete protection against all water damage from region to region.

Due to the complexity of water chemistry, it is important to understand that water quality plays a significant role in the longevity of steam producing equipment. Water quality and required maintenance of steam generating equipment is the direct responsibility of the owner/operator. Damage incurred as a direct result of poor water quality and/or surfaces affected by water quality is also the responsibility of the owner/operator. Damage due to water quality that does not meet the minimum standards shown below is not covered under the Alto-Shaam Combitherm warranty.


Inlet Water Requirements		
Contaminant	Treated Water	Untreated Water
Free Chlorine	Less than 0.1 ppm (mg/L)	Less than 0.1 ppm (mg/L)
Hardness	30-70 ppm	30-70 ppm
Chloride	Less than 30 ppm (mg/L)	Less than 30 ppm (mg/L)
pH	7.0 to 8.5	7.0 to 8.5
Silica	Less than 12 ppm (mg/L)	Less than 12 ppm (mg/L)
Total Dissolved Solids (tds)	50-125 ppm	50-360 ppm

It is the sole responsibility of the owner/operator/purchaser of this equipment to verify that the incoming water supply is comprehensively tested and, if required, a means of “water treatment” provided that would meet compliance requirements with the published water quality standards shown below. Non-compliance with these minimum standards will potentially damage this equipment and/or components and void the original equipment manufacturer’s warranty. Alto-Shaam recommends using the Alto-Shaam Reverse Osmosis System to properly treat your water.

Alto-Shaam will continue our efforts to provide viable solutions to ease the impact of water quality as it relates to heat producing equipment.



NOTICE: To prevent water pipes from bursting, shut the incoming water supply off when the appliance is not in use.



NOTICE: Make sure the water supply is open before starting the cleaning program.

WATER SUPPLY AND INSTALLATION

WARNING

Significant damage to the appliance cavity, elements, or heat exchanger could result from improper water quality. Failure to meet the water quality requirements and observe this precaution will void the warranty.

- Flush the water line at the installation site.
- **Backflow Prevention** – The equipment must be installed with a check-valve or other anti-backflow/anti-siphon device on all inlet water lines in accordance with and as required by national, state, and local health, sanitation and plumbing codes.
- **PIPE SEALING TAPE (Teflon®) MUST BE USED AT ALL CONNECTION POINTS.** The use of a pipe sealing compound is not recommended.
- Install a manual water shut-off valve between the main cold water supply line(s) and Combi supply lines.



WARNING

Bursting water supply lines may cause serious injury or flooding. Always turn OFF incoming water supply valves when the oven is not in use.

NOTICE:

Untreated water supplies will permanently damage the water system in this oven. Two water supplies are required for proper operation. At least one **MUST** be treated.

Supply lines should be flexible to allow oven to be moved when service or cleaning is needed.

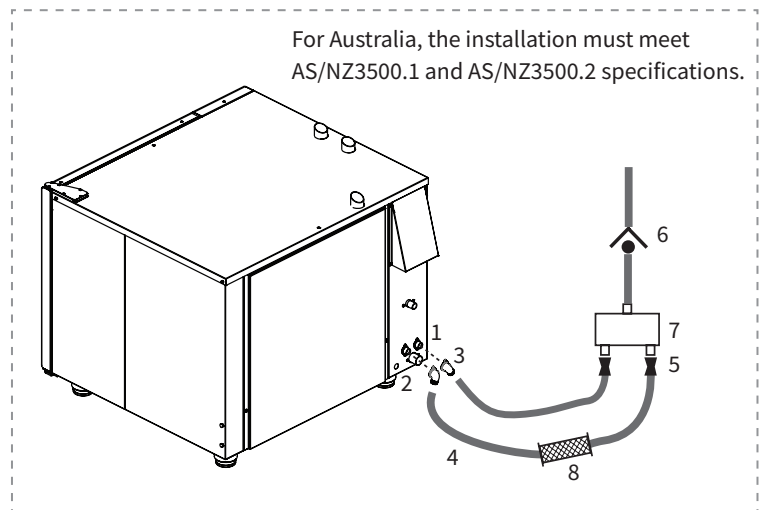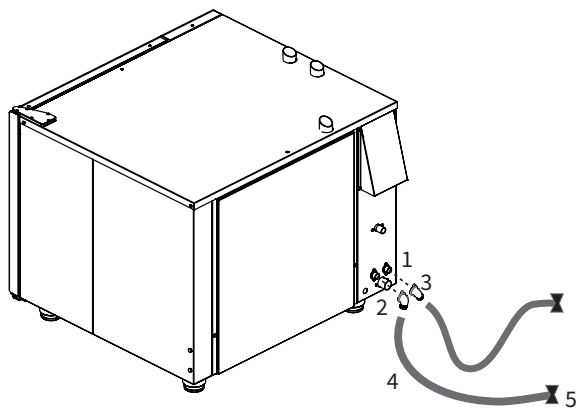


- | | |
|--|---------------------------------|
| 1. Untreated water inlet | 5. Shut-off valve |
| 2. Treated water inlet | 6. Check Valve (inspect yearly) |
| 3. Install a 90° fitting whenever possible on each water line. | 7. Manifold |
| 4. Connect a flexible water line to each inlet fitting. | 8. Filter |

WATER DRAINAGE – FOR SINGLE OVEN

A union is required. Install a 1-1/2-inch (40mm) diameter connection, drain line and clamp into place. The drain line must always be a positive gradient away from the Combitherm oven. An end of drain run air gap may be required by local code. Vertical air vent required.


NOTICE: In the U.S.A., this equipment is to be installed to comply with the Basic Plumbing Code of the Building Officials and Code Administrators International, Inc. [BOCA], and the Food Service Sanitation Manual of the Food & Drug Administration [FDA].

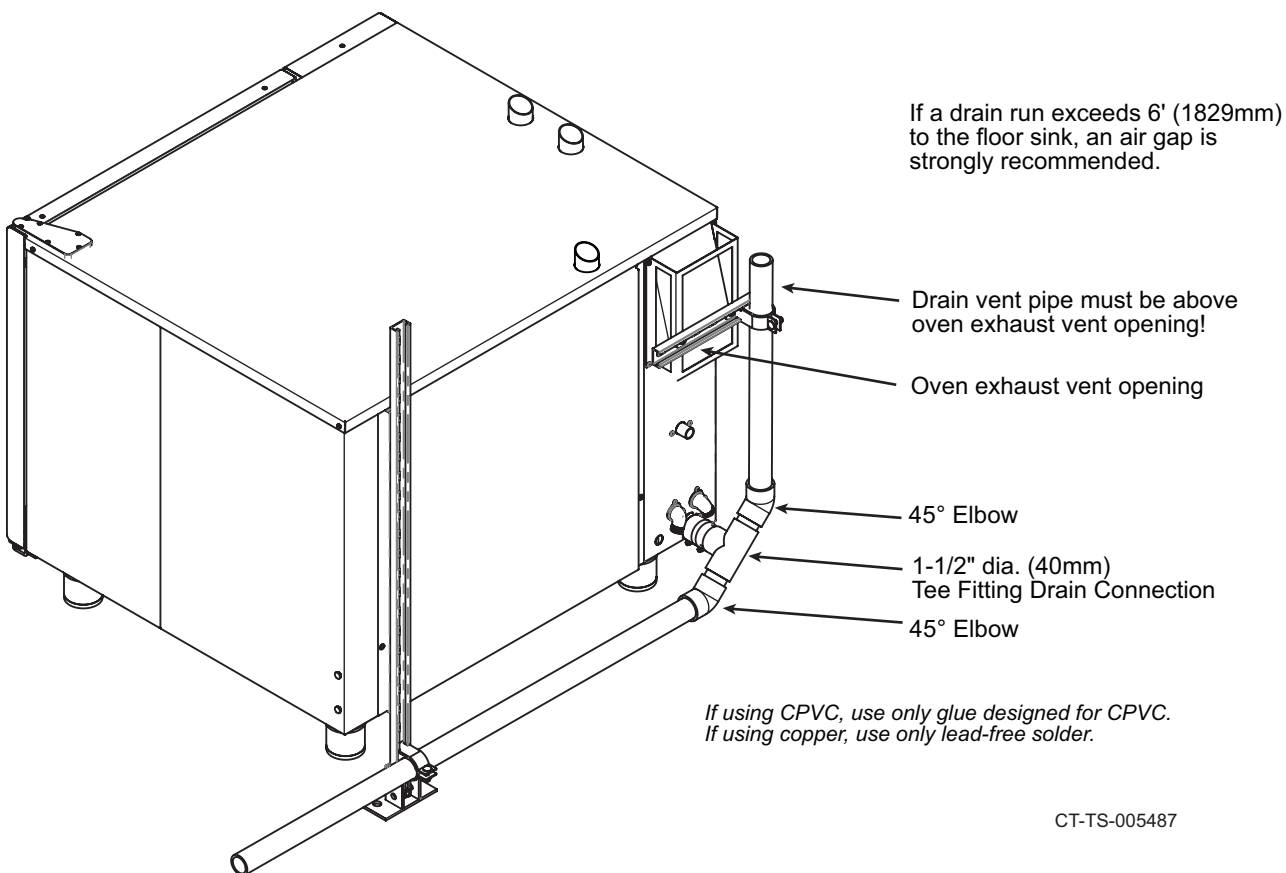

SPECIAL NOTES FOR WHEN STACKING DISSIMILAR UNITS

When installing two dissimilar units, for example, a CTP 7-20 over a VMC-F4, consult the specification sheet of each unit for the required clearances. Always use the largest clearance dimension when a choice between two competing dimensions needs to be made.


Always plumb the units in such a way that does not inhibit the ability to remove access panels, clean filters, or install the utilities of the companion unit.

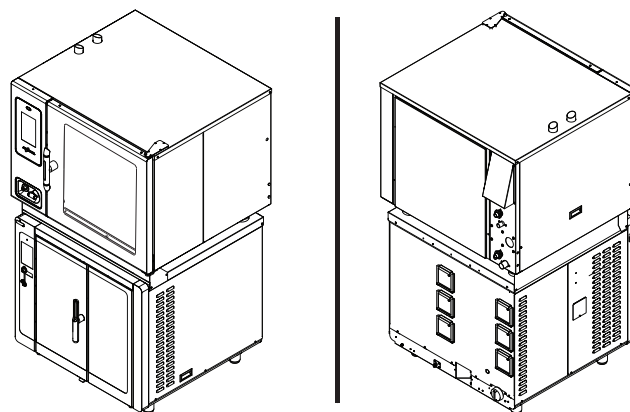

WATER DRAINAGE – FOR STACKED OVEN

A union is required. Install a 1-1/2-inch (40mm) diameter connection, drain line and clamp into place. The drain line must always slope downwards away from the Combitherm oven. An end of drain run air gap may be required by local code. Vertical air vent required.

NOTICE: In the U.S.A., this equipment is to be installed to comply with the Basic Plumbing Code of the Building Officials and Code Administrators International, Inc. [BOCA], and the Food Service Sanitation Manual of the Food & Drug Administration [FDA].

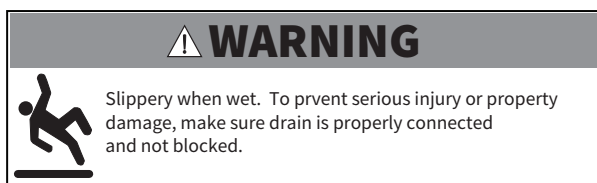

Local codes may require that the type of material used for the drain pipes be different than the CPVC pipes provided in the installation kit. In such cases, any costs associated with changing the drain pipes to meet the local codes are the responsibility of the end user.


Installation kits have a maximum run length of 4-1/2' (1372mm).

One suggested method of drain installation.

Drain materials must withstand temperatures up to 200°F (93°C).

If a drain run exceeds 6' (1.8m) to the floor sink, an air gap is strongly recommended.

When stacking ovens, run independent drains.

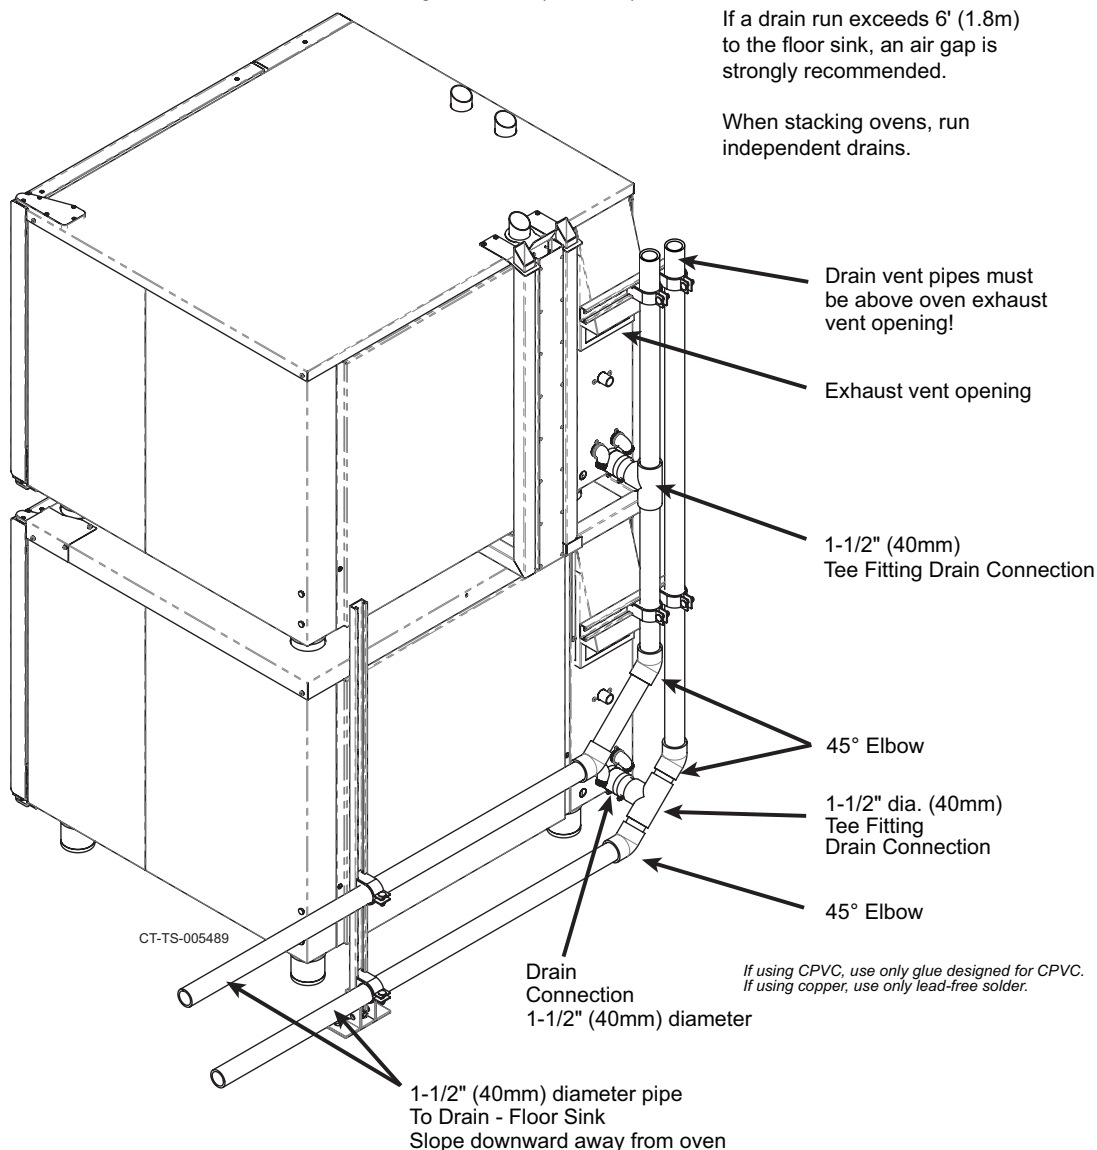

MOBILE EQUIPMENT RESTRAINT

For Gas Models:

The gas Combitherm must use a connector that complies with The Standard for Connectors for Movable Gas Appliances, ANSI Z21.69 CSA 6.16 and addenda Z21.69a-1989. A quick disconnect device must be installed to comply with The Standard for Quick Disconnect Devices for Use with Gas Fuel, ANSI Z21 CSA 6.9. and European Standard EN203.


Adequate means must be provided to limit the movement of this appliance. Limitation of movement must be made without depending on the connector, the quick disconnect device, or the associated piping designed to limit appliance movement. If it becomes necessary to disconnect the restraint, it must be reconnected immediately following the return of the appliance to its original position.

1. Install a manual gas shut-off valve along with an approved disconnect device.
2. Install an A.G.A. certified, heavy-duty connector that complies with ANSI Z 21.69 or CAN 1-6.10m88 along with a quick-disconnect device in compliance with ANSI Z21.41 or CAN 1-6.9m70. Connectors must be installed with a cable restraint to prevent excessive tension from being placed on the connector.

 WARNING	
	FIRE HAZARD.
	To prevent SERIOUS INJURY or DEATH , your appliance must be secured to building structure to prevent unintended movement.

For Electric Models:

This section is provided for the assistance of qualified and trained service technicians only and is not intended for use by untrained or unauthorized service personnel. Failure to observe this precaution may void the warranty.

 WARNING	
	ELECTRIC SHOCK HAZARD.
	To prevent SERIOUS INJURY or DEATH , your appliance must be secured to building structure to prevent unintended movement.

Any appliance that includes a set of casters must be installed with a tether. Adequate means must be provided to limit the movement of this appliance without depending on or transmitting stress to the electrical conduit. The following requirements apply:

1. Casters must be a maximum height of 6" (152mm).
2. Two of the casters must be the locking type.
3. Such mobile appliances or appliances on mobile stands must be installed with the use of a flexible connector secured to the building structure.

A mounting connector for a restraining device is located on the lower back flange of the appliance chassis or on an oven stand, approximately 18" (457mm) from the floor. A flexible connector is not supplied by, nor is it available from, the factory.

NOTICE: The mobile base used on stacked ovens is not adjustable. The equipment must be placed on a stable, non-combustible, level, horizontal surface.

SPECIAL CONDITIONS FOR UNITS INSTALLED WITHIN THE CITY OF NEW YORK

1. Installation and start up must be performed by an Alto-Shaam authorized installation company.
2. Operating instructions in the manual must be read and understood by all persons using the appliance. The person responsible for training of the operators is responsible for the safekeeping of the manual.
3. A ventless hood condensate drain line to the floor drain shall be installed as applicable. The drain line must always be a positive gradient away from the Combitherm.
4. The grease filter(s) shall be cleaned at least once a week. The disposable dry-type air filter(s) should be inspected for contaminants on a regular basis. Replacement must be made at a minimum of three month intervals. A hood maintenance log must be included with the unit and shall be completed at the intervals indicated.
5. The filter interlocks shall be inspected/tested at least every 6 months.
6. Suitable fire protection shall be provided for each installation. This protection system is subject to FDN Range Hood Inspection Unit's inspection and approval.
7. Installation, maintenance, and cleaning procedures shall comply with all applicable New York City Fire Code, New York City Electric Code, Land Construction Codes (including the Building Code and the Mechanical Code) rules and regulations.
8. Underwriters Laboratories, Inc.'s listing requirements and limitations shall be complied with and manufacturer's installation procedures, maintenance procedures, and safety limitations shall be complied with.
9. The ductless hood and Combitherm unit shall be used for light duty cooking only and the entire ductless hood on a combi oven with grease filter I air filter shall be inspected, cleaned, and replaced if necessary by qualified person holding a Certificate of Fitness type W-64 or F-64. A record of such inspection and cleaning shall be kept on the premises for inspection.
10. The Certificate of Approval number shall be plainly and permanently labeled upon the appliance.
11. All installations shall be subject to inspection by representatives of the Bureau of Fire Prevention which may result in added requirements being imposed.
12. The Fire Department reserves the right to make periodic inspections of the above referenced ductless hood on a combi oven without warning to ensure that maintenance requirements are being followed. These audit inspections will be solely at the discretion of the Fire Department.

HOW TO TEST THE FILTER INTERLOCKS

1. Set the oven to Convection cook a 350°F for two minutes and 30 seconds.
2. Verify that the hood is operating. There should be no error codes and hood fan will be running and audible.
3. With approximately two minutes remaining in the cook cycle, the fan will shift to high speed. This shift in fan speed will be audible.
4. Remove the left grease filter from the hood. Confirm that the control displays E101 or E102 error codes. In stacked configurations, both controls will display the error codes. Re-install the filter and clear the error codes.
5. Repeat Step 4 with the right grease filter.
6. End the cook cycle when the test is complete.

LIQUID CLEANER HOOK-UP (IF EQUIPPED WITH THIS OPTION)



- Removable, cleaner support tray can be mounted on the left or right exterior wall of the oven. Slide slotted openings on the tray over the mounting studs.
- Support tray holds a 2-1/2-gallon (9,5 liter) bottle and measures 10-1/2" x 7-3/4" (267mm x 194mm).
- Place liquid oven cleaner bottle inside tray.
- Wearing protective rubber gloves and eyewear, remove cap from liquid oven cleaner bottle. Pull out the Cleaner Cap and Tubing Assembly from the back of the unit, and screw onto liquid oven cleaner bottle.
- Position cap to ensure the hose is not kinked after tightening.
- Combitherm liquid oven cleaner jugs are quickly and easily replaced.
- Combitherm liquid oven cleaner is automatically pumped through the system, saving labor and providing greater employee safety by eliminating the need to handle caustic cleaning liquids each day.

⚠ WARNING

ALWAYS wear protective eyewear and rubber gloves when using liquid oven cleaner to prevent eye, skin, and respiratory tract irritation.

Keep out of reach of children.


See Safety Data Sheet for additional information.

⚠ WARNING

To prevent SERIOUS INJURY or DEATH, NEVER operate this appliance in a cleaning mode without the liquid cleaner connected, with a kink in the cleaning hose line, or with an empty liquid cleaner container. Failure to do so may result in poor oven cleaning, grease and/or carbon accumulating inside the oven cavity and increased risk of fire.


⚠ WARNING

To prevent **serious personal injury, death, or property damage:**




The appliance must be cleaned thoroughly to avoid deposits of grease and or food residues inside the appliance that may catch fire. If fat deposits and/or food waste inside the appliance ignite, shut down the appliance immediately and keep the appliance door closed to extinguish the fire. If further extinguishing is required, disconnect the appliance from the main power and use a fire extinguisher (do not use water to extinguish a grease fire!). Failure to clean the appliance properly invalidates the warranty and relieves Alto-Shaam of all liability.

GREASE COLLECTION INSTALLATION (IF EQUIPPED WITH THIS OPTION)

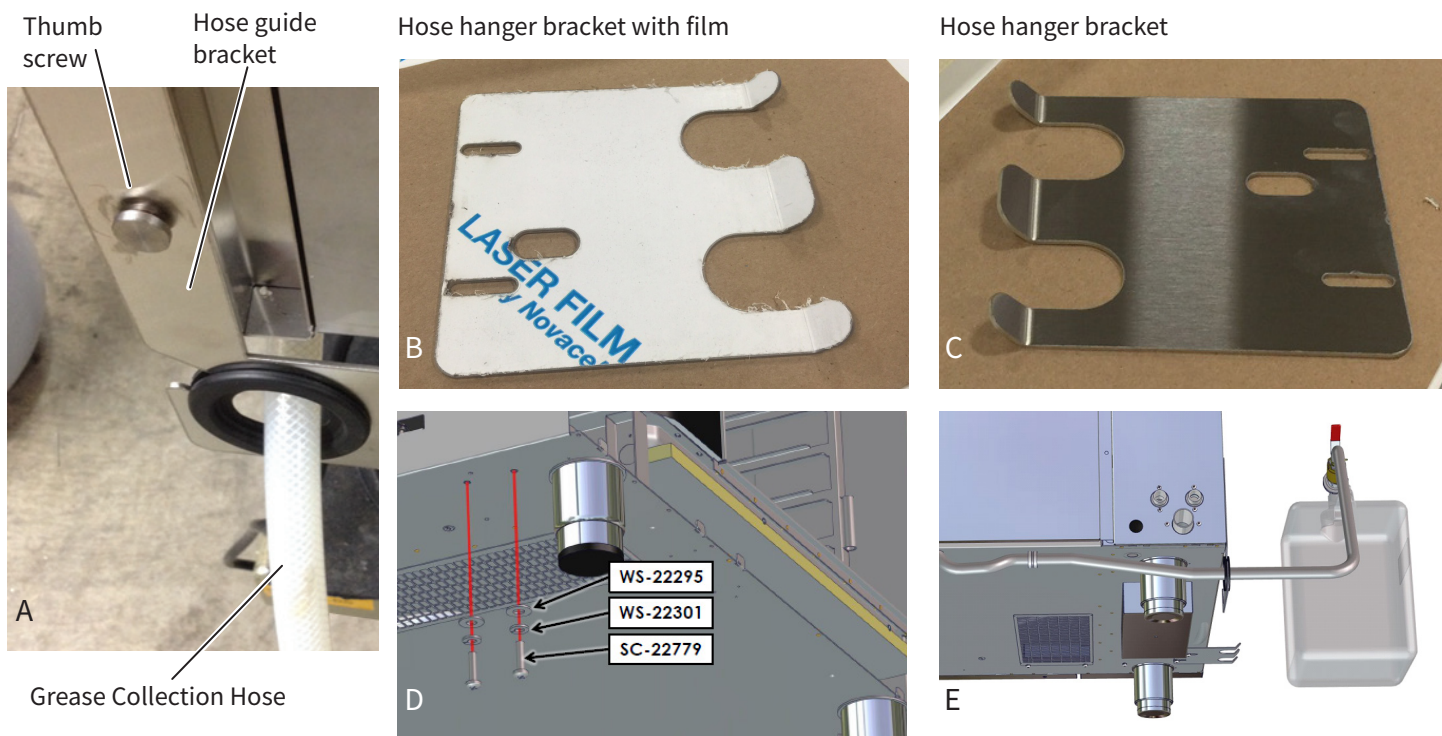

- Grease Collection Hose Assembly is attached to the oven in the back.
- The hose guide bracket can be attached on either the left side or the right side toward the back. **Placement on the left side is recommended whenever possible.** Thumb screws are in position for this purpose. Remove thumb screws, position hose guide bracket and secure screws (PHOTO A). Thread grease hose through the guide.
- The hose hanger bracket can be attached on either the left side or the right side toward the front of the oven. **Placement on the left side is recommended whenever possible.** Remove the plastic protective film from the bracket (PHOTO B,C). Pan head screws are in position beneath the oven for this purpose. **For stacked configurations, always place the hanger bracket on bottom of the top oven.** Remove pan head screws and washers (PHOTO D), position hose hanger bracket on either side of the oven and secure screws and washers (PHOTO E,F). The hanger bracket is used to secure the grease collection hose while changing grease collection containers.
- Place Grease Collection Containers inside the tray of the Mobile Grease Collection Cart. Roll into place next to the oven and **apply the caster brake.**
- **Loosen vent cap on container.** Pull out the Grease Collection Hose Assembly from the back of the unit. Remove collection container fill cap (PHOTO G).
- Screw Grease Collection Hose Assembly on to collection container until snug.
- Turn ball valve handle to the **ON** position.

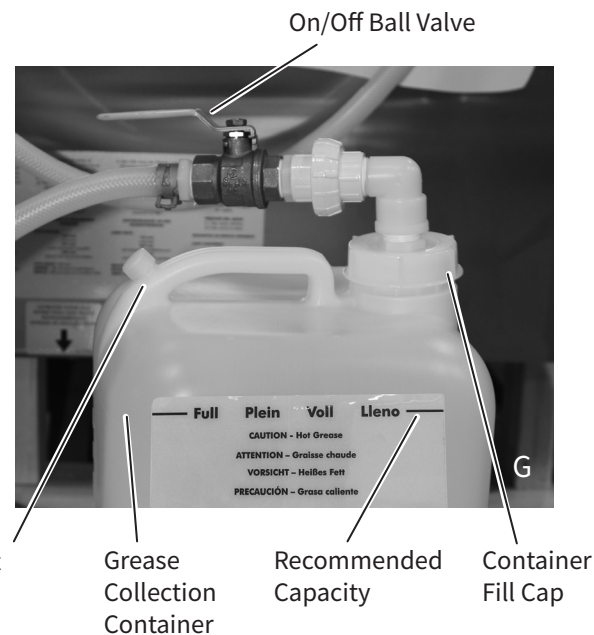

How To Turn On the Appliance

Before you begin

1. Turn on the exhaust hood.
2. Make sure that the water supply to the appliance is turned on.
3. Make sure that the electrical power supply to the appliance is turned on.
4. For gas appliances, make sure the gas supply valve is in the open position.


Steps

1. Press the ON/OFF button .

The ON/OFF indicator glows green and the loading screen ① displays while the controller software loads. When the software is 100% loaded, the home screen ② displays.

NOTE: If the appliance has a steam generator, the steam generator fills with water and the appliance heats the water to an initial temperature of 188°F (77°C).

How To Start a Manual Calibration

1. Make sure the appliance is off.
2. Press and hold the ON/OFF button  for eight (8) seconds. The ON/OFF indicator glows red and the calibration prompt ③ displays.

The prompt moves from the center to all four corners of the screen. This sequence repeats three (3) times. Then the calibration screen ④ displays.

NOTE: The first time the appliance is turned on, or if the appliance loses power during startup, the touchscreen calibration prompt ③ displays at the end of the next startup.

NOTE: Touch the check mark icon  to start calibration immediately. Touch the cancel icon  to cancel calibration.

How To Calibrate the Touchscreen


1. Touch the target icon (+) each time it appears on screen. The icon appears in all four corners, then the center of the screen.

NOTE: If the controller software has not been updated to the current version, calibration stops when this step is complete. Download the current controller software from the Alto-Shaam website and install it.

2. The verification screen ⑤ displays. Touch all five target icons . The icons change to green boxes when they are touched.

NOTE: The calibration screen and verification screen both display a 30-second countdown. If you do not touch all five icons before the countdown is complete, the controller stops calibration. If you do not see the countdown, download the current controller software from the Alto-Shaam website and install it.

How To Turn Off the Appliance

1. Press and hold the ON/OFF button  for five to ten (5-10) seconds.

DANGER



Before starting the appliance, make certain you do not detect the odor of gas.


If you smell gas:

- Shut off the gas supply immediately.
- Do not attempt to light any appliance.
- Do not touch any electrical elements.
- Extinguish any open flame.
- Evacuate the area.
- Use a telephone outside the property and immediately contact your gas supplier.
- If unable to contact your gas supplier, contact the fire department.

CAUTION



Accumulations on the main burners of gas appliances can result in firing out of normal sequence. This delayed ignition creates an alarmingly loud sound. If your appliance makes an especially loud noise when starting up, shut down the appliance and call a qualified and trained service technician.

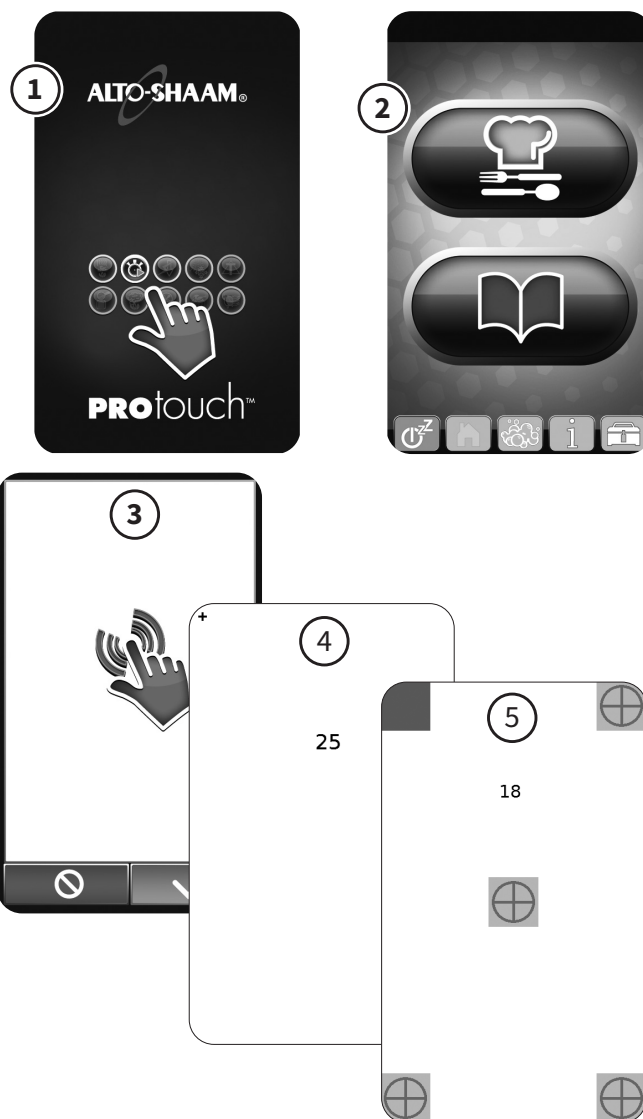

How To Run a Cycle Test of the Appliance

Run the cycle test in combination cook mode

1. Touch the professional cooking mode icon ① in the home screen. The cooking screen displays.
2. Touch the icon for the combination cook mode ②.
3. Touch the displayed temperature ④.
The touchpad displays.
4. If necessary, use the number keys ⑧ to set the cooking temperature to 350°F (177°C), then touch the check mark icon ⑨.
5. Touch the displayed time ⑤. The touchpad screen displays.
6. Use the number keys ⑧ to enter the cooking time (00:15:00), then touch the check mark icon ⑨.
7. Touch the start icon ⑥. The start icon changes to a red square (stop icon) and the appliance begins cooking.
8. Make sure that the appliance cycles correctly.
 1. The appliance raises the cavity temperature to the set temperature.
 2. The appliance cycles off by itself when the set temperature is reached.
 3. The appliance idles until the cavity temperature drops below the set temperature.
 4. The appliance cycles back on by itself until the cavity temperature again reaches the set temperature.


Allow the appliance to run through several cycles.

Cool down the appliance

1. Touch the stop icon ⑥ to stop the cooking process.
2. Touch the cool down icon ⑦. The touchpad screen displays.
3. Use the number keys ⑧ to set the cool down temperature to 110°F (43°C).
4. Open the appliance door.
5. Touch the check mark icon ⑨. The fan activates.
The cool down screen (not shown) displays the cavity temperature at the top and the cool down temperature at the bottom.
The fan turns off when the cavity temperature matches the set cool down temperature.

Run the cycle test in convection cook mode

1. Touch the icon for the convection cook mode ③.
2. Repeat the cycle test steps for convection cook mode.
3. Cool down the appliance when the cycle test is complete.

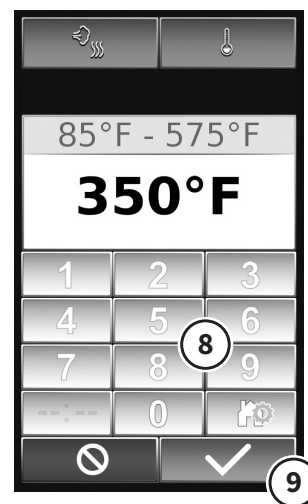

How To Turn On the Appliance

Before you begin

1. Turn on the exhaust hood.
2. Make sure that the water supply to the appliance is turned on.
3. Make sure that the electrical power supply to the appliance is turned on.
4. For gas appliances, make sure the gas supply valve is in the open position.

Steps

1. Press the ON/OFF button ①. The ON/OFF indicator glows green.

NOTE: If the appliance has a steam generator, the steam generator fills with water and the appliance heats the water to an initial temperature of 188°F (77°C).

NOTE: To power off the appliance, press and hold the Power button for 5 to 10 seconds to initiate the power shutdown sequence to the oven.

How To Run a Cycle Test of the Appliance

Run the cycle test in combination cook mode

2. Press the combination cook mode button ②.
3. Press the cook temperature button ③.
4. If necessary, use the up arrow button ⑤ or the down arrow button ⑨ to set the cooking temperature to 350°F (177°C).
5. Press the cook time button ④.
6. Use the up arrow button ⑤ or the down arrow button ⑨ to enter the cooking time (00:15:00).
7. Press the start/stop button ⑩. The appliance begins cooking.
8. Make sure that the appliance cycles correctly.
 1. The appliance raises the cavity temperature to the set temperature.
 2. The appliance cycles off by itself when the set temperature is reached.
 3. The appliance idles until the cavity temperature drops below the set temperature.
 4. The appliance cycles back on by itself until the cavity temperature again reaches the set temperature.

Allow the appliance to run through several cycles.

Cool down the appliance

1. Press the start/stop button ⑩ to stop the cooking process.
2. Press the cool down button ⑦.
3. Use the up arrow button ⑤ or the down arrow button ⑨ to set the cool down temperature to 110°F (43°C).
4. Open the appliance door.

NOTE: The cook time field ⑧ displays “dOOr” if the door is not open.

DANGER



Before starting the appliance, make certain you do not detect the odor of gas.

If you smell gas:


- Shut off the gas supply immediately.
- Do not attempt to light any appliance.
- Do not touch any electrical elements.
- Extinguish any open flame.
- Evacuate the area.
- Use a telephone outside the property and immediately contact your gas supplier.
- If unable to contact your gas supplier, contact the fire department.

CAUTION



Accumulations on the main burners of gas appliances can result in firing out of normal sequence. This delayed ignition creates an alarmingly loud sound. If your appliance makes an especially loud noise when starting up, shut down the appliance and call a qualified and trained service technician.

NOTICE: In the event of a power failure, the oven will not operate.

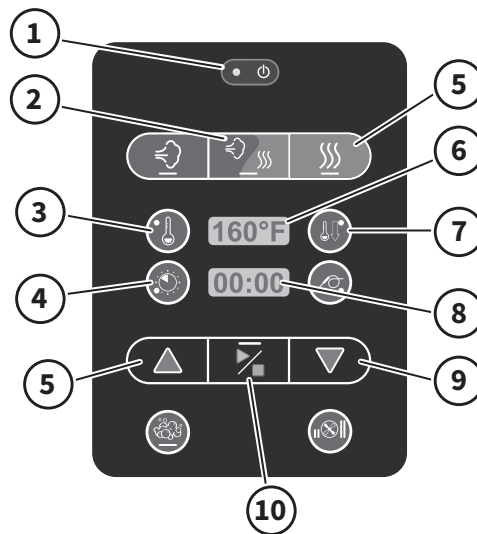

5. Press the start/stop button ⑩. The fan activates. The cook time field ⑧ displays the cavity temperature. The fan turns off when the cavity temperature matches the set cool down temperature.

Run the cycle test in convection cook mode

1. Press the convection cook mode button ⑤.
2. Repeat the cycle test steps for convection cook mode.
3. Cool down the appliance when the cycle test is complete.

Post-Installation Checklist



Post-Installation Checklist

Location Information	
Location Name: _____	Site Contact Name: _____
Location Street Address: _____	Site Contact Phone No.: _____
Location City: _____	Site Contact Email: _____
Location State: _____ Zip: _____	

Post-Installation Company Information	
Company Name: _____	Technician Name: _____
Mailing Address: _____	Technician Phone No.: _____
City: _____	Contact Email: _____
State: _____ Zip: _____	Date of Installation: _____

Model number(s) of combis installed				
Serial number of combis installed				

Clearance					
Appliance clearance	Right side		PASS		FAIL
	Left side		PASS		FAIL
	Rear		PASS		FAIL
	Top		PASS		FAIL
Is the appliance accessible for service?	YES			NO	
If NO, comment on the issue:					
Other comments:					

Water Supply					
Have all treated water inlets been connected to water supply?	PASS		FAIL		
Have all untreated water inlets been connected to water supply?	PASS		FAIL		
Do water supply line(s) have shut-off(s) exclusively for each appliance?	PASS		FAIL		
Is the dynamic water pressure from the cold water supply line a minimum of 30 psi (200 kPa) for each appliance?	PASS		FAIL	UNKNOWN	
Is the static water pressure from the cold water supply line less than 90 psi (600 kPa) for each appliance?	PASS		FAIL	UNKNOWN	
Is the minimum water flow rate correct for the treated water line? 0.26 gpm (1 L/min) for 6-10, 10-10 and 7-20 models, 0.53 gpm (2 L/min) for 10-20 models, and 0.80 gpm (3 L/min) for 20-10 and 20-20 models	PASS		FAIL	UNKNOWN	
Is the minimum water flow rate for the untreated water line 2.6 gpm (10 L/min)?	PASS		FAIL	UNKNOWN	
Is water treatment (RO blend system, filter, etc.) being used?	YES		NO	TYPE	
If YES - Note the system here:	BRAND NAME				MODEL
Are all exterior water connections tight?	YES			NO	
Are all interior water connections tight prior to operation?	YES			NO	
Are there any exterior water leaks after operation?	YES			NO	
Are there any interior water leaks after operation?	YES			NO	
Comments:					

Post-Installation Checklist

Electrical									
What is the rated voltage and phase of the appliance(s) installed?	VOLTAGE			PHASE					
Is the wire size for the main incoming power to the appliance(s) in accordance with the minimum size listed in the specification sheet for this specific appliance?	PASS		FAIL						
What is the measured voltage at site?	L1-N		L2-N		L3-N		L1-L2		
	L2-3		L1-L3		PASS		FAIL		
What is the current draw of the appliance(s) to be supplied?	AMP RATING								
What is the on-site breaker size supplying power to the appliance(s)?	SIZE			PASS			FAIL		
Is there a disconnect or junction box within 3' (1 m) of where the appliance(s) will be installed?	PASS		FAIL						
Comments:									
Gas									
Does the gas supply match the information listed on the nameplate of the appliance(s)?	PASS		FAIL						
What is the actual gas supply type?	NAT		PRO						
What is the dynamic gas pressure w.c.?	NAT		PRO						
Is the gas supply piping, water hose lines, electrical support cord and/or receptacle routed away from the path of any hot combustion pipes or fumes?	PASS		FAIL						
Comments:									
Drain									
What type of material was used for the drain?									
Does the vertical drain vent extend above the appliance exhaust opening at the rear of the appliance?	PASS		FAIL						
Is there a vertical vent within 12" (305mm) of the appliance drain?	PASS		FAIL						
Is there an air gap installed at the end of the drain run?	PASS		FAIL	SIZE					
Is the drain piped with a positive descending slope?	PASS		FAIL						
If the appliance has a ventless hood (appliance model name ending in "EVH"), has the ventless hood drain been plumbed along with the appliance main drain.	PASS		FAIL						
Comments:									
Other Site Information									
Is there a proper ventilation hood installed above the location of the appliance(s)?	PASS		FAIL						
Is the appliance level according to leveling instructions in the installation manual?	PASS		FAIL						
Comments:									

Function Test Checklist

Wire Connections				
Behind the left side panel, check and tighten all electrical connections, and tighten all electrical screws.				
Behind the left side panel, check and tighten all electrical screws.				
Behind the control panel, check and tighten all connections on the control board.				
Behind the control panel, check and tighten all connections on the options board.				
Behind the control panel, check and tighten all connections on the interface board.				
Check that the SD card is fully inserted into the interface board.				
Comments:				
Gas Appliances				
With the burner on, check the following:				
Static gas pressure at gas valve must be less than 14" W.C. (34.9 mbar).				
Dynamic gas pressure at gas valve must be greater than 5.5" W.C. (13.7 mbar) for NG; 9" W.C. (22.4 mbar) for propane				
CO ₂ flue gas analysis				
Were burner adjustments required?	YES		NO	
If YES, Record CO ₂ values				
CTP/CTC Appliance Function Test				
Cycle Y1 - Operation fill/Steam injection	YES		NO	
Dynamic water pressure with Y1 (treated water inlet)	MEASURE			
Cycle Y2 - Operation condensate cooling valve	YES		NO	
Dynamic water pressure with Y2 (untreated water inlet)	MEASURE			
Cycle Y3 - Operation rinse solenoid valve	YES		NO	
Dynamic water pressure with Y3 (untreated water inlet)	MEASURE			
Cycle Y5 - Operation hand shower	YES		NO	
Dynamic water pressure with Y5 (untreated water inlet)	MEASURE			
Cycle appliance in steam mode at 212° Fahrenheit (100° Celsius) for 10 minutes. Did the appliance perform correctly?	PASS		FAIL	
Record amperage at all phases:	L1		L2	
	L3			
During the cycle, check CTP motor rotation: 3 minutes clockwise - break - 3 minutes counter-clockwise	PASS		FAIL	
Cycle appliance in convection mode at 350° Fahrenheit (175° Celsius) for 10 minutes. Did it perform correctly?	PASS		FAIL	
Record amperage at all phases:	L1		L2	
	L3			
Cycle appliance in combination mode at 400° Fahrenheit (205° Celsius) for 10 minutes. Did it perform correctly?	PASS		FAIL	
Record amperage at all phases:	L1		L2	
	L3			
Check motor rotation for CTC models. Note: Arrows on the motor housing indicate proper rotation.	PASS		FAIL	
Check all lines and connections for leaks, both inside and outside of the combi appliance.	PASS		FAIL	

Function Test Checklist

Installation Complete	
Clean up job site	
Wipe down and clean exterior of combi appliance	
Take picture of screen displaying current software versions	
Take picture(s) of complete drain run	
Take picture of water connections at combi appliance	
Take picture of gas line and connections at combi appliance	
Take picture of appliance in place with surrounding equipment	
Size of treated water line:	
Flow rate of treated water line in gmp (L/min)	
Size of untreated water line:	
Flow rate of untreated water line in gmp (L/min)	

Has the customer been notified of any issues with the installation?	YES		NO	
---	-----	--	----	--

Please summarize all the issues found and/or recommended site/installation changes to ensure the unit is installed correctly.

Customer

Print name: _____ Signature: _____ Date: _____

Inspection Checklist



Daily Inspection

Unit Information

Business Name: _____

Serial Number: _____

Model Number: _____

Daily Inspection Start Date: _____

Daily Inspection Checklist

	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday	Sunday
Inspect and clean:							
Product probe (thermometer)							
Door gasket (inner door seal)							
Inner door glass							
Front drip tray							
Screen and overlay (inspect for cracks, peeling, moisture, etc.)							
Execute automatic wash cycle (with approved cleaning chemical ONLY)							
Employee initials							

Component Malfunction and Replacement

List details of the failure(s) next to the day they occurred. Leave blank if components are working properly.	
Monday	
Tuesday	
Wednesday	
Thursday	
Friday	
Saturday	
Sunday	

Weekly Inspection

Unit Information

Business Name: _____

Serial Number: _____

Model Number: _____

Weekly Inspection Start Date: _____

Weekly Inspection Checklist

Inspect - Oven cavity lamp	
Inspect - Oven cavity for signs of grease/carbon buildup	
Inspect - Loosen thumb screws to inspect behind the fan panel inside the oven cavity for signs of grease/carbon buildup	
Inspect - Loosen thumb screws to inspect behind the fan panel inside the oven cavity for signs of scale buildup	
G Inspect - The heat exchanger for any signs of major deformation. If yes, immediately remove from service and take corrective action steps.	
G Inspect - The heat exchanger for any loose/disconnected pipes or flanges. If yes, immediately remove from service and take corrective action steps.	
E Inspect - Convection elements for signs of cracking, deformation, or damage	
Clean ventless hood grease filters	
Employee initials	

G Gas units only

E Electric units only

Component Malfunction and Replacement

List details of the failure(s) next to the day they occurred. Leave blank if components are working properly.	
Week 1	
Week 2	
Week 3	
Week 4	

Inspection Checklist

Monthly Inspection

Unit Information

Business Name: _____

Serial Number: _____

Model Number: _____

Monthly Inspection Start Date: _____

Monthly Inspection Checklist

Inspect/Test - Proper draining of the oven cavity	
Inspect - All drain lines for leaks or clogs	
EB Descale the steam generator	
Inspect - Oven cavity for any signs of scale buildup	
Descale the oven interior	
Inspect ventless hood paper filter (replace as needed)	
Test ventless hood drain for proper drainage and signs of leaking	
Employee initials	

EB Electric boiler units only

Component Malfunction & Replacement

Summarize any component failure(s) that may have occurred during this month.

Yearly Inspection

Unit Information

Business Name: _____

Serial Number: _____

Model Number: _____

12-Month Inspection Start Date: _____

12-Month Inspection Checklist

Replace - Steam bypass hose	
Inspect - Cleaning pump hose	
Inspect/Test - Proper draining of the oven cavity	
Inspect - All drain lines for leaks or clogs	
Inspect - All solenoid hoses (both ends)	
Inspect - Upper browning valve hose	
Inspect - Low pressure relief valve & hose	
E Inspect - Convection element seal (from the electrical compartment)	
G Inspect - Gas heat exchanger seal (from the electrical compartment)	
Inspect - N6 oven temperature probe seal	
EB Descale the steam generator	
EB Remove & Inspect - Steam generator elements	
Inspect - Hand shower hose	
Inspect - Hand shower handle	
Inspect - Product probe	
Inspect - Water injection tube	
Inspect - Oven cavity for any signs of scale buildup	
Inspect - Oven cavity lamp	
Inspect - Oven cavity for signs of grease/carbon buildup	
Inspect - Behind the fan panel inside the oven cavity for signs of grease/carbon buildup	
Inspect - Behind the fan panel inside the oven cavity for signs of scale buildup	

EB Electric boiler units only **G** Gas units only **E** Electric units only

Inspection Checklist

Unit Information

Business Name: _____

Serial Number: _____

Model Number: _____

12-Month Inspection Start Date: _____

12-Month Inspection Checklist

G Inspect - The heat exchanger for any signs of major deformation. If yes, immediately remove from service and take corrective action steps.	
G Inspect - The heat exchanger for any loose/disconnected pipes or flanges. If yes, immediately remove from service and take corrective action steps.	
G Inspect and Ensure - Exhaust pipes are exiting the oven cavity	
G Inspect - Heat exchanger flange gasket (replace as needed)	
G Inspect and Tighten - Heat exchanger flange bolts	
G Inspect and Tighten - Heat exchanger burner flange hardware & gasket (replace as needed)	
G Inspect and Tighten - Heat exchanger igniter flange hardware & gasket (replace as needed)	
G Inspect - Heat exchanger exhaust pipes (ensure they are exiting out past the oven cavity ceiling flange) - ESG models only	
G Inspect - Oven cavity ceiling flange & flange gasket - ESG models only	
G Tighten - Burner flange bolts	
G Tighten - Igniter flange bolts	
Inspect - Heat exchanger weep holes to ensure they are free of obstructions (if the hole is obstructed, immediately remove oven from service and replace the heat exchanger)	
E Inspect - Convection elements for signs of cracking, deformation, or damage	
Replace - Oven lamp cover(s) & gasket(s)	
Descale the oven interior	
Inspect - Upper and lower door hinges and pins	
Inspect - Door gasket (replace as needed)	
Inspect - Door upper and lower hinges (replace as needed)	
Wipe the inner door glass	
Inspect - Front drip tray (clean as needed)	
Inspect - Front drip tray hose	
Inspect - Control overlay	
Inspect and Tighten - All electrical connections	
Inspect and Tighten - All cooling fans for proper operation	

EB Electric boiler units only **G** Gas units only **E** Electric units only

Unit Information

Business Name: _____

Serial Number: _____

Model Number: _____

12-Month Inspection Start Date: _____

12-Month Inspection Checklist

Inspect and Tighten - Door hinges and lower hinge pin bolt	
Inspect and Tighten - Door handle	
If there is a smoker, inspect the smoke element for visual signs of deformation, cracks or breaks (replace as needed)	
Review - Error code history	
Note the software version (update if not current)	
Record - Water pressure (static & dynamic)	
Record - Line voltage across all lines	
Record - Line voltage to ground on each line	
Record - Amperage across all three legs (when heating)	
Function test all components (list components)	
For ovens shipped to New Zealand or Australia, inspect the backflow preventer check valve per AS/NZ3500.1 and AS/NZ3500.2	

Component Failure and Replacement

Summarize any component failure(s) that may have occurred during this month.

Customer Signature: _____

Technician Signature: _____

Error Codes

ALWAYS check the circuit breaker is turned “ON” and your unit is receiving power BEFORE calling your Authorized Alto-Shaam Service Agent.

NOTICE

This section is provided for the assistance of qualified and trained service technicians only and is not intended for use by untrained or unauthorized service personnel. Do not attempt to repair or service the oven beyond this point. Contact Alto-Shaam for the nearest authorized service agent. Repairs made by any other service agents without prior authorization by Alto-Shaam will void the warranty.

When the oven malfunctions, an error code will appear in the display.



Press the Start icon to acknowledge the error.

When the oven error notification has been acknowledged, the Combitherm will attempt to return to normal operation.

Error Code	Error Call Out in Display	Description of Error	Possible Cause(s) and Remedies
E01	Low Water Boiler	Upper water level probe B1 is not satisfied within 5 minutes, after water solenoid valve Y1 is activated.	<ul style="list-style-type: none"> – Water supply is shut off. – Low water pressure. – Boiler drain cap is missing. – Boiler drain pump is defective. – Drain pump elbow leaking. – Water level probe has calcium build up. – Double water solenoid valve is defective (Y1). – Relay board, high voltage is defective.
E02	Control Temperature High	Low voltage relay board temperature higher than 176°F (80°C).	<ul style="list-style-type: none"> – Check wiring to all components listed below. – Cooling fan on relay board assembly is defective. – Cooling fan on display board assembly is defective. – Main cooling fan is defective. – Cooling fan on motor drive is defective.
E03	Fan Motor Error	Fan motor does not spin after 60 seconds, detected by the Hall Sensor. Error 03 does not appear if error E53 is detected first.	<ul style="list-style-type: none"> – Check wiring to all components listed below. – If LED on motor control flashes, see error codes for motor control. – Motor or fan wheel locked. – Hall sensor does not detect motor rotation. – Motor Thermo Temperature protection. – Fan wheel damaged.
E04	Lower Fan Motor Error	Lower Fan motor does not spin after 60 seconds, detected by the Hall Sensor. Error 04 does not appear if error E54 is detected first.	<ul style="list-style-type: none"> – Check wiring to all components mentioned below. – If LED on motor control flashes, see error codes for motor control. – Motor or fan wheel locked. – Hall sensor does not detect motor rotation. – Motor Thermo Temperature protection. – Fan wheel damaged.
E05	VFD Comm Failure	When VFD does not respond to a query on the CAN interface.	<ul style="list-style-type: none"> – Loss of power to VFD. – VFD malfunction. – CAN cable disconnected. – CAN address not correct on VFD.
E06	Lower VFD Comm Failure	When VFD does not respond to a query on the CAN interface.	<ul style="list-style-type: none"> – Loss of power to VFD. – VFD malfunction. – CAN cable disconnected. – CAN address not correct on VFD.
E07	Error Received from VFD	When VFD is flashing the green light	– Refer to VFD error code list and match to number of blinks on the green LED of VFD.
E08	Error Received from Lower VFD	When VFD is flashing the green light	– Refer to VFD error code list and match to number of blinks on the green LED of VFD.

Error Code	Error Call Out in Display	Description of Error	Possible Cause(s) and Remedies
E11	Convection Temperature High	In Combination program, cavity temperature N6 is measuring in excess of 572°F (300°C) for a minimum of 25 seconds In Convection program, cavity temperature N6 is measuring in excess of 572°F (300°C) for a minimum of 25 seconds	<ul style="list-style-type: none"> – Check wiring to all components mentioned below. – Steam element contactor locked/on. – N6 oven cavity temperature probe is defective. – N6 oven cavity temperature probe wires connected backwards – Relay board, high voltage, defective.
E13	Boiler Temperature High	Boiler temperature is more than 248°F (120°C) for more than 25 seconds, detected by B4 Probe	<ul style="list-style-type: none"> – Calcium build up in boiler – Check wiring to all components mentioned below. – Steam element contactor locked/on. – B4 boiler temperature probe is defective. – B4 probe wires connected backwards – Water level probe has calcium build up.
E15	Condensor Temperature High	Condensor water temperature is more than 212°F (100°C) for more than 180 seconds, detected by B3 probe	<ul style="list-style-type: none"> – Water supply is shut off. – Check wiring to all components mentioned below. – B3 condensor temperature probe is defective. – B3 condensor probe wires connected backwards – Single water solenoid valve defective (Y2). – Relay board, high voltage, defective.
E20	B11 Core Temperature Probe Single Point Fault	Single point core temperature probe defective or disconnected	<ul style="list-style-type: none"> – Clean probe receptacle pins with sand paper. – B11 Single Point Core Temperature probe with quick connect defective. – B11 Single Point Core Temperature probe wires with quick connect disconnected. – B11 Single Point Core Temperature probe receptacle defective. – B11 Single Point Core Temperature probe receptacle wires disconnected.
E21	N6 Cavity Probe Fault	Cavity temperature probe defective or disconnected	<ul style="list-style-type: none"> – N6 oven cavity temperature probe defective. – N6 oven cavity temperature probe wires.
E22	B10 Core Temperature Probe Multi-point Fault	Multipoint core temperature probe defective or disconnected	<ul style="list-style-type: none"> – B10 multipoint core temperature probe defective. – B10 multipoint core temperature probe wires disconnected.
E23	B4 Boiler Probe Fault	Boiler temperature probe defective or disconnected	<ul style="list-style-type: none"> – B4 boiler temperature probe defective. – B4 probe wires connected backwards.
E24	B5 Bypass Probe Fault	Bypass steam temperature probe defective or disconnected	<ul style="list-style-type: none"> – B5 bypass steam temperature probe defective. – B5 bypass steam temperature probe wires connected backwards.
E25	B3 Condensor Probe Fault	Condensor water temperature probe defective or disconnected.	<ul style="list-style-type: none"> – B3 condensor temperature probe defective. – B3 condensor probe wires connected backwards.
E26	B10 - Point 1 - Core Temperature Probe Multipoint Fault	Multipoint core temperature probe defective or disconnected.	<ul style="list-style-type: none"> – B10 Multipoint Core Temperature probe defective. – B10 Multipoint Core Temperature probe wires disconnected.
E27	B10 - Point 2 - Core Temperature Probe Multipoint Fault	Multipoint core temperature probe defective or disconnected.	<ul style="list-style-type: none"> – B10 Multipoint Core Temperature probe defective. – B10 Multipoint Core Temperature probe wires disconnected.
E28	B10 - Point 3 - Core Temperature Probe Multipoint Fault	Multipoint core temperature probe defective or disconnected.	<ul style="list-style-type: none"> – B10 Multipoint Core Temperature probe defective. – B10 Multipoint Core Temperature probe wires disconnected.
E29	B10 - Point 4 - Core Temperature Probe Multipoint Fault	Multipoint core temperature probe defective or disconnected.	<ul style="list-style-type: none"> – B10 Multipoint Core Temperature probe defective. – B10 Multipoint Core Temperature probe wires disconnected.
E34	Steam Generator Drain Pump Fault	If water level does not drop below lower water level probe after three minutes when steam generator drain pump is activated in cleaning program.	<ul style="list-style-type: none"> – Calcium build up in steam generator drain pump. – Boiler drain pump defective. – Relay board, high voltage, defective. – Water level probe defective.

Troubleshooting – Error Codes

Error Code	Error Call Out in Display	Description of Error	Possible Cause(s) and Remedies
E36	Steam Temperature High	In Steam program, cavity temperature N6 is measuring in excess of 395°F (200°C) for more than 60 seconds. In Combination program, cavity temperature N6 is measuring in excess of 520°F (270°C), for more than 60 seconds. In Retherm program, cavity temperature N6 is measuring in excess of 395°F (200°C), for more than 60 seconds. In Cleaning program, cavity temperature N6 is measuring in excess of 395°F (200°C), for more than 60 seconds.	<ul style="list-style-type: none"> – Water supply is shut off. – Low water pressure. – Water injection pipe, calcium build up. – Water flow valve defect or calcium build up. – Double water solenoid valve defective (Y1). – Relay board, high voltage, defective.
E40	B3 Fault	B3 probe shorted to ground	– Defective or miswired probe.
E41	B4 Fault	B4 probe shorted to ground	– Defective or miswired probe.
E42	B5 Fault	B5 probe shorted to ground	– Defective or miswired probe.
E43	N6 Fault	N6 probe shorted to ground	– Defective or miswired probe.
E44	N8 Fault	N8 probe shorted to ground	– Defective or miswired probe.
E45	B10 Fault	B10 probe shorted to ground	– Defective or miswired probe.
E46	B10 - Point 1 Fault	B10 probe shorted to ground	– Defective or miswired probe.
E47	B10 - Point 2 Fault	B10 probe shorted to ground	– Defective or miswired probe.
E48	B10 - Point 3 Fault	B10 probe shorted to ground	– Defective or miswired probe.
E49	B10 - Point 4 Fault	B10 probe shorted to ground	– Defective or miswired probe.
E51	No Water In Boiler	Lower water level probe B2 is not satisfied within 5 minutes, after water solenoid valve Y1 is activated	<ul style="list-style-type: none"> – Water supply is shut off. – Low water pressure. – Boiler drain cap missing. – Boiler drain pump defective. – Drain pump elbow leaking. – Water level probe has calcium build up. – Double water solenoid valve defective (Y1). – Relay board, high voltage, defective.
E53	Fan Motor High Temperatures	Fan motor does not spin, result in over-heating, detected by motor coil safety thermo element. Temperature more than 320°F (160°C).	<ul style="list-style-type: none"> – Motor high limit open or wired incorrectly. – If LED on motor control flashes, see error codes for motor control. – Motor or fan wheel locked. – Fan wheel damaged.
E54	Lower Fan Motor High Temperature	Lower fan motor does not spin, result in over-heating, detected by motor coil safety thermo element. Temperature more than 320°F (160°C).	<ul style="list-style-type: none"> – Motor high limit open or wired incorrectly. – If LED on motor control flashes, see error codes for motor control. – Motor or fan wheel locked. – Fan wheel damaged.
E55	Vent Not Open (Lower vent on dual vent system)	60 seconds after the venting motor is activated the vent motor safety switch did not open.	<ul style="list-style-type: none"> – Alignment issue between motor cam and vent motor safety switch (micro switch). – Faulty vent valve (motor). – Faulty vent valve safety switch (micro switch).
E56	Vent 2 Not Open (Upper vent on dual vent system)	60 seconds after the venting motor is activated the vent motor safety switch did not open.	<ul style="list-style-type: none"> – Alignment issue between motor cam and vent motor safety switch (micro switch). – Faulty vent valve (motor). – Faulty vent valve safety switch (micro switch).
E57	No Rinse Water	Flow switch for solenoid valve Y4 does not detect any water flow for a minimum of 60 seconds.	<ul style="list-style-type: none"> – Water supply is shut off. – Low water pressure. – Flow switch is dirty or defective. – Double water solenoid valve defective (Y3). – Relay board, high voltage, defective.

Error Code	Error Call Out in Display	Description of Error	Possible Cause(s) and Remedies
E88	Lower Gas Ignition Failure NOTE: If after 2 attempts to clear this error, the error appears a third time, remove the oven from service and immediately contact an Alto-Shaam authorized service provider.	Reset output from Ignition Module is ON	<ul style="list-style-type: none"> - Hot surface ignitor not functioning. - No gas supply. - Flame sensor not functioning. - Faulty ignition control.
E89	Upper Gas Ignition Failure NOTE: If after 2 attempts to clear this error, the error appears a third time, remove the oven from service and immediately contact an Alto-Shaam authorized service provider.	Reset output from Ignition Module is ON	<ul style="list-style-type: none"> - Hot surface ignitor not functioning. - No gas supply. - Flame sensor not functioning. - Faulty ignition control.
E90	Lower Gas Combustion Blower Not at Speed	Speed is too slow.	<ul style="list-style-type: none"> - Power supply cable is not connected to blower motor. - Speed control cable is not connected to blower motor. - Blower motor is blocked, rotation is impeded, or motor is faulty. - Faulty control board.
E91	Upper Gas Blower Not at Speed	Speed is too slow.	<ul style="list-style-type: none"> - Power supply cable is not connected to blower motor - Speed control cable is not connected to blower motor - Blower motor is blocked, rotation is impeded, or motor is faulty - Faulty control board
E92	Communication Error CB does not properly respond	Twelve (12) instances of no-response from the relay board (CB) to the display board (IB).	<ul style="list-style-type: none"> - Check CAN cable connections. - CAN cable defective. - Relay board, low voltage, connector defective. - Display board connector defective.
E93	Interface Board (IB) and Control Board (CB) are in different states	The IB is in a different running state than the CB for more than 20 seconds.	<ul style="list-style-type: none"> - Check CAN cable connections. - CAN cable defective. - Relay board, low voltage, connector defective. - Display board connector defective.
E94	Communication Error, TO Interface Board	No signal transfer for more than 20 seconds between the Interface Board (IB) and the Control Board (CB).	<ul style="list-style-type: none"> - Check CAN cable connections. - CAN cable defective. - Relay board, low voltage, connector defective. - Display board connector defective.
E100	One or more maintenance reminder has timed out.	When any maintenance reminder has expired without action having been taken by the operator.	<ul style="list-style-type: none"> - Enter maintenance reminder screen and address the item that has timed out and reset
E101	Ventless Hood Fault - No Pressure	If the power switch or pressure switch is not closed.	<ul style="list-style-type: none"> - Check power switch is on. - Check vent motor is turning in the proper direction. - Pressure switch is miss wired or defective. - Filter(s) require cleaning or replacement
E102	Ventless Hood Fault – Filters Not Present	If the air filter switches are not closed.	<ul style="list-style-type: none"> - Check filters are installed and properly seated. - Check filter switches are not damaged, defective or dislodged.
E103	Option Board Doesn't Send Switch Setting	OB not communicating its switch settings to the CB.	<ul style="list-style-type: none"> - Check CAN cable connection between OB and CB. - Ensure CB dip switch is set to see an OB. - Incompatible OB and CB software (update software). - OB defective. - CB defective.
E104	Option Board Not Communicating	Option board is not communicating with CB.	<ul style="list-style-type: none"> - Check option board CAN connection at CB and OB. - Defective OB. - Defective CB.
E105	No or Low Water Pressure	Water pressure switch not activated.	<ul style="list-style-type: none"> - Water supply not connected. - Water supply is shut off. - Water supply to unit blocked or obstructed - Faulty or miswired pressure switch


Troubleshooting – Error Codes

Error Code	Error Call Out in Display	Description of Error	Possible Cause(s) and Remedies
E106	Boiler Drain Pump Fault	Hall effect or rotational sensor is not sending a signal to the relay board	<ul style="list-style-type: none"> – Drain pump motor not running or defective. – Hall effect sensor broken or incorrectly wired. – Motor improperly wired.
E108	Cooling Fan Failure	If the temperature on the control board (relay board) is greater than 140°F (60°C) and less than 176°F (80°C). (See error code E02)	<ul style="list-style-type: none"> – Cooling fan damaged. – Cooling fan blocked or blades have been kept from rotating. – Incoming air temperature exceeds 100°F (38°C). – Air inlet has become blocked.
E109	High Limit Switch NOTE: Any oven experiencing this error should be investigated by an authorized Alto-Shaam service provider.	The High Limit Switch input to the CB (N7) is “open”	<ul style="list-style-type: none"> – Unit has experienced an over heat condition. – Convection element contactors stuck closed. – Failed Y1 solenoid. – Obstruction between Y1 solenoid and injection pipe. – Improperly connected drain. – Condensate pan clean out not closed. – Improperly wired high limit switch at the switch or at the CB. – Defective high limit switch.
E200	The SD card has been detected to be larger than 2GB in size.	The SD card inserted is larger than 2GB in size.	– SD card is larger than 2GB in size. Contact service to order replacement SD card.
E210	VFD Under Voltage	VFD has detected an under-voltage situation.	– Possible VFD failure.
E211	VFD Over Voltage	VFD has detected an over-voltage situation.	– Possible VFD failure.
E212	VFD Overheating	VFD has detected an overheat situation.	<ul style="list-style-type: none"> – Unit has experienced an over heat condition. – Defective high limit switch. – Defective cooling fans. – Possible VFD failure.
E213	Motor Over Current	Motor over current detected.	<ul style="list-style-type: none"> – Blocked fan wheel. – Possible VFD failure.
E214	VFD Current Peak	VFD current peak detected.	– Possible VFD failure.
E215	VFD EEPROM Error	VFD EEPROM error detected.	– Possible VFD failure.
E216	VFD Over Current	VFD over current detected.	– Possible VFD failure.
E217	VFD Short Circuit	VFD Short Circuit detected.	– Possible VFD failure.
E218	VFD Voltage Error	VFD voltage does not correspond to jumper settings.	<ul style="list-style-type: none"> – VFD voltage jumper is not correct. – Possible VFD failure.
E220	Lower VFD Under Voltage	Lower VFD has detected an under-voltage situation.	– Possible Lower VFD failure.
E221	Lower VFD Over Voltage	Lower VFD has detected an over-voltage situation.	– Possible Lower VFD failure.
E222	Lower VFD Overheating	Lower VFD has detected an overheat situation.	<ul style="list-style-type: none"> – Unit has experienced an over heat condition. – Defective high limit switch. – Defective cooling fans. – Possible Lower VFD failure.
E223	Lower Motor Over Current	Lower Motor over current detected.	– Possible Lower VFD failure.
E224	Lower VFD Current Peak	Lower VFD current peak detected.	– Possible Lower VFD failure.
E225	Lower VFD EEPROM Error	Lower VFD EEPROM Error detected.	– Possible Lower VFD failure.
E226	Lower VFD Over Current	Lower VFD over current detected.	– Possible Lower VFD failure.
E227	Lower VFD Short Circuit	Lower VFD short circuit detected.	– Possible Lower VFD failure.
E228	Lower VFD Voltage Error	Lower VFD voltage does not correspond to jumper settings.	<ul style="list-style-type: none"> – Lower VFD voltage jumper is not correct. – Possible Lower VFD failure.
E289	Unknown Error from VFD	VFD has provided an unknown error.	– Possible VFD failure.
E290	Unknown Error from Lower VFD	Lower VFD has provided an unknown error.	– Possible Lower VFD failure.

Touch Motor Control Error Codes

The LED is located on the variable frequency drive (VFD) ① of the oven.

Type of Error	Indication	Release of Error
Undervoltage	LED flashing sequence, with 1 flash per period.	Voltage of intermediate circuit is less than 250V
Overvoltage	LED flashing sequence, with 2 flashes per period.	Voltage of intermediate circuit exceeds 445V
Excess Temperature	LED flashing sequence, with 3 flashes per period.	Temperature sensor in the power unit is more than 199°F (93°C)
Current Peak	LED flashing sequence, with 4 flashes per period.	Blocked motor, detected by current peak monitoring from 900 rpm rotating field
Overcurrent	LED flashing sequence, with 5 flashes per period.	Intermediate circuit current exceeds 4.0 A
Short-circuit	LED flashing sequence, with 6 flashes per period.	Release of interrupt at intermediate circuit current larger than 53 A
Power on	LED flashing sequence, with 7 flashes per period.	Effective mains voltage does not correspond to jumper setting 115V/230V
Watchdog	LED flashing sequence, with 8 flashes per period.	Watchdog of the microcontroller released, program crash

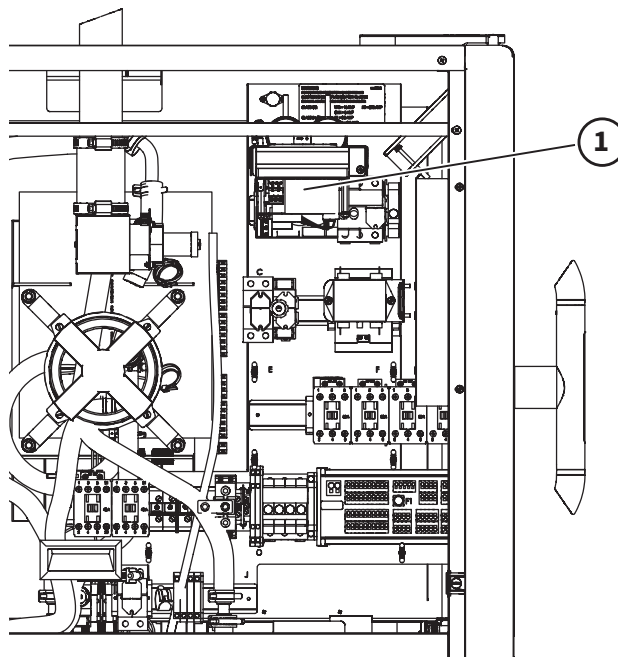

Introduction Alto-Shaam, Inc. warrants to the original purchaser only, that any original part found to be defective in material or workmanship will be replaced with a new or rebuilt part at Alto-Shaam's option, subject to provisions hereinafter stated.

Warranty Period The original parts warranty period is as follows:

- For all other original parts, one (1) year from the date of installation of appliance or fifteen (15) months from the shipping date, whichever occurs first.
- The labor warranty period is one (1) year from the date of installation or fifteen (15) months from the shipping date, whichever occurs first.
- Alto-Shaam will bear normal labor charges performed during standard business hours, excluding overtime, holiday rates or any additional fees.
- For the refrigeration compressor, if installed, the warranty period is five (5) years from the date of original installation of the appliance.
- For heating elements on Halo Heat® Cook and Hold ovens, the warranty period is for as long as the original owner owns the oven. This warranty period applies to units sold after 2/1/2009 and excludes holding-only ovens.
- To be valid, a warranty claim must be asserted during the applicable warranty period. This warranty is not transferable.

Exclusions This warranty does not apply to:

- Calibration.
- Replacement of light bulbs, rubber gaskets, grease filters, air filters, racks, jet plates, and/ or the replacement of glass due to damage of any kind.
- Equipment damage caused by accident, shipping, improper installation or alteration.
- Equipment used under conditions of abuse, misuse, carelessness or abnormal conditions, including but not limited to, equipment subjected to harsh or inappropriate chemicals, including but not limited to, compounds containing chloride or quaternary salts, poor water quality, or equipment with missing or altered serial numbers.
- Equipment damage caused by use of any cleaning agents other than those recommended by Alto-Shaam, including but not limited to damage due to chlorine or other harmful chemicals.
- Any losses or damage resulting from malfunction, including loss of food product, revenue, or consequential or incidental damages of any kind.
- Equipment modified in any manner from original model, substitution of parts other than factory authorized parts, unauthorized removal of any parts including legs, or unauthorized addition of any parts.
- Equipment damage incurred as a direct result of poor water quality*, inadequate maintenance of steam generators and/or surfaces affected by water. Water quality and required maintenance of steam generating equipment is the responsibility of the owner/ operator.
- Equipment damage incurred as a result of not following the required maintenance schedule published in the manuals for the equipment.

Conclusion This warranty is exclusive and is in lieu of all other warranties, express or implied, including the implied warranties of merchantability and fitness for a particular purpose. No person except an officer of Alto-Shaam, Inc. is authorized to modify this warranty or to incur on behalf of Alto-Shaam any other obligation or liability in connection with Alto-Shaam equipment.

**Refer to the product spec sheet for water quality standards.*



ALTO-SHAAM.

Menomonee Falls, WI U.S.A.

Phone 800-558-8744 | +1-262-251-3800 | alto-shaam.com

ASIA

Shanghai, China
Phone +86-21-6173-0336

AUSTRALIA

Brisbane, Queensland
Phone 800-558-8744

CANADA

Concord, Ontario Canada
Toll Free Phone 866-577-4484
Phone +1-905-660-6781

FRANCE

Aix en Provence, France
Phone +33(0)4-88-78-21-73

GMBH

Bochum, Germany
Phone +49 [0]234 298798-0

ITALY

Padua, Italy
Phone +39 3476073504

INDIA

Pune, India
Phone +91 9657516999

MEXICO

Phone +52 1 477-717-3108

MIDDLE EAST & AFRICA

Dubai, UAE
Phone +971-4-321-9712

CENTRAL & SOUTH AMERICA

Miami, FL USA
Phone +1 954-655-5727

RUSSIA

Moscow, Russia
Phone +7 903 7932331