



Preheating the Appliance

1. Press the **Power** button.
2. Touch the **Professional Cooking Mode** icon.
3. Touch the desired **Cook Mode** icon.
4. Touch the **Preheat** icon.
5. Enter the temperature on the touch pad, then touch the **Check Mark** icon.

Appliance beeps when it is preheated.

Cooking or Retherming with Probe

1. Preheat the appliance.
2. Touch the desired **Cook Mode** icon.
3. Touch the **Temperature** area to the right of the thermometer icon, enter the desired oven temperature using the touch pad, then touch the **Check Mark** icon.
4. Touch the **Temperature** area to the right of the probe icon, enter the desired probe temperature using the touch pad, then touch the **Check Mark** icon.
5. Touch the available auxiliary cooking icons to finesse the cooking outcome.
6. Load food into the appliance and insert the probe into the food.
7. Touch the **Start** icon.

Cooking or Retherming with Time

1. Preheat the appliance.
2. Touch the desired **Cook Mode** icon.
3. Touch the **Temperature** area to the right of the thermometer icon, enter the desired oven temperature using the touch pad, then touch the **Check Mark** icon.
4. Touch the **Time** area to the right of the clock icon, enter the desired cook time using the touch pad, then touch the **Check Mark** icon.
5. Touch the available auxiliary cooking icons to finesse the cooking outcome.
6. Load food into the appliance.
7. Touch the **Start** icon.

Cooking with Programmed Recipes

NOTE: Some programs include the preheat function. Ensure the desired cooking temperature has been reached before loading food into the appliance.

1. Touch the **Saved Recipes** icon. 
2. Locate the desired cooking program using the **Arrow** icons to display the program choices. You may also use the **Look-up** icon to enter a specific recipe name.




3. Touch the programmed food icon.

The appliance begins operating.

Programming a Recipe

1. While on the cooking mode screen, touch the **Write a Recipe** icon. 
2. Perform steps 2 through 4 of **Cooking or Retherming with Probe**, or **Cooking or Retherming with Time**, from the front of this guide.
3. If the recipe requires a reminder to open the door at the end of the segment, touch the door icon. 
4. If the recipe is complete, go to step 6. If the recipe calls for additional segments, touch the **Append** icon. 
5. Perform steps 2 through 4 of **Cooking or Retherming with Probe**, or **Cooking or Retherming with Time**, from the front of this guide. If required, add the door open reminder—see step 3. Then, touch the **Append** icon. Repeat for each additional cooking segment. 
6. Touch the **Save** icon when all segments have been written. A touch pad will appear. 
7. Choose a photo or input the name of the recipe, then touch the **Check Mark** icon. 

Auxiliary Function Icons

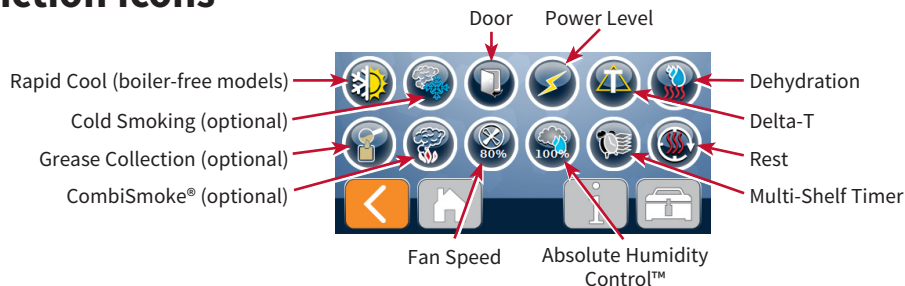

Cleaning the Appliance

1. Side racks and shelves may remain inside the appliance during cleaning. Remove the optional Grill Grate from the appliance interior and wash it separately in hot, soapy water to preserve the special non-stick coating. Remove the optional smoker tray. Remove any solid wastes from the drain screen and the appliance interior to prevent blockage.

2. Touch the **Cleaning** icon. 

NOTICE: If the appliance is too hot, a warning screen appears. Open the appliance door and touch the **Cool-down** icon to allow the appliance to cool. When the appliance has finished cooling, begin the cleaning procedure.

3. Choose the cleaning level: **Rinse**, **Light**, **Normal**, **Heavy-duty** or **Heavy-duty PLUS**. 
4. For **Light**, **Normal**, **Heavy-duty**, or **Heavy-duty PLUS**, insert the appropriate number of CombiClean® tablets as directed by the touchscreen, or spray CombiClean liquid cleaner inside the appliance.
5. Close the appliance door and touch the **Check Mark** icon. The appliance shuts off when the cleaning cycle is complete. 
6. After the cleaning cycle is complete, leave the appliance door open approximately 2" (50mm) to allow the appliance to air dry.

