




# INSTALLATION INSTRUCTIONS

## COOKWARE GRIP REPLACEMENT

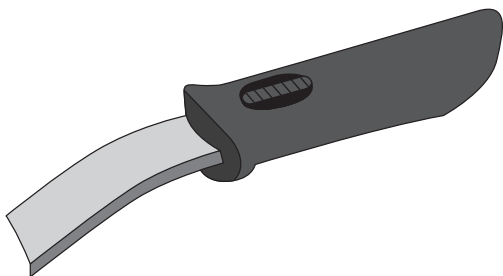


| Kit No. | Description                                              | Includes                                               |
|---------|----------------------------------------------------------|--------------------------------------------------------|
| 7801    | Medium/Large Grips<br>(fit 10", 12" and 14" pan handles) | 3 silicone grips (353780-1),<br>3 fasteners (353916-1) |
| 7811    | Small Grips<br>(fits 8" pan handles)                     | 3 silicone grips (353781-1),<br>3 fasteners (353916-1) |


### REPLACING THE GRIP ON YOUR VOLLRATH® COOKWARE:

#### Remove Old Grip:

1. Face pan down and push the center button out with a pointed (not sharp) object.
2. Remove the fastener from the old silicone grip.

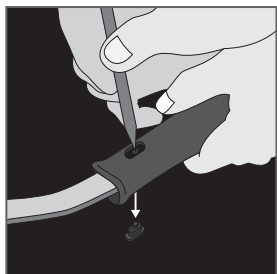


3. Flip pan over and remove the old silicone grip from handle.

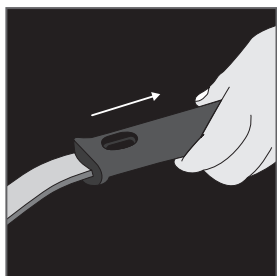


#### Install New Grip:

1. With pan facing up, slide new silicone grip onto the handle.

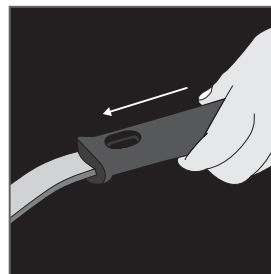

2. Place fastener (with the dot closest to pan) into the silicone grip-handle hole. Push the fastener down into place with a pointed (not sharp) object.

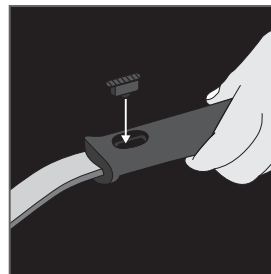

3. Flip the pan over and press around the flange center button to secure the fastener.

