



KLEENSCREEN PLUS®


ASSEMBLY INSTRUCTIONS

VULCAN

CLEANING:

1. Remove the filter insert from inside the filter screen. Use warm water and dishwashing detergent to wash the suction tube, filter screen, and fittings (parts are dishwasher-safe).
2. Pull the filter pan out fully; use the handles to lift it from the filter drawer (shown below). Wash with warm water and dishwashing detergent.
3. Rinse all components thoroughly.
4. Dry all parts completely with a clean cloth.

FILTER SCREEN ASSEMBLY

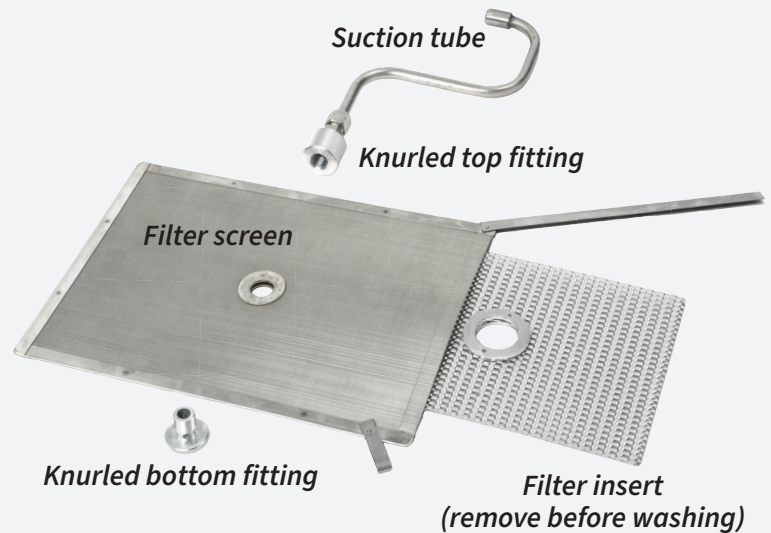

INSTALLATION:

5. Place the filter pan into the filter drawer.
6. Reassemble the filter screen assembly, ensuring the knurled TOP fitting is on top.
Do not install the knurled bottom fitting on top, as this will cause malfunctions.
7. Place the filter screen assembly on the bottom of the filter pan and secure the suction tube into the suction tube clip.
8. Close the filter pan drawer while carefully aligning the suction tube nozzle with the oil receptacle block mounted on the fryer battery frame.

