



Instruction Manual

Fudge Puppy Display Case

Model No. 5535



GOLD MEDAL[®] PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA



SAFETY PRECAUTIONS

	⚠ DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing.</p> <p>008_010914</p>

	⚠ DANGER
	<p>Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.</p> <p>014_010914</p>

	⚠ WARNING
	<p>ALWAYS wear safety glasses when servicing this equipment.</p> <p>010_010914</p>



	⚠ WARNING
	<p>No user serviceable parts inside. Refer servicing to qualified service personnel.</p> <p>011_010914</p>

	⚠ WARNING
	<p>Read and understand operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862</p> <p>022_010914</p>

	⚠ WARNING
	<p>DO NOT allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all instructions before operation.</p> <p>012_010914</p>



SAFETY PRECAUTIONS (continued)

	 WARNING
	This machine is NOT to be operated by minors. 007_010914

Note: Improvements are always being made to Gold Medal’s equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal’s Technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions. (Gold Medal Products Co. does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.)

INSTALLATION INSTRUCTIONS

Inspection of Shipment

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty does not cover damage that occurs in transit, or damage caused by abuse, or consequential damage due to the operation of this machine, since it is beyond our control (reference warranty in back of manual).

Manual

Read and understand the operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862.

Items Included with this Unit

- (4) Rubber Crutch Tips
- (2) Knobs for Doors
- (2) Tee Bolts

Setup

This unit has been assembled and tested at the factory.



1. Remove all packaging and tape prior to operation.
2. Set unit on a level surface.
3. Attach a knob on each door. Place a Tee Bolt through the hole from the interior side of the Plexiglas door, then screw on a knob from the exterior side (see image below).
4. Push a Rubber Crutch Tip onto each of the (4) Glide Feet (glides are factory installed). Apply firm pressure until the crutch tip covers the glide entirely (see image below).



Electrical Requirements

The following power supply must be provided:

5535: 120 Volts, 80 Watts, 60 Hertz

	 DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing.</p> <p>008_010914</p>

Your electrician must furnish sufficient power for proper machine operation. We recommend this equipment be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is Gold Medal Products Co.'s recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance. Make sure cord is located to prevent a trip hazard or unit upset.

Before You Plug In Machine

1. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.
2. Make sure the wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
3. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
4. DO NOT use a grounded to un-grounded receptacle adapter (where applicable).
5. Install the unit in a level position.



OPERATING INSTRUCTIONS

 
Controls and Their Functions

LIGHT SWITCH

ON/OFF toggle switch provides power to the fluorescent cabinet light.

MOTOR SWITCH

ON/OFF toggle switch provides power to the motorized rack.

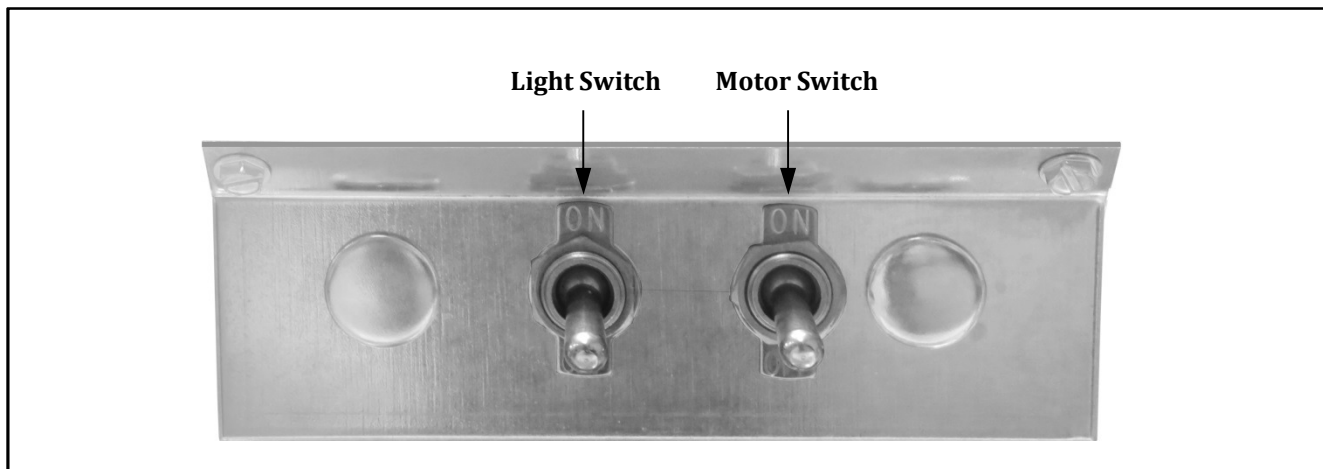



Operating Instructions

1. Flip the Light Switch to the ON position.
2. Load the rotisserie with Fudge Puppies. Hold the Fudge Puppy upside down by the skewer stick and slide the stick into a slot on the rack.
3. Once the product is loaded, flip the Motor Switch ON to start the rack rotation.





Care and Cleaning

	 DANGER
	Machine must be properly grounded to prevent electrical shock to personnel. DO NOT immerse in water. Always unplug the equipment before cleaning or servicing. <small>025_020314</small>



Good sanitation practice demands that all food preparation equipment be cleaned regularly. A clean looking, well-kept machine is one of the best ways of advertising your product.



Follow the directions below to clean and sanitize the unit each day after use.


1. With the machine off, unplug the unit to clean it after use.
2. Make sure to clean all racks/pans in order to sanitize them before each use.
3. Clean the outside of the unit with a soft cloth, dampened with soap and hot water.
4. Wipe the stainless steel parts with a clean cloth and cleaner designed for stainless steel, such as Gold Medal Watchdog Stainless Cleaner (Item No. 2088).
DO NOT use oven cleaners or abrasive materials as they will damage parts of the machine.
5. Ammonia cleaners will damage the plastic panels/doors. Use only non-ammonia cleaners, such as Gold Medal Watchdog Glass Cleaner (Item No. 2588).





MAINTENANCE INSTRUCTIONS

	 DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing.</p> <p style="text-align: right; font-size: small;">008_010914</p>

	 DANGER
	<p>Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.</p> <p style="text-align: right; font-size: small;">014_010914</p>

	 WARNING
	<p>No user serviceable parts inside. Refer servicing to qualified service personnel.</p> <p style="text-align: right; font-size: small;">011_010914</p>

	 CAUTION
	<p>THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.</p> <p style="text-align: right; font-size: small;">027_010914</p>



ORDERING SPARE PARTS

1. Identify the needed part by checking it against the photos, illustrations, and/or parts list.
2. Use only approved replacement parts when servicing this unit.
3. When ordering, please include part number, part name, and quantity needed.
4. Please include your model number, serial number, and date of manufacture (located on the machine nameplate/data plate) with your order.
5. Address all parts orders to:

 
Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

Or, place orders by phone or online:

Phone: (800) 543-0862
(513) 769-7676
Fax: (800) 542-1496
(513) 769-8500
E-mail: info@gmpopcorn.com
Web Page: gmpopcorn.com



Cabinet Exterior – Parts Breakdown

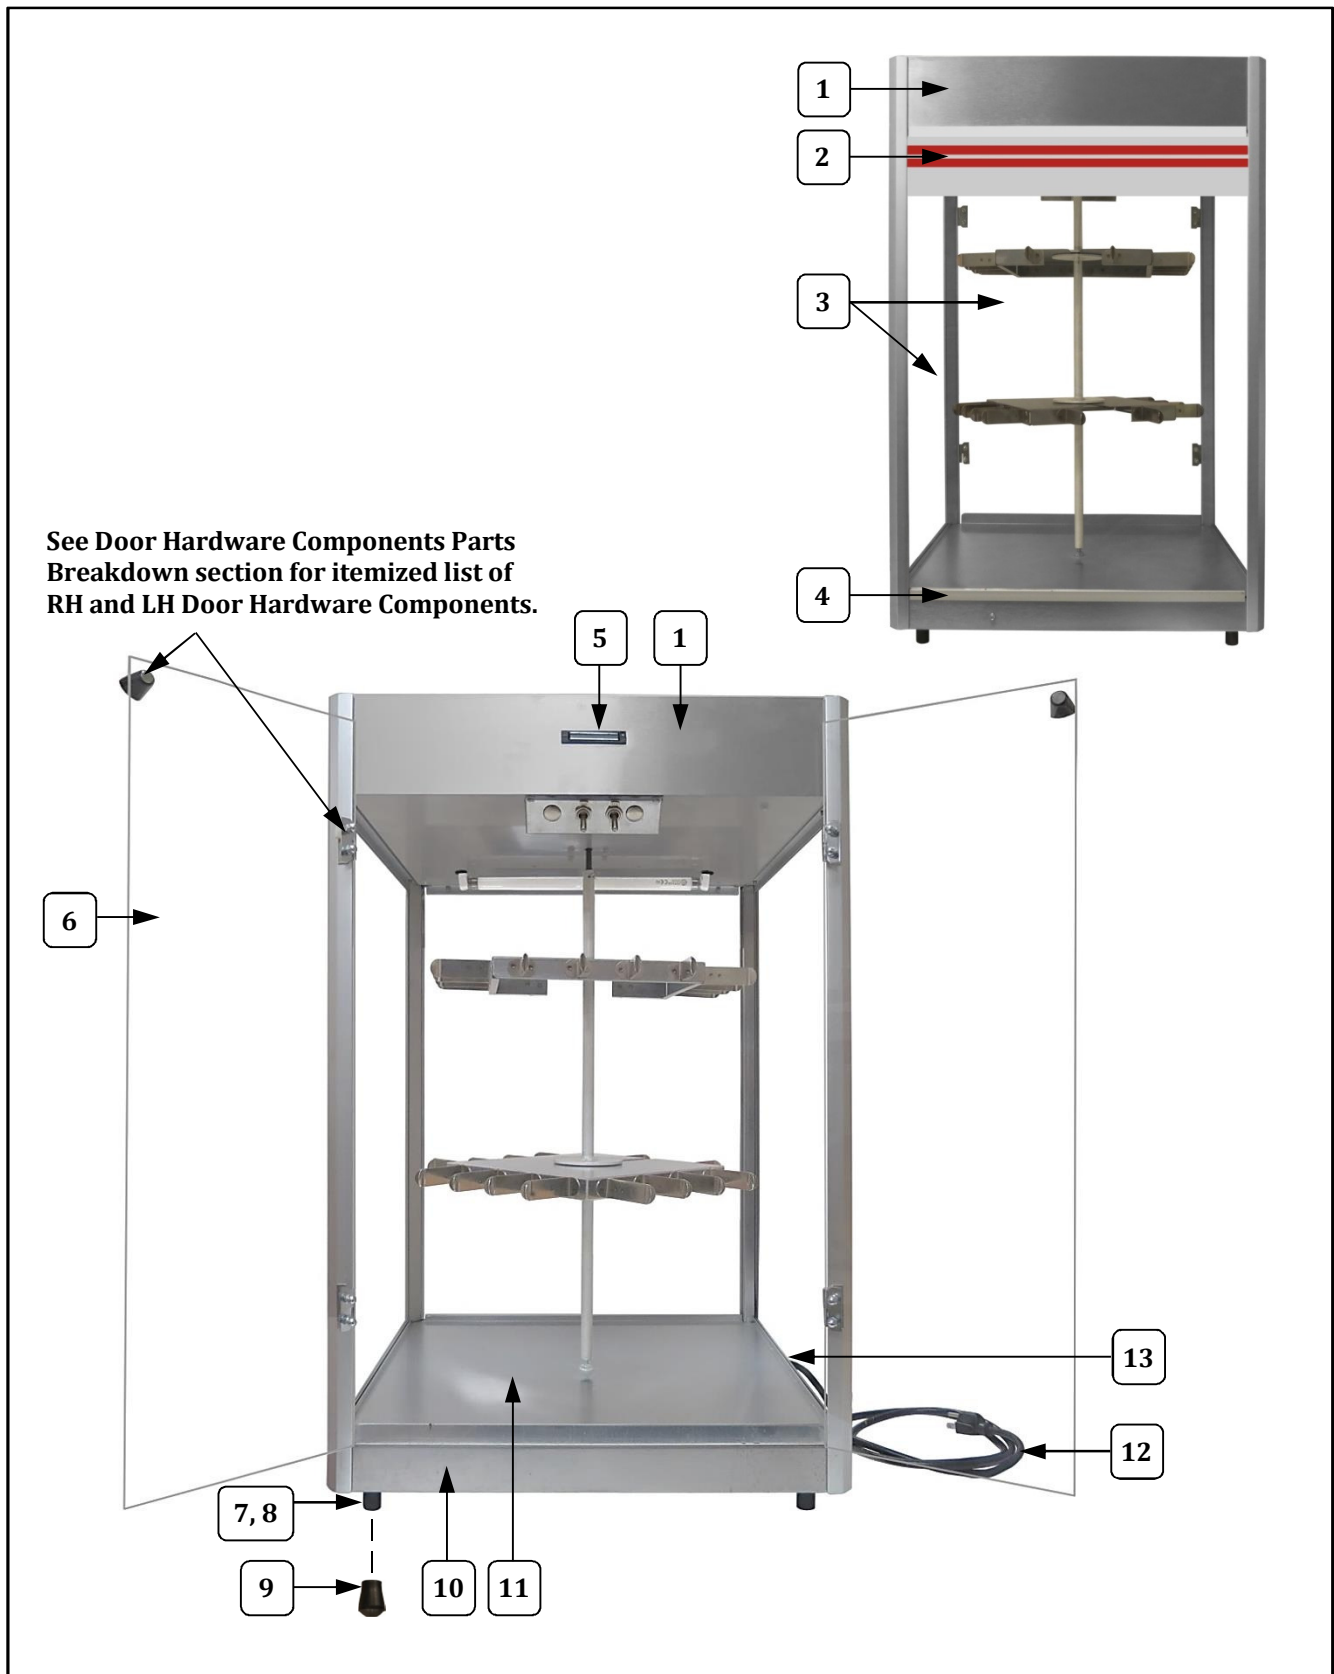




Cabinet Exterior – Parts List

Item	Part Description	Part No.
		5535
1	TOP PAN	89062
2	SILVER CHROME MYLAR DECAL	41297
3	PLEXIGLASS Panel (3 panels required – one on front and one on each side of unit.)	49058
4	FRONT EXTRUSION (6 required – two on front and two on each side of unit).	49004
5	MAGNETIC CATCH	47561
6	PLEXIGLASS DOOR	13064
7	GLIDE	47328
8	SCREW, 10-24 X 3/4 HXHD	41314
9	CRUTCH TIP BLACK 70 DURO	49123
10	BOTTOM PAN	89063
11	DRIP PAN	89067
12	LEAD-IN CORD 15 AMP PLUG	22038
13	STRAIN RELIEF (for Lead in Cord)	76026



 Door Hardware Components – Parts Breakdown

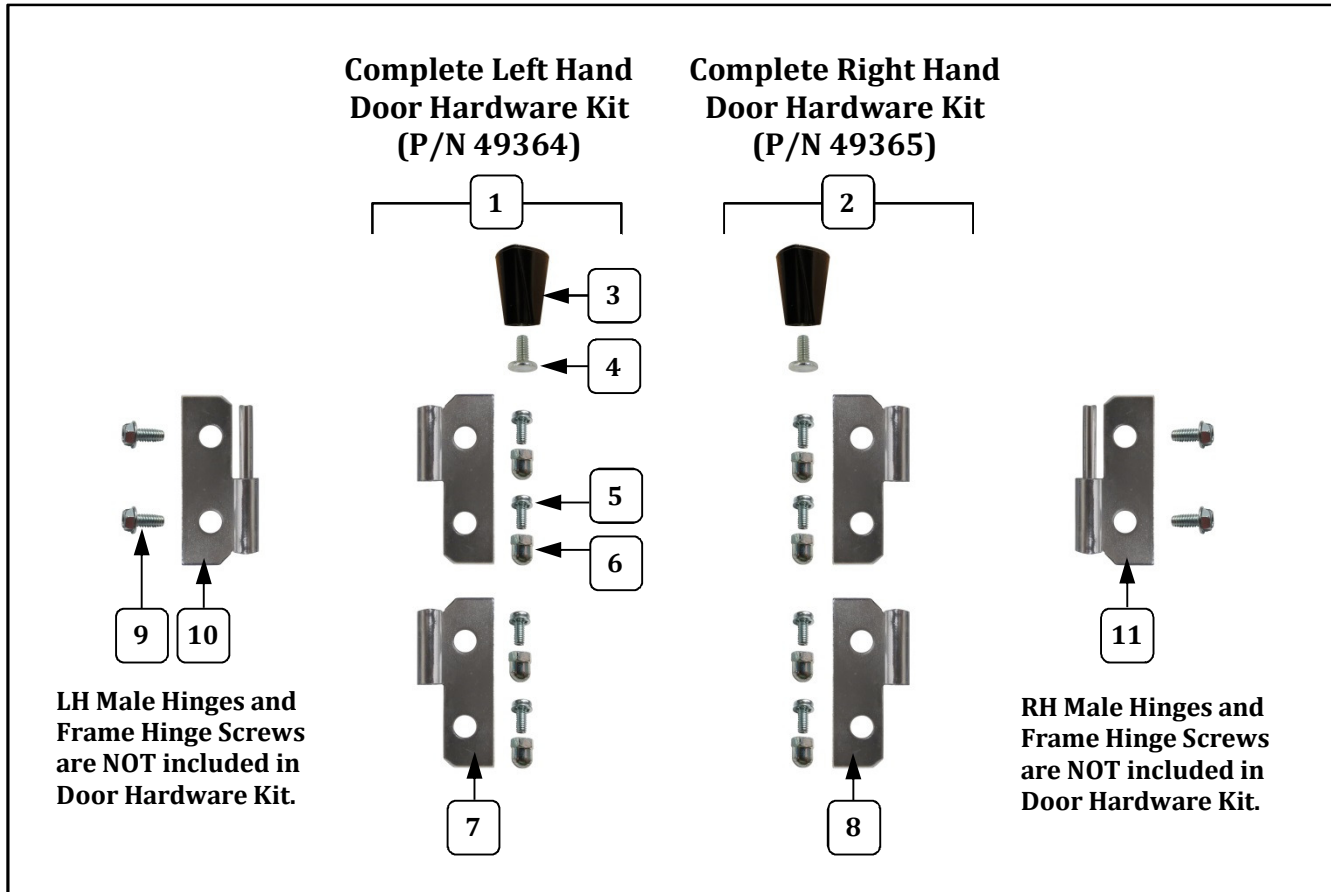

Item	Part Description	Part No.
		5535
1	LH POPPER DOOR HARDWARE Kit (Complete Kit includes items 3, 4, 5, 6 and 7)	49364
2	RH POPPER DOOR HARDWARE Kit (Complete Kit includes items 3, 4, 5, 6 and 8)	49635
3	KNOB LID LIFT	47120
4	TEE BOLT	75267
5	8-32 X 3/8 PAN HD PH SCREW	74141
6	8-32 ACORN NUT	47702
7	LH FEMALE HINGE	49138
8	RH FEMALE HINGE	49139
Items below NOT included in a Door Hardware Kit (order separately)		
9	8-32 X 3/8 SLT. HWH M/S (Frame hinge screws to attach male hinges to corner posts.)	42044
10	LH MALE HINGE	49141
11	RH MALE HINGE	49140




Cabinet Interior – Parts Breakdown



Item	Part Description	Part No.
		5535
1	P-60 SWITCH BOX	49099
2	SPST TOGGLE SWITCH	47201
3	1/2" DIA HOLE PLUG	45395
4	HITCH PIN	87130
5	CLIP PAN ASSEMBLY	89427
6	SHAFT ASSEMBLY	89070
7	1/4-20 X 1 HX HD	12185
8	1/4-20 SERRATED NUT	46311
9	8 WATT FLUORESCENT TUBE	75022
10	FLUORESCENT TUBE HOLDER	75028
11	6-32 X 7/8 PHIL PAN M/S	79290
12	6-32 M/S NUT	14221



 Cabinet Interior – Parts Breakdown

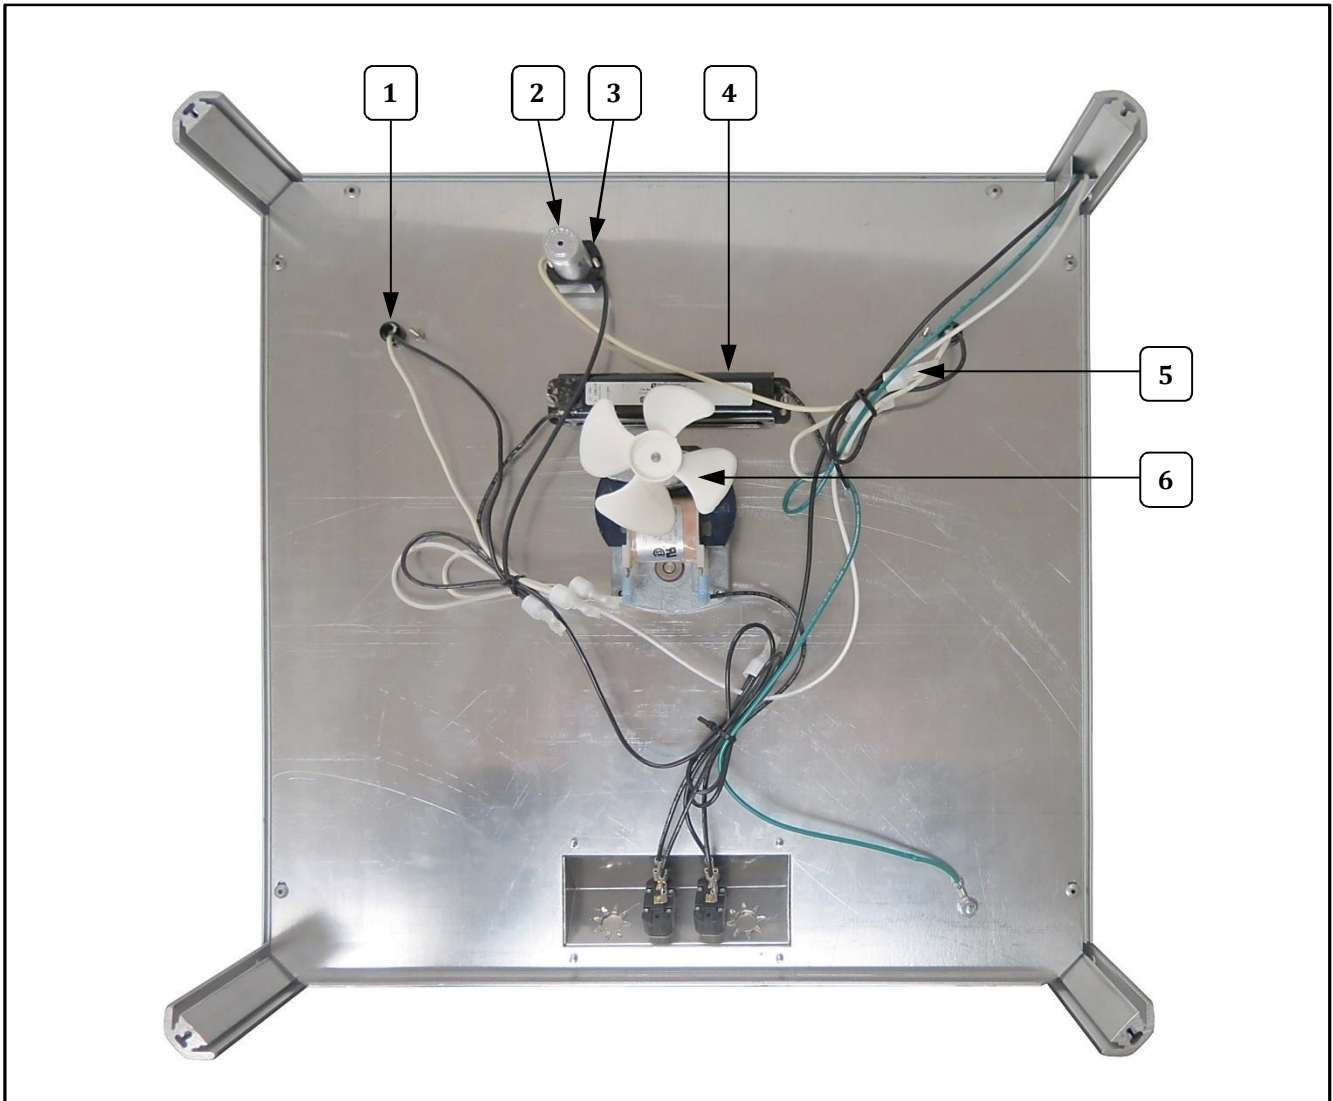


Item	Part Description	Part No.
		5535
1	.500 IN SNAP BUSHING	47236
2	FS-5 STARTER	75027
3	STARTER SOCKET	75025
4	8 WATT F-68 BALLAST	75024
5	DEAD END SPLICE	49133
6	120 VOLT DRIVE MOTOR WITH FAN	87262



Wiring Diagram

 Model No. 5535

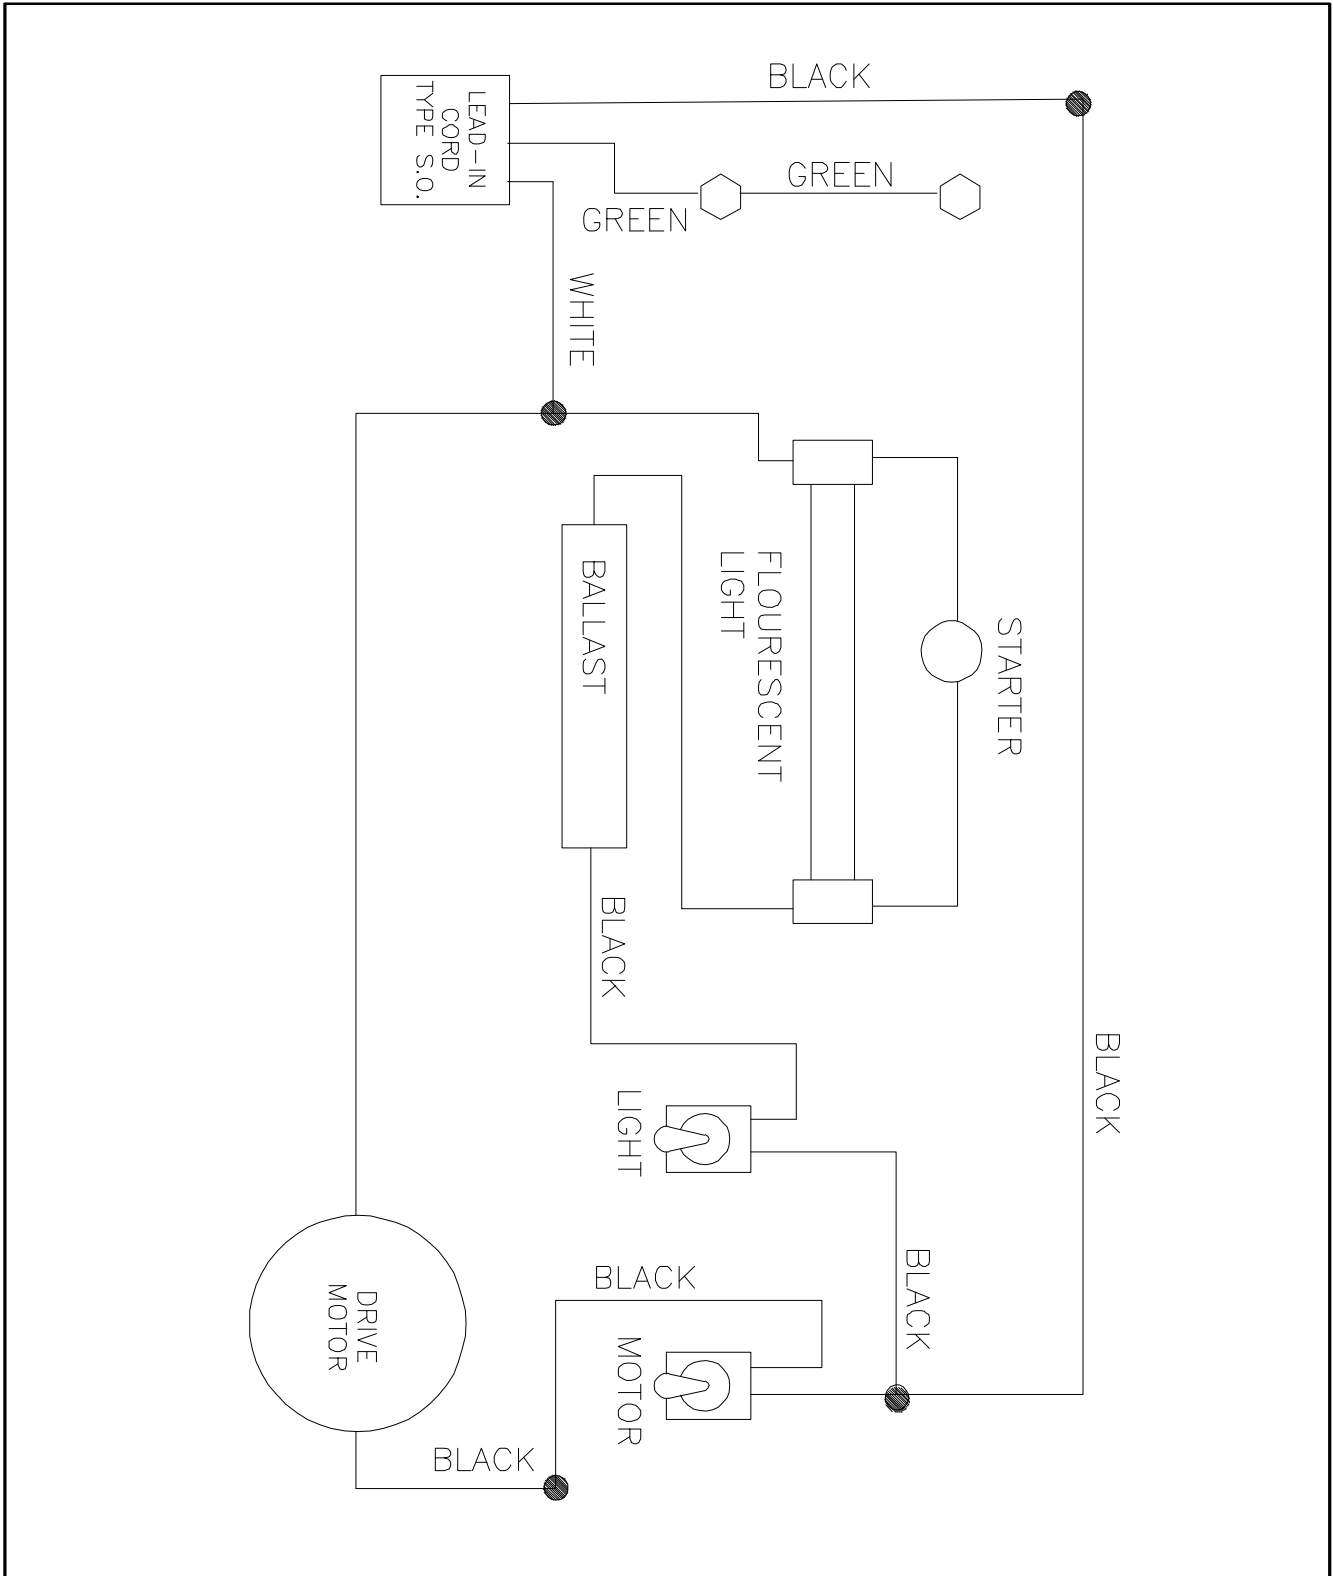



WARRANTY

Gold Medal Products Co. warrants to the original purchaser each item of its manufacture to be free of defects in workmanship and material under normal use and service. Gold Medal Products Co.'s obligation under this warranty is limited solely to repairing or replacing parts, f.o.b. Cincinnati, Ohio, which in its judgment are defective in workmanship or material and which are returned, freight prepaid, to its Cincinnati, Ohio factory or other designated point. Except for "Perishable Parts" on specific machines, the above warranty applies for a period of two (2) years from the date of original sale to the original purchaser of equipment when recommended operating instructions and maintenance procedures have been followed. These are packed with the machine. Parts warranty is two (2) years, labor is six (6) months.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. In no event shall Gold Medal Products Co. be liable for special, incidental or consequential damages. No claim under this warranty will be honored if the equipment covered has been misused, neglected, damaged in transit, or has been tampered with or changed in any way. No claim under this warranty shall be honored in the event that components in the unit at the time of the claim were not supplied or approved by Gold Medal Products Co. This warranty is effective only when electrical items have been properly attached to city utility lines only at proper voltages. This warranty is not transferable without the written consent of Gold Medal Products Co.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS CO., or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS CO. AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL[®] PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

gmpopcorn.com

Phone: (800) 543-0862 Fax: (800) 542-1496
(513) 769-7676 (513) 769-8500