



Chop Plate
HL26130ABWA
D 13 1/4" H 1 1/4"



Rectangle Platter
HL18110ABWA
D 14 1/4" H 6 3/4"



Salad/Pasta Bowl
HL20480ABWA
D 8 1/2" H 3" (54 oz)
HL20470ABWA
D 7 3/8" H 2 1/2" (30 oz)



Onion Soup Bowl (Body Only)
HL4760BBWA
D 4 7/8" H 2 5/8" (12 oz)
Cover Only
HL4760CBWA



Side Handle Soup
HL11920ABWA
L 4 3/4" H 2 1/2" (10 oz)



Side Handle Soup
HL6430ABWA
L 7 1/8" W 5 1/4" H 2 3/8" (16 oz)



3 Compartment Dish
HL19010ABWA D 9"
Scarlet 3 Compartment Dish
HL31901326 D 9"



Oval Jelly/Butter Dish
HL9170ABWA
L 3 1/2" W 3 1/8" H 1 1/4" (1 1/2 oz)



Deep Oval Baker
HL7060ABWA
L 6" W 4 1/4" (11 oz)



Round Soufflé/
Crème Brûlée
HL8640ABWA
D 5 1/4" H 1 1/8" (8 oz)
HL8630ABWA
D 4 1/2" H 1 1/4" (5 oz)



 
Oval Fluted Soufflé/
Crème Brûlée
HL8530ABWA
L 6" W 4 1/2" (6 1/2 oz)



Oval Rarebit/Au Gratin
HL5280ABWA L 9 1/8" W 4 7/8" (12 oz)
HL5210ABWA L 9 1/4" W 5" (10 oz)
HL5270ABWA L 8 1/4" W 4 1/4" (8 oz)
HL5200ABWA L 8" W 4 3/8" (6 oz)



Round Au Gratin/Shirred Egg
HL4340ABWA
L 6 1/2" H 1 1/8" (12 oz)



Round Au Gratin
HL5130ABWA
L 6 1/4" (10 oz)



Oval Baker
HL570343ABWA
L 6" W 4 1/2" (8 oz)
HL5700ABWA
L 5 1/2" W 4" (6 oz)



Round Casseroles
HL630BBWA
D 4 3/4" H 2 1/4" (9 oz)



Fluted Ramekin
HL834122ABWA D 3 1/4" H 1 3/8" (4 oz)
HL844122ABWA D 3 1/8" H 1 3/8" (3 oz)
HL8340ABWA D 2 7/8" H 1 3/8" (2 3/4 oz)
HL8440ABWA D 2 3/4" H 1 1/8" (2 oz)



Soufflé
HL5000ABWA
D 4 1/2" H 2 1/8" (12 oz)
HL4980ABWA
D 4" H 2" (8 oz)



Flared Ramekin
HL8290ABWA
D 2 1/4" H 1 1/2" (2 oz)
HL8280ABWA
D 2 3/8" H 1 1/4" (1 oz)



Round Ramekin
HL3620ABWA
D 2 7/8" H 1 3/8" (2 1/2 oz)



Round Ramekin/
Cheese Pipkin
HL9150ABWA
D 2 3/8" H 1 1/4" (2 oz)



Mug
HL44780ABWA
D 3 1/2" H 4" (12 oz)



London Teapot
HL820ABWA
L 6 3/4" W 4 3/8" H 3 3/4" (16 oz)



Handled Empire Creamer
HL1950ABWA
L 2 5/8" (3 1/2 oz)



Unhandled Tankard Creamer
HL377122ABWA
L 2 1/2" W 2 1/8" H 2 5/8" (3 oz)
HL376122ABWA
L 2 1/8" W 1 3/4" H 2 1/8" (2 oz)



Sugar Packet Holder
HL7160ABWA
L 3 3/8" W 2 5/8"