



CARE AND USE GUIDE


VACUUM INSULATED STAINLESS STEEL CARAFE

GENERAL CARE

- Before first use, and as soon as possible after each use, rinse all parts with warm, soapy water. Rinse thoroughly with fresh water and allow time to dry. Store with stopper off.
- Contents should not be left in the container for longer than 24 hours. As soon as possible after each and every use, wash all parts with warm, soapy water. Rinse all parts thoroughly with clean water. Allow all parts to dry completely prior to next use or storage.
- DO NOT use abrasive cleaners or scrubbers to clean outside of product since they may dull finish.
- DO NOT use bleach or cleaners containing chlorine on any parts of product.
- HANDWASH ONLY - this product is not dishwasher safe.
- DO NOT immerse or soak in water for prolonged periods of time. Residual liquids, foods, or other contents may become trapped between product components, such as lid parts, container parts, gaskets (flexible band around lid and/or stopper), or straws (if present in the product). Hand washing is recommended to ensure that all parts of the product are thoroughly cleaned.
- For maximum thermal efficiency, preheat or pre-chill the product just prior to use. Fill with hot/cold tap water, attach lid, let stand 5 to 10 minutes and empty water. After filling container with contents, re-cover with lid to increase thermal efficiency. Never use a microwave, conventional oven, or other heat source for this purpose.

PUSH-LEVER LID (IF PRESENT):

1. Remove lid (A) by twisting counterclockwise.
2. Wash all parts separately, then re-assemble. See General Care section above for washing instructions.
 - a. Ensure gaskets (if present) are properly seated to minimize leaking.
3. Fill container with contents. Do not overfill: Leave space for the lid (A) to avoid overflow.
4. Replace lid (A) by twisting clockwise. Depress the push-lever (A1) 2 to 3 times to release pressure.
5. To pour, securely grip handle (B) and press push-lever (A1).
6. Tilt product and pour contents through spout (A2).
7. Bring product to an upright position and release push-lever (A1) to close.

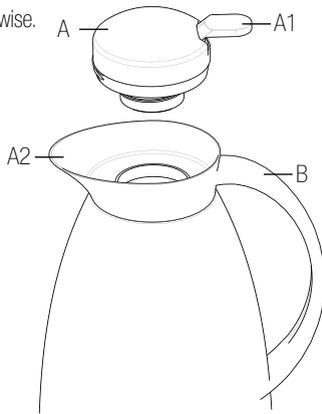

HINGED LID (IF PRESENT):

1. Lift lid (A) by pressing on the hinge lever (A1).
2. Wash all parts. See General Care section above for washing instructions.
3. Before filling, open lid (A) all the way. Fill container with contents.
 - a. Do not overfill: Leave space for the lid (A) to avoid overflow.

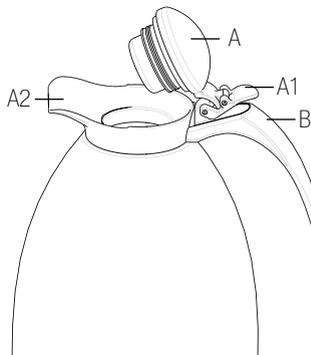


Image for reference only: Actual product may vary.

4. To pour, securely grip handle (B) and press and hold hinge lever (A1). Hinge lever (A1) must be held while pouring to ensure easy flow of contents.
5. Tilt product and pour contents through spout (A2).
6. Bring product to an upright position and release hinge lever (A1).
7. To close, press down on the lid (A) into the lid opening until the lid (A) is secure.
 - a. Hinge lever (A1) may need to be adjusted to better align the lid and lid opening.

CARE AND USE GUIDE

GLASS VACUUM INSULATED CARAFE

EN

GENERAL CARE

- Before first use, and as soon as possible after each use, rinse all parts with warm, soapy water. Rinse thoroughly with fresh water and allow time to dry. Store with stopper off.
- Contents should not be left in the container for longer than 24 hours. As soon as possible after each and every use, wash all parts with warm, soapy water. Rinse all parts thoroughly with clean water. Allow all parts to dry completely prior to next use or storage.
- DO NOT use abrasive cleaners or scrubbers to clean outside of product since they may dull finish.
- DO NOT use bleach or cleaners containing chlorine on any parts of product.
- HANDWASH ONLY - this product is not dishwasher safe.
- DO NOT immerse or soak in water for prolonged periods of time. Residual liquids, foods, or other contents may become trapped between product components, such as lid parts, container parts, gaskets (flexible band around lid and/or stopper), or straws (if present in the product). Hand washing is recommended to ensure that all parts of the product are thoroughly cleaned.
- For maximum thermal efficiency, preheat or pre-chill the product just prior to use. Fill with hot/cold tap water, attach lid, let stand 5 to 10 minutes and empty water. After filling container with contents, re-cover with lid to increase thermal efficiency. Never use a microwave, conventional oven, or other heat source for this purpose.

PUSH-LEVER LID (IF PRESENT):

1. Remove lid (A) by twisting counterclockwise.
2. Wash all parts separately, then re-assemble. See General Care section above for washing instructions.
 - a. Ensure gaskets (if present) are properly seated to minimize leaking.
3. Fill container with contents. Do not overfill: Leave space for the lid (A) to avoid overflow.
4. Replace lid (A) by twisting clockwise. Depress the push-lever (A1) 2 to 3 times to release pressure.
5. To pour, securely grip handle (B) and press push-lever (A1).
6. Tilt product and pour contents through spout (A2).
7. Bring product to an upright position and release push-lever (A1) to close.

