



50% Melamine & 50% Bamboo.

Easy going designs bring a clean look to your dish.

GREENOVATIONS



ECO66SQ
Square Plate
6" sq. x 5/8" h.



ECO99SQ
Square Plate
9" sq. x 3/4" h.



ECO1010SQ
Square Plate
1 sq. x 1" h.



ECO1111SQ
Square Plate
11" sq. x 1" h.



ECO412 - Rectangular Tray
12" x 4 1/4" x 3/4" h.



ECO1258 - Rectangular Platter
12 1/2" x 8 1/4" x 7/8" h.



ECO66R
Round Plate
6" dia. x 5/8" h.



ECO99R
Round Plate
9" dia. x 3/4" h.



ECO1111R
Round Plate
11" dia. x 1" h.



ECO10346RCFP - Full Pocket Board
10 3/4" x 6" x 3/4" h., w/ 4 1/2" Handle



ECO516 - Rectangular Platter
16" x 5 1/4" x 5/8" h.



ECO4515
Round Bowl
4 1/2" dia. x 1 1/2" h., 8 oz.



ECO52
Round Bowl
5 3/8" dia. x 2 5/8" h., 18 oz.



ECO72
Round Bowl
7 3/8" dia. x 2 3/4" h., 36 oz.



ECO6552 - Rectangular Bowl
6 1/2" x 5 1/4" x 2" h., 18 oz.



ECO862 - Rectangular Bowl
9 1/4" x 6 1/4" x 2" h., 38 oz.



ECO1015 - Round Bowl
5" dia. x 1 3/4" h., 10 oz.



ECO652
Irregular Bowl
6 1/2" dia. x 2" h., 24 oz.



ECO2418 - Round Bowl
7 1/4" dia. x 1 3/4" h., 24 oz.



ECO102RLID - Bento Box Lid
10 3/4" dia. x 1" h.
(Only Available in Paper Bag)



ECO13RLID - Bento Box Lid
13" dia. x 1" h.
(Only Available in Paper Bag)



ECO93
Round Bowl
9 3/8" dia. x 3" h., 2.25 qt.

ECO102R - Bento Box
10" dia. x 2 1/2" h.
(Only Available in Paper Bag)

ECO13R - Bento Box
13" dia. x 2 1/2" h.
(Only Available in Paper Bag)



- PAPER BAG (PB)
- RATTAN (RT)
- PAPYRUS (PP)
- BLACK (B)