AMTL WAREWASHER | Daily Operation & Cleaning Guide

DAILY OPERATION

SCAN TO WATCH INSTRUCTIONAL VIDEO

hobartcorp.com/amtltraining

1. Place strainer and scrap basket into the dishwasher. Make sure to line up arrows.
2. Close both doors. Push **POWER** button.
3. When fill is complete, the readout will display **READY**.
4. Select the **WASH CYCLE:** 1, 2, 4, 6 minutes on both the upper and lower section.
5. On the lower section select “U” for heavily soiled items. Watch video for more information.
   NOTE: Use lower section control to turn on/off the lower section, be sure to turn this section off when not in use.
6. To load a dishrack, open the door and slide the rack in the machine. Repeat on both sections.
7. Close both doors, the machine will start automatically. The **PLAY** button turns blue, and a progress bar will appear behind both buttons.
8. Once the screen shows a check mark and reads **CYCLE COMPLETED**, the dishrack may be removed. When using “U” cycle be sure the bottom of the screen reads cycle completed to ensure sanitization.
9. To power off machine and drain, hold the **POWER** button down for 5 seconds.




Wash Cycle

Wash | Rinse | Complete

Buttons

Lower Section On/Off: I/O

Sleep/Idle Mode

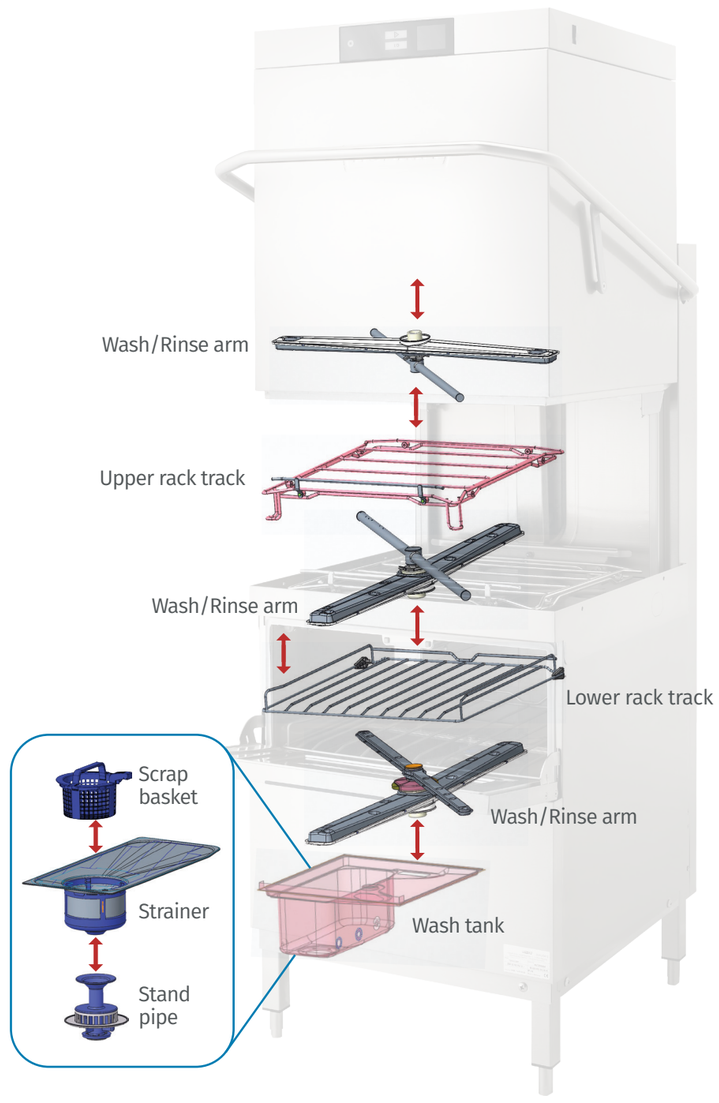

DAILY CLEANING


SCAN TO WATCH DAILY CLEANING VIDEO

hobartcorp.com/amtltraining

1. Spray down the inside of the machine and scrub any hard-to-reach spots with a clean, damp cloth.
2. Remove **upper section wash** and **rinse arms**. Remove both **rack tracks, level divider, strainer,** and **scrap basket** to clean and rinse.
3. Make sure the **upper** and **lower wash** and **rinse arms in both sections**, rotate freely and are clear of any obstructions. In the lower section check fixed upper wash and rinse arms.
4. Re-assemble the machine.
   a. Replace **strainer** and **scrap basket**,
   b. Replace **level divider**
   c. Install **wash** and **rinse arms** (both sections, if removed)
   d. Replace both **rack tracks**
5. Close the door. Hold the **POWER** button for 5 seconds to shut down. Power button lights will turn off when machine is fully drained.
6. After machine is drained, open hood and clean **inside of the machine** with a damp cloth.
7. After cleaning, wipe down **machine exterior** with a damp cloth. Open machine door.

Blue Bold Text = Clean Daily

Level divider



NOTE: If an error code is present on the screen, if available, press the “checkmark” to clear error.

OPERATIONAL TIPS – GET THE MOST OUT OF YOUR DISHWASHER

PRE-SCRAP DISHES

USE COMMERCIAL DISHMACHINE CHEMICALS ONLY

Do not use any other chemicals with the dishmachine. Use PPE for handling.

DELIME THE MACHINE


The unit will alert you when deliming is required. When prompted, follow the instructions on the display.

NOTE: Add delimer based on your chemical providers instruction for an 8 gallon tank.

SCAN TO WATCH DELIME VIDEO

PROPER RACKING

WILL PROVIDE THE BEST CLEANING RESULTS.

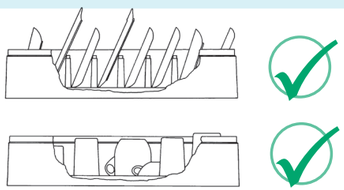

DO NOT OVERLOAD RACK

NOTE: You can load dishes directly on the lower section rack track if needed.

© 2021 Hobart

701 S. Ridge Avenue, Troy, OH 45373 | Phone: (888) 378-1338 | hobartcorp.com | Resource Center: hobartcorp.com/amtltraining

F48626 (05/21)