

Camshelving® Pegboard Storage Accessory Panel Kit

Installation Guide

PANEL KIT PARTS

- 1 ABS Plastic Pegboard,
1/4" (0,63 cm) Thick, 48" (122 cm) Long
- 8 Stainless Steel Post Screws, #10 - 1" (2,54 cm)
- 1 Post Drill Bit 1 1/64" (0,44 cm)
- 1 Left and Right Top Corner Drilling Templates
- 12 Stainless Steel, Double Locking 6" (15,2 cm) Hooks
- 12 Stainless Steel Hook Screws



Scan here for
assembly video.



TOOLS REQUIRED



**CAUTION! SAFETY GLASSES
REQUIRED FOR DRILLING
PILOT HOLES INTO POSTS.**



Clamps
(for 1 person install)



Electric Drill



Phillips No. 2
Screwdriver




Tape
Measure

CAMBRO
TRUSTED FOR GENERATIONS™

www.cambro.com


Step 1

Cut and tape templates to top corners of **TEXTURED** side of pegboard.

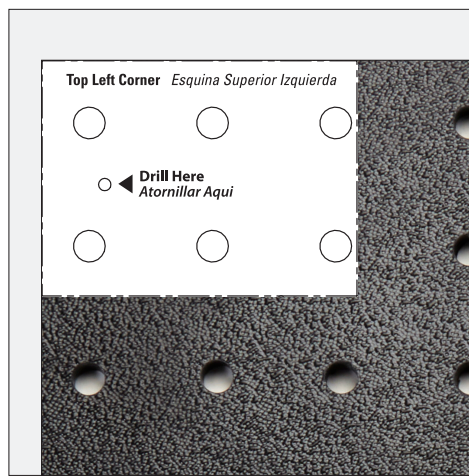


Step 2

Center and hold pegboard in place on posts. **DO NOT** let pegboard overlap post notches on Elements or Basics Plus.

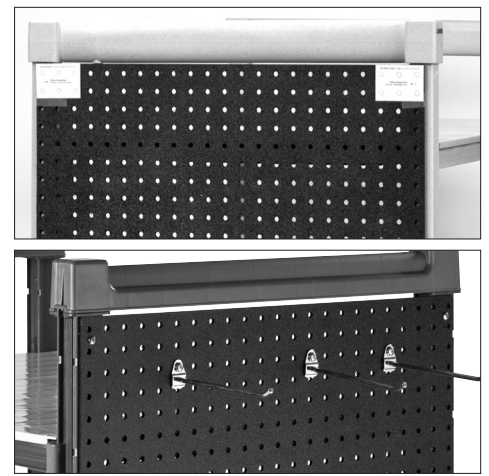

Step 3

Drill pilot holes straight through pegboard and post. **STOP IMMEDIATELY** when drill bit drives / breaks through inside of the post.

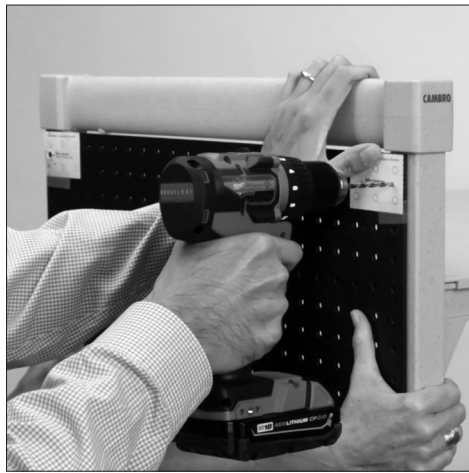


Step 4

Remove paper templates and install post screws.




Step 5

Drill 3 pilot holes down each side, 15" (38 cm) apart.

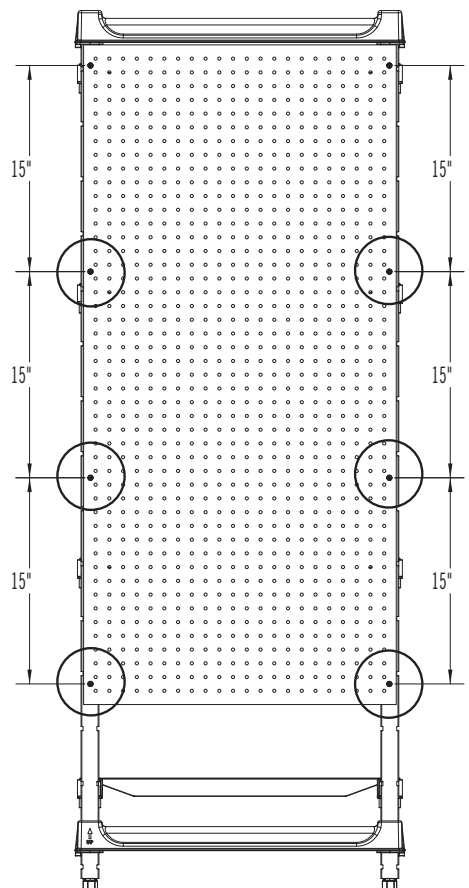


Step 6

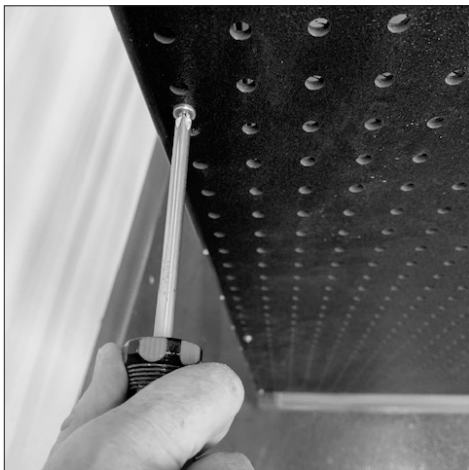


Install post screws.

Step 7a

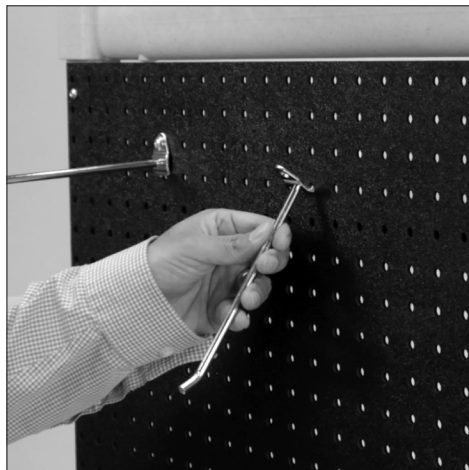

To install hooks, insert bottom hook tab into pegboard.

Step 7b

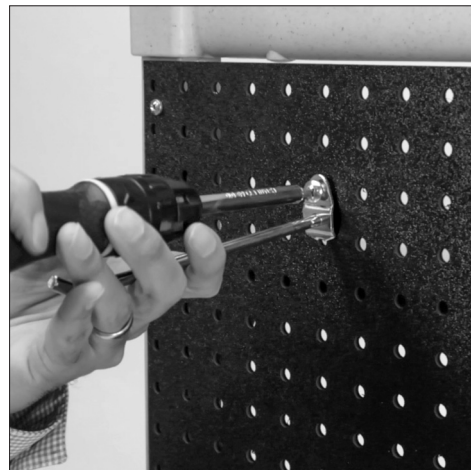

Install hook screw. **DO NOT** overtighten.

CAMBRO
TRUSTED FOR GENERATIONS™


Telephone 714 848 1555 Toll Free 800 854 7631 Customer Service 800 833 3003
© Cambro Manufacturing Company 5801 Skylab Road, Huntington Beach, California 92647-2056
Printed in USA 12/20

UMCSPEG

D122003

Tear here

Left and Right
Top Corner
Drilling Templates

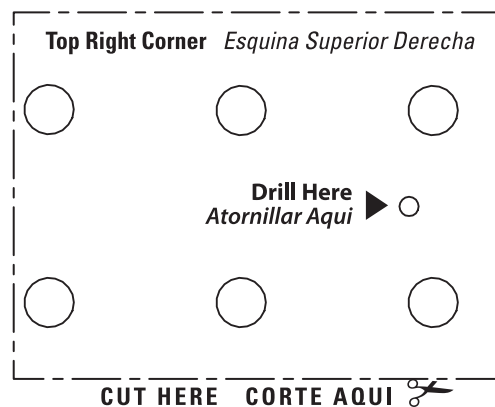

Extra Templates

