


ASSEMBLY INSTRUCTIONS CTS30 | CAFÉ TIME STOOL

CAFÉ TIME STOOL

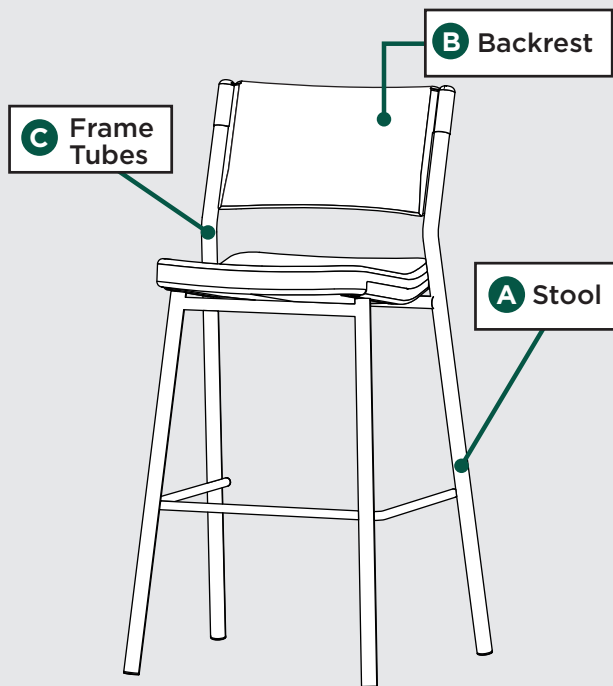

HARDWARE



Phillips
Screw x2

TOOLS NEEDED




ASSEMBLING THE UNIT


- 1 Remove Stool **A** and Backrest **B** from the carton and carefully insert Plastic Protrusions **B1** of Backrest into the Tubes of upper portion of Stool Frame **C**. Gently push the Plastic Protrusions through Frame Tubes until completely inserted.

Do not bang Backrest with a Hammer, but a Rubber Mallet **2** may be used to gently tap the top of the Backrest.

Make sure that the Backrest is completely inserted so that holes of Stool Frame Tubes align with holes on side of Backrest.

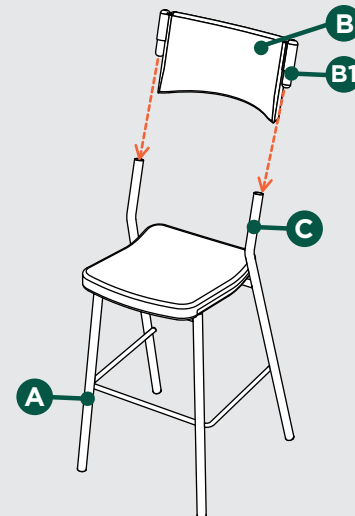

- 2 To complete installation of Backrest, insert provided Screws **1** into the hole on each side of Stool Frame Tube **C** and secure using a power Drill/ Driver with a Phillips Bit **3**.

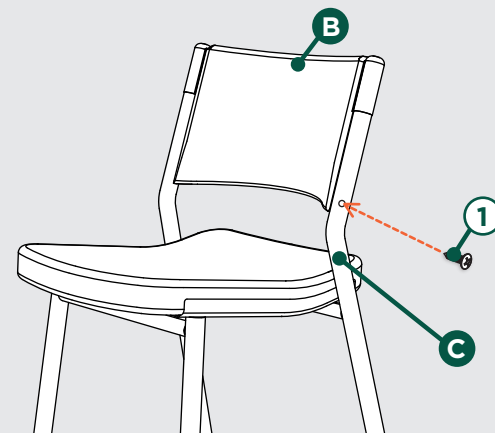

Double check all Screws to be tightened securely before use. Check all Screws periodically. Failure to completely tighten the Screws may result in tipping and possible injury!

Congratulations, your CAFÉ TIME STOOL is now assembled and ready to be used!

Dear Customer, Thank you for your purchase. Although extreme care goes into manufacturing & packaging of this product, mistakes are possible. If you encounter any missing parts or difficulty in assembly, please contact our customer service Toll Free at **1-800-261-4112** or **info@nationalpublicseating.com** for courteous & immediate resolution to your problem.