

CLEANING & DESCALING

SRN110 Descaling Instructions

Ice Making System/Water Reservoir

- 1 Turn machine off
- 2 Remove all ice from the bin
- 3 Remove scoop and fold metal bar flush to bin wall
- 4 Remove back panel by loosening thumb screws
- 5 Locate water valve On/Off knob. Turn the water Off by turning the water valve to the right
- 6 Push tab on front edge of reservoir and remove the cover
- 7 Pull drain hose to drain system and reattach
- 8 Add pre-mixed Scotsman Scale Remover into reservoir until full (Approximately 8 oz.)
- 9 Push and hold both ON/Off and Clean buttons for 5 seconds:
 - Time to Clean light will begin to blink
 - Auger motor only will operate for 10 minutes
 - Compressor will turn on
- 10 Allow compressor to run and continue to add remaining solution maintaining level at 1/2 full while unit makes ice
 - Compressor will shut off after approximately 40 minutes
- 11 Once all 16oz of solution has been used, push reservoir cover down and turn water back on by returning the valve to its original position
- 12 Pull drain hose to drain system and then reattach
- 13 Return reservoir cover and back panel
- 14 Clean bin by mixing some cleaner with hot water and scrub remaining scale
- 15 Rinse bin with hot water
- 16 Push and release On/Off to restart

Due to low level of water draining through the machine, Scotsman recommends regular sanitizing of the bin and drain system




Scan QR Code for Cleaning Video

STEP 4



STEP 5

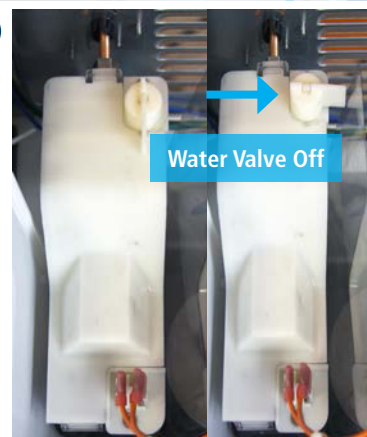

STEP 6



STEP 8



Part#19-0664 Clear One Pre-Mixed Scale Remover with Special Bottle