

DRAIN AND RINSE

- 1 Defrost**

Press RESET, then Press and Hold STANDBY for 3 Seconds
- 2**

When Defrost Completed Press RESET
- 3**

Remove Hopper Agitators, then Press Wash
- 4**

Drain Product then Press RESET
- 5**

Add 8 Liters (2.11 Gallons) Water to Hoppers
- 6**

Scrub Sides & Bottom of Hoppers
- 7**

Press Wash Drain Water Press RESET
- 8**

Repeat Steps 5-7 Until Water is Clear

DISASSEMBLE & CLEAN

- 1** Switch to OFF 
RELEASE PRESSURE IN CYLINDER by Pulling Down on Dispensing Handles OR Pulling up on Prime Plug
- 2**

Disconnect Feed Tube
- 3**

Disassemble Feed Tube
- 4**

Turn & Disconnect Air Pump
- 5**

Turn & Disconnect Suction Tube
- 6**

Disassemble Air Pump
- 7**

Remove Dispensing Door Nuts (Diagonally)
- 8**

Remove Dispensing Door Assembly
- 9**

Remove Door Gaskets & Beater Guides
- 10**

Remove Prime Plugs
- 11**

Remove Handle Pin
- 12**

Remove Dispensing Handles & Draw Valves
- 13**

Remove O-Rings from Draw Valves & Prime Plugs
- 14**

Remove Star Caps
- 15**

Remove Beater Assembly
Option A: Helix Beater V3
- 16**

Remove Beater Assembly
Option B: Helix Beater V5
- 17**

Remove Seal
- 18**

Remove Blades
- 19**

Remove and Clean Internal Drip Tray
- 20**

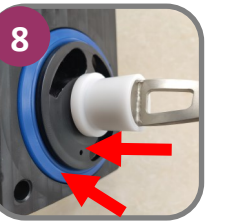
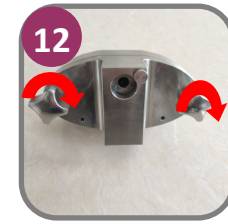
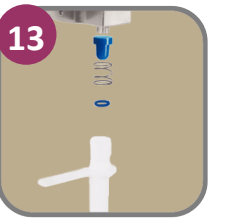
Scrub Cylinders w/ Large Brush
- 21**

Scrub Hopper Feed Hole & Agitator
- 22**

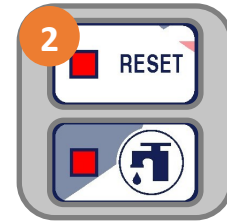
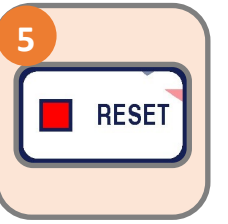
Scrub Prime Plug Ports w/ Brush
- 23**

Wash All Parts Thoroughly

ASSEMBLE

 Lubricate and Install End of Seal	 Install Beater Assembly, Rotate to Lock in Place	 Install Beater Blades	 Lubricate and Install End of Seal	 Install Beater Assembly, Rotate to Lock in Place	 Install & Lubricate Draw Valves & Prime Seals	 Install Draw Valves	 Install Dispensing Handles
Option A: Helix Beater V3		Option B: Helix Beater V5					
 Install Handle Retention Pin & Nut	 Install Prime Plugs	 Install Star Caps	 Install Door Gaskets and Beater Guides	 Install Dispensing Door Assembly	 Install Dispensing Door Nuts (Diagonally)	 Install Gears & Seal Lubricate Seal Lightly	 Install Pump Cover & Hand Nuts
 Install Suction Tube with Spring and Plug	 Install Air Pump Assembly (DO NOT INSTALL FEED TUBE)	 Lubricate & Install Hopper Agitators	 Install Internal & Front Drip Tray				

SANITIZE AND ADD PRODUCT

 Mix 8 Liters (2.11 Gallons) Sanitizer Solution, Pour in Hopper	 Press RESET then Press WASH	 Wait 5 to 10 Minutes	 Drain Sanitizer Solution				
 Press RESET	 Add 1 Liter (0.26 Gallons) Product & Purge Sanitizer	 Pour in Remaining Product into Hoppers	 Open Prime Plug Until Product Flows Out from Bottom Prime Port	 Press WASH to Prime Air Pump, Make Sure Product Pumps Out Strong, then Press RESET	 Assemble, Sanitize & Install Feed Tube	 Install Hopper Lids	 Press FREEZE